## **Contents**

Preface	1
Introduction	
The Owner's Handbook	1
Status at Time of Printing	1
Symbols Used	2
Vehicle Identification Information	3
Vehicle Identification	3
Vehicle Identification Label	4
Instructions for Use of Hybrid Vehicle	5
Effects of Ambient Temperature	5
Instructions for High Voltage Battery Pack Recycling	
Equalisation Charging	6
Intelligent Charging	6
High Voltage System	
In The Event of an Accident	9
Instruments and Controls	11
Instrument Pack	12
Message Centre	15

Warning Message	16
Warning Lights and Indicators	19
Lights and Switches	32
Master Light Switch	32
Headlamp Levelling Manual Adjustment	34
Direction Indicator/Master Lighting Switch	35
Smart Main Beam System	36
Fog Lamp Switch	38
Hazard Warning Lamps	38
Wipers and Washers	39
Front Windscreen Wiper Controls	39
Rear Windscreen Wiper Controls	41
Steering System	43
Steering Wheel Position Adjustment	43
Electric Power Steering	
Horn	45
Rearview Mirrors	46
Exterior Door Mirrors	46
Automatic Anti-dazzle Interior Rearview Mirror	48

Sunvisor	. 50
Windows	. 51
Power Operated Window Switch	.51
Window Operation	
Sunroof *	. 54
Instructions	.54
Sunroof Operation	.55
Interior Light	. 60
Front Interior Lamp	.60
Rear Interior Lamp *	
Ambient Lamps *	.61
Power Socket	. 62
Storage Devices	. 64
Instructions	.64
Glove Box	.64
Storage Box - Driver Side	.65
Centre Console Armrest Box	.65
Cup Holder	. 66
Centre Console Cup Holder	.66

Rear Armrest and Rear Cup Holder	66
Roof Luggage Rack *	67
Maximum Authorised Load for the Roof	
Periodical Check	67
2 Air Conditioning and Audio Systems	69
Ventilation	70
A/C Filter	71
Vents	71
A/C Control Panel	73
Control Panel	73
A/C Control Shortcut Key	73
Heated Rear Window	73
Defrost/Demist	73
Automatic Temperature Control Interface *	75
Control Interface	75
System On/Off	76
Cooling On/Off	76
Air Circulation Mode	76

Temperature Zone control	76
Temperature Control	76
Blower Speed Control	77
Auto Mode	77
Air Distribution Mode	77
Entertainment Player	79
Important Safety Information	79
Cautions for Using Screen	80
Other Precautions	80
Basic Operations	80
Bluetooth Phone	86
Entertainment	89
Vehicle-Mobile Phone Interconnection	97
Air Conditioning	98
360° View *	98
Vehicle Settings	98
Settings	98
3 Seats & Restraints	99
Seats	100

100
100
101
103
104
105
105
107
112
113
114
116
116
117
120
121
123
124
125

Important Safety Instructions about Using Child Restraints	125
Child Restraints Groups	
Approved Child Restraint Positions	130
4 Starting & Driving	135
Keys	136
Overview	
Replacing the Battery	137
Child Proof Locks	139
Alarm Systems	140
Power Immobilisation	140
Body Anti-theft System	140
Manual Tailgate *	144
Electric Tailgate *	145
Tailgate Emergency Open	148
Starting and Stopping Power System	149
START/STOP Switch	149
READY Mode	150
Switching the Power System OFF	152

Pedestrian Alert Control System	153
Economical and Environmental Driving	
Running-in	
Environment Protection	
Economic Driving and Maintenance	154
Driving in Special Environment	156
Catalytic Converter	157
Fuel System	
Fuel Requirements	159
Fuel Filler	159
Refueling	161
Vehicle Hybrid Control	162
Crash Outage Control	
Electric Power Management Mode	162
Power Limit of Electrical Appliances	162
Charging Requirements	
Charging Your Vehicle at Home	
Installed Charging Points	
Home Charging Guide	165

Charging and Medical Condition Awareness	165
Charging Port	166
Charging Operation	167
Charging Information	170
Equalisation Charging	172
Charging Times	
Electric Drive Transmission	173
Instructions	173
Gear Shift	173
Vehicle Start-off	175
Driving on Hills	176
Energy Regeneration	176
Electric Power Management Mode	177
Protection Mode	
Brake System	181
Foot Brake	
Hill Descent Control (HDC)	185
Anti-lock Brake System (ABS)	188
Active Rollover Protection (ARP)	

Emergency Braking Hazard Warning Lights Control System (HAZ)	190
Electronic Differential System (XDS)	190
Electronic Parking Brake (EPB)	191
Tyre Pressure Monitoring System (TPMS)	194
Adaptive Cruise Control System *	
Adaptive Cruise Control System Activation	196
Adaptive Cruise Target Speed Adjustment	199
Adaptive Cruise Target Following Distance Adjustment	199
Adaptive Cruise Pause	
Automatic Deactivation of Adaptive Cruise	
Adaptive Cruise Override	
Adaptive Cruise Resume	201
Clear the Speed Memory	201
Special Driving Environments	
Parking Aid System	206
Ultrasonic Sensor Parking Aid	
Parking Camera *	
360 Panoramic Imaging System *	
Rear Driver Assistance System *	210

System Overview	210
Switching the System Functions On/Off	
System Functions	
Driving Assist System	
Description of Front View Camera	
Description of Front Detection Radar	
Speed Assist System (SAS)	
Lane Departure Warning System (LDW)	
Lane Departure Prevention System (LDP)	227
Lane Keeping Assist System (LKA)	231
MG Pilot System	235
Forward Collision Warning System (FCW)	239
Automatic Emergency Braking System	
Load Carrying	245
Load Space	245
Internal Loading	246
General Towing Safety	
5 Emergency Information	249
Hazard Warning Devices	250

Warning Triangle	250
eCall - SOS Emergency Assistance *	
Emergency Starting	254
Vehicle Recovery	257
Towing for Recovery	
Transporter	
Wheel Replacement	260
Spare Wheel and Tool Kit	260
Wheel Replacement	
Fuse Replacement	265
Fuse	265
Luggage Compartment Fuse Box	267
Passenger Compartment Fuse Box	270
Front Compartment Fuse Box	274
Bulb Replacement	278
Bulb Specification	278
Bulb Replacement	
6 Maintenance	285

Maintenance	286
Routine Servicing	286
Bonnet	289
Opening the Bonnet	289
Closing the Bonnet	
Bonnet Open Warning	289
Engine Compartment	291
Engine	
I.5L Turbocharged Engine Oil	
Engine Oil Level Check and Top Up	293
Engine Oil Specification	
Cooling System	295
Coolant Check and Top Up	295
Coolant Specification	296
Brake	297
Brake Pads	297
Brake Fluid Check and Top Up	297
Brake Fluid Specification	
Battery	299

Battery Maintenance	299
Battery Label	300
Battery Replacement	300
High Voltage Battery Pack	301
Precautions and restricted conditions for use of battery	301
Washer	303
Washer Fluid Check and Top Up	303
Washer Nozzles	
Wipers	305
Wiper Blades	305
Replacing Front Windscreen Wiper Blades	306
Replacing Rear Window Wiper Blades	307
Tyres	308
Overview	308
Tyre Check	309
Tyre Wear Indicators	310
Wheel Fitment Rotation	311
Tyre/Snow Chains	312
Cleaning and Vehicle Care	314

External Care	314
Cleaning the Interior	317
7 Technical Data	319
Technical Data Dimensions	320
Weights	322
Major Parameters of Engine	323
Parameters of Drive Motor	324
Recommended Fluids and Capacities	325
Four-Wheel Alignment Parameter Table (Unladen)	326
Wheels and Tyres	326
Tyre Pressure (Cold)	326

### Introduction

### The Owner's Handbook

This handbook describes all of the vehicles and standard equipment specification within the model range. Some of the information therefore, may not apply to your particular car.

Always remember that if you have any queries concerning the operation or specification of your car, your MG Authorised Repairer will be glad to advise you.

The illustrations in the Owner's Handbook are for reference only.

The information presented in this manual may vary slightly depending on vehicle configuration, software version and sales area.

## Status at Time of Printing

MG operates a policy of constant product improvement and therefore reserves the right to change specifications without notice at any time. Whilst every effort is made to ensure complete accuracy of the information in this publication, no liabilities for inaccuracies or the consequences thereof, including loss or damage to property, or injury to persons, can be accepted by the manufacturer or MG Authorised Repairer who supplied the publication, except in respect of personal injury caused by the negligence of the manufacturer or MG Authorised Repairer.

## Symbols Used

The following symbols used within the handbook call your attention to specific types of information.

## Warning



This warning symbol identifies procedures that must be followed precisely, or information that must be considered with great care, in order to reduce the risk of personal injury or serious damage to the car.

### **Important**

### **IMPORTANT**

The statements stated here must be followed strictly, otherwise your car could be damaged.

### Note

Note: This describes helpful information.

This symbol indicates parts described must be disposed of by authorised persons or bodies to protect the environment.

### **Asterisk**

An asterisk (\*) appearing within the text, identifies features or items of equipment that are either optional, or are only fitted to some vehicles in the model range.

### Illustration Information




Identifies components being explained.



Identifies movement of components being explained.

### **Vehicle Identification Information**

### **Vehicle Identification**

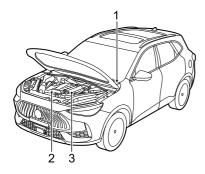

- I Vehicle Identification Number (VIN)
- 2 Engine Number
- 3 Electric Transmission Number

Always quote the Vehicle Identification Number (VIN) when communicating with your MG Authorised Repairer. If the engine or electric drive transmission is involved, it

may be required to provide the identification numbers of these assemblies.

### Vehicle Identification Location

Vehicle Identification Number (VIN)

- On the floor under the driver's seat:
- Stamped on a plate visible through the bottom left hand corner of the windscreen:
- On the vehicle identification plate;

Note: The DLC is located in the driver footwell at the base of the fascia panel on the LH side. The VIN information can be extracted from the vehicle using the approved diagnostic equipment.

### **Engine Number Location**

Stamped on the front right of the cylinder block (View from the front of the engine).

#### Electric Transmission Number

Stamped on the upper surface of the electric transmission housing


### **Vehicle Identification Label**

The vehicle identification label contains the following information:

- · Model /Type;
- · Engine Type;
- · Vehicle Identification Number (VIN);
- · Date;
- · Country;
- · Manufacturer.

### **Location of Vehicle Identification Label**

The identification label is located at the lower side of right pillar B

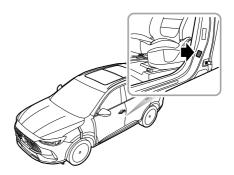

## Instructions for Use of Hybrid Vehicle

## **Effects of Ambient Temperature**

The working performance of the high-voltage battery pack fitted to your vehicle is related to the ambient temperature, this battery powers the vehicle power system and therefore it is recommended that where possible the vehicle should be used within the temperature range of -30°C - 50°C. This will ensure that the vehicle is at the optimum working state, and help extend the service life of high-voltage battery pack. Extremely high or low temperatures will affect the performance of high-voltage battery pack and vehicle.

## Instructions for High Voltage Battery Pack Recycling

The high-voltage battery pack fitted to your vehicle contains several lithium based battery cells, is installed centrally to the motor-vehicle chassis. Arbitrary disposal may cause pollution, hazard and damage to the environment. The high-voltage battery pack MUST be recycled by an MG Authorised Repairer or a professional

approved dismantling agent. Please refer to the following information and requirements.

- ONLY qualified personnel should work with the high voltage system - there is danger of DEATH.
- High voltage safety: the high voltage system fitted to your vehicle features a HV battery containing high voltage components such as lithium battery packs and high voltage wiring harness; DO NOT attempt to dismantle any area of this system, suitably trained professional staff must observe insulation safety protection before working on or near the high voltage system.
- Transportation: The high-voltage battery pack is classed as a Category 9 hazardous material and must be transported by vehicles qualified in transporting Category 9 hazardous materials.
- Storage: All HV components (including batteries) should be stored at room temperature and in a dry environment. They must be kept away from dangerous sources, such as flammable objects, heat and water sources.

 Internal composition: The high-voltage battery pack consists of lithium batteries (pack), PCB, HV and normal electric wiring, metal casing and other components.

It is strongly recommended that the used high-voltage battery pack generated from vehicle scrappage or other reasons should be disposed of by an MG Authorised Repairer. See official Website for details:www.mgmotor.eu.

Note: Instructions: If you decide not to use the recommended MG Authorised Repairer to dispose of your high voltage battery, the responsibility of the consequences of environmental pollution or accidents must be bourne by the owner.

### **Equalisation Charging**

In order to assist in extending the service life of the high voltage battery pack is recommended that an equalisation charge is carried out at regular intervals.

Please see "Equalisation Charging" in the "Starting & Driving" section.

## **Intelligent Charging**

The 12V battery SOC is constantly monitored, when the Start/Stop switch is in the OFF position it is possible, under certain conditions, that the HV battery will automatically charge the 12V battery to ensure the vehicle starts. This function will activate and switch off automatically.

Note: The system will suspend intelligent charging if a fault is present, when starting or the vehicle is being charged by an external device.

Note: The driving range will be reduced after intelligent charging.

Note: The intelligent charging function is suspended when the high voltage battery is in a low SOC.


Note: The intelligent charging function will not 'start the engine'.

## High Voltage System



- The high voltage system used on your vehicle features AC and DC voltages up to 376V. All high voltage components have warning labels attached please observe these warnings and any requirements when operating within or close to these areas.
- ONLY qualified personnel should work on, or with, the high voltage system - there is danger of DEATH.

The high-voltage system component layout is shown below:

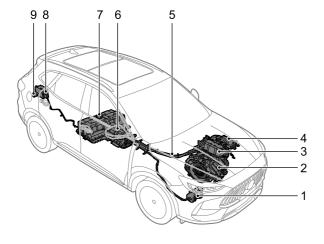

- I Electric A/C Compressor
- 2 Electrical Drive Unit
- 3 Power Electronic Box
- 4 DC/DC Converter
- 5 High Voltage Harness
- 6 High Voltage Battery (ESS)
- 7 Manual Service Disconnect (MSD)
- 8 On Board Charger
- 9 Charging Port

### In The Event of an Accident



- Ensure the vehicle is in P, the parking brake is applied and the vehicle power system is OFF.
- If any cables on the vehicle are exposed, in order to prevent electric shock or even death DO NOT make any contact with any cable.
- If the vehicle catches fire, and the fire is small and slow, a carbon dioxide extinguisher can be used to extinguish the fire, and contact the fire department as soon as possible; if the fire is large and spreading quickly, immediately evacuate the vehicle and contact the fire department immediately.
- If the vehicle is involved in a collision and cannot be re-started, the master safety switch - Manual Service Disconnect (MSD) MUST be disconnected prior to rescue.
- When the vehicle is completely or partially immersed in water, switch off the vehicle


power system and evacuate the car immediately. The master safety switch - Manual Service Disconnect (MSD) MUST be disconnected prior to rescue or as soon as the vehicle is refloated/removed from the water. Observe the water/vehicle for any abnormal signs such as excessive bubbles or noises, this may indicate battery short circuit issues, if no signs are evident there should not be a shock risk from the bodywork and recovery can commence.

- If your car is being recovered by an independent recovery agent, please contact an MG Authorised Repairer for maintenance.
- The vehicle is supplied with a rescue information card (in the glove box). Please show the card to the rescue personnel when they arrive.

- 12 Instrument Pack19 Warning Lights and Indicators
- 32 Lights and Switches
- 39 Wipers and Washers
- 43 Steering System
- 45 Horn
- 46 Rearview Mirrors
- 50 Sunvisor
- 51 Windows
- 54 Sunroof \*
- 60 Interior Light
- 62 Power Socket
- 64 Storage Devices

- 66 Cup Holder
- 67 Roof Luggage Rack \*

### **Instrument Pack**

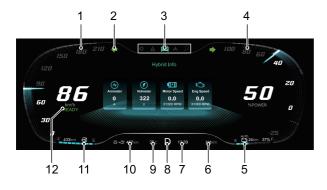

- I Speedometer
- 2 Warning Lights and Indicators
- 3 Message Centre
- 4 Power Meter
- 5 Electricity Meter and Electricity Driving Range to Empty
- 6 Odometer
- 7 Time
- 8 Gear Display
- 9 Ambient Temperature
- 10 Total Range to Empty
- 11 Fuel Gauge and Fuel Driving Range to Empty
- 12 Power System State

### **Speedometer**

Indicates the vehicle speed in km/h.

### Warning Lights and Indicators

Please refer to "Warning Lights and Indicators" in this chapter.

### **Message Centre**

Please refer to "Message Centre" in this chapter.

### **Power Meter**

Indicates the power status of the power drive system as a percentage. If the power is displayed as a positive value, it represents that the power system outputs power to drive the vehicle; If the power is displayed as a negative value, it represents that the power system converts part of the kinetic energy into electrical energy.

## Electricity Meter and Electricity Driving Range to Empty

Displays the current level of high voltage battery charge as a percentage and the remaining range of the vehicle before the high voltage battery becomes flat.

The high-voltage battery pack low battery warning lamp will illuminate when the high voltage battery charge is low. If the voltage continues to drop, this lamp will flash.

The instrument pack will display the selected power management mode. Please refer to "Electric Power Management Mode" in "Starting & Driving" chapter for more information about the power management mode.

### Odometer

Displays the total distance the vehicle has travelled.

### Time

Displays the current time.

## **Gear Display**

Displays the shift lever position of the current electric drive transmission. Please refer to "Electric Drive Transmission" in "Starting & Driving" chapter for more information.

If 'EP' is displayed, it indicates a serious functional failure with the gear shift system. In this case, please contact an MG Authorised Repairer immediately.

## **Ambient Temperature**

Displays the current ambient temperature.

### Total Range to Empty

Displays the remaining distance the vehicle can travel before the fuel in the fuel tank and the high-voltage battery pack run out.

## Fuel Gauge and Fuel Driving Range to Empty

Indicates the quantity of fuel in the fuel tank by the number of segments illuminated, and also displays the remaining distance you can travel before the fuel tank becomes empty.

The low fuel warning lamp will illuminate yellow or flash when the fuel remaining in the fuel tank is low.

#### **IMPORTANT**

If the low fuel warning lamp illuminates, please refuel as early as possible.

The arrow to the left of low fuel warning lamp indicates that the fuel filler is located at the left side of the vehicle.

### **Power System State**

READY indicates that the power system is ready for driving.

POWER OFF indicates that the power system is in the OFF state.

## **Message Centre**


With the START/STOP Switch in the ON/READY position, the message centre can be selected as follows:



- Press the UP/DOWN/LEFT/RIGHT button in the RH steering wheel multifunction switch pack, this will shift between the display options.
- Press the UP/DOWN button in the RH steering wheel multifunction switch pack to scroll through the options and make any changes.

 Press the OK button in the RH steering wheel multifunction switch pack to confirm your option selection or long press the OK button to make any resets.

The message centre contains the following information:

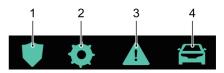

- I Active Safety
- 2 Setting
- 3 Warning Information
- 4 Trip Computer

## **Active Safety**

Displays the active safety information of the vehicle.

For more information, please refer to "Adaptive Cruise Control System" and "Driving Assist System" in "Starting & Driving" section.

### Setting

### Brightness

Displays the current brightness level of the instruments and switches, this can be adjusted. There are 3 levels in total.

### OS (Overspeed) Threshold

You can set the value of overspeed threshold.

Next Service

Displays the next service information of the car.

### Warning Information

Displays the warning information or important notes that are currently relevant to the vehicle.

### **Trip Computer**

The trip computer function contains the following:

- · Hybrid Power Energy Flow Interface
- Current Journey: displays the range, duration, average speed and average consumption since start up. These values will be reset after a period of power off. It can

- also be reset by long pressing the "OK" button in the RH steering wheel multifunction switch pack.
- Accumulated Total: displays the range, duration, average speed and average consumption since reset.lt can be reset by long pressing the "OK" button in the RH steering wheel multifunction switch pack.
- TPMS Monitor: Displays the current tyre pressures and temperatures.
- I2V Battery Voltage: displays the I2V Battery Voltage.
- Hybrid Info: displays the current operation state of the vehicle, including the engine speed, motor speed, voltmeter and ammeter.

### Warning Message

Warning messages and prompts are displayed in the information message centre in the instrument pack. Any communications are displayed in 'pop up' messages, these can be divided into the following categories:

- · Operating Instruction
- System State Instruction
- · System Malfunction Alert

Please follow the text prompts or refer to the sections related to the control system for the failure causes and appropriate solutions.

When the following warning information appears, please stop the vehicle as soon as safety permits, shut down the engine and contact an MG Authorised Repairer for service immediately:

- · Engine Coolant Temperature High
- · Check Engine
- Low Oil Pressure
- Brake Fault
- · EPS Assistance Failure
- ESCL Fault
- Motor Fault
- DANGER! Evacuate Vehicle Safely!

When the following warning information appears, please contact an MG Authorised Repairer for service as soon as possible:

- · Engine Fault
- 12V Battery Charging System Fault
- Ignition System Fault
- Start Stop Button Fault

- Passive Entry Fault
- ABS Fault
- Stability Control Fault
- · Traction Control Fault
- · EPB System Fault
- Park Brake Force Not Enough
- · Autohold Fault
- Hill Descent Control Fault
- EPS Performance Reduced
- · Steering Angle Fault
- · Steering Angle Uncalibrated
- · Vacuum System Fault
- · Fuel Sensor Fault
- Airbag Fault
- Power Tailgate System Fault
- · TPMS Fault
- Park Assist System Fault
- · Rear Drive Assist System Fault
- Front Camera System Fault
- Front Camera Calibration Failed
- RADAR Calibration Failed

- Lane Keep Assist System Fault
- · ACC System Fault
- Auto Emergency Braking System Fault
- · Pedestrian Auto Emergency Braking Fault
- · Forward Collision System Fault
- · Manual Speed Assist Fault
- Intelligent Speed Assist Fault
- · MG Pilot System Fault
- eCall System Fault
- · eCall System Failure
- · Pedestrian Alert System Fault
- DCDC Charge Fault
- · Please Service the Refueling System
- HV Battery Fault
- · Vehicle Control System Fault
- · Fault, Vehicle cannot start again after power off
- Engine Fault, Pay Attention to SOC
- · Gearbox fault, Rshifter is not supported
- · Power is limit, Please repair the Vehicle

## Warning Lights and Indicators

Some warning lamps illuminate or flash accompanied by a warning tone. Certain warning lamps will be accompanied by a momentary warning symbol and text message displayed in the information centre in the instrument pack.

### Main Beam Indicator - Blue

This indicator illuminates when the headlamp high beam is turned on.

### Auto Main Beam Indicator - Green

The indicator illuminates when the auto main beam function is enabled.

## Dipped Beam Indicator - Green \*

This indicator illuminates when the headlamp dipped beam is turned on.

### Side Lamp Indicator - Green



The indicator illuminates when the side lamps

are on.

### Rear Fog Lamp Indicator - Yellow

The indicator illuminates when the rear fog lamps are on.

### **Direction Indicator - Green**

The left and right direction indicator lamps are represented by directional arrows that are located at the top of the instrument pack. When the turning signal lamp flashes, the direction indicator lamp on the corresponding side also flashes. If the hazard warning lamps are operated, both direction indicator lamps will flash together. If either direction indicator lamp in the instrument pack flashes very rapidly, it indicates that the turning signal light on the corresponding side has failed.

Note: Failure of a side repeater lamp will have no effect on the flash frequency of direction indicator lamp.

### **Engine Coolant Temperature Warning - Red**

When the engine coolant temperature warning lamp illuminates red, it indicates that the coolant temperature is high. If the engine coolant temperature continues to rise, the engine coolant temperature warning lamp will flash.

High engine coolant temperature could result in severe damage. Stop the vehicle and switch off the engine as soon as safety permits and contact an MG Authorised Repairer immediately.

### **Engine Malfunction Warning - Yellow**

This lamp will illuminate if an engine fault occurs that will effect engine performance during driving. Stop the vehicle and switch off the engine as soon as safety permits and contact an MG Authorised Repairer immediately.

### **Engine Emissions Malfunction Warning - Yellow**

This lamp will illuminate if the engine develops a fault that can effect performance and emissions. Please contact an MG Authorised Repairer as soon as possible.

# 12v Battery Charging System Malfunction Warning - Red

If this lamp illuminates after starting the vehicle, it indicates that the 12v battery charging system has failed. Please contact an MG Authorised Repairer immediately.

In cases of low battery power, the prompt messages will appear in the information centre. In this case, the system will limit or turn off some electrical devices, please start the vehicle to charge the battery.

### Low Oil Pressure Warning - Red

If this lamp illuminates after starting the vehicle, it indicates that the oil pressure is too low, which may result

in severe engine damage. Stop the vehicle as soon as safety permits and SWITCH OFF THE ENGINE IMMEDIATELY. Check the oil level (Refer to "Engine Oil Level Check and Top UP" in "Maintenance" chapter). Contact an MG Authorised Repairer immediately.

## Electric Power Steering (EPS)/ Electric Steering Column Lock (ESCL) Warning - Red/Yellow

The warning lamp is used to indicate electric power assisted steering failure or electronic steering column lock failure

If this lamp illuminates yellow, it indicates the electric power assisted steering system has a general failure and the performance is reduced. Please stop the car as soon as safety permits. If the lamp still illuminates after restarting the vehicle and driving for a short while, please contact an MG Authorised Repairer immediately.

If this lamp illuminates red, it indicates the electric power assisted steering system has a general failure relevant to steering angle sensing. Please contact an MG Authorised Repairer as soon as possible.

If this lamp illuminates red and flashes, it indicates the electric power assisted steering system has a severe failure. Please contact an MG Authorised Repairer immediately.

If the lamp illuminates yellow and continually flashes accompanied with an audible warning, it indicates the electric steering column lock has a failure. Please contact an MG Authorised Repairer as soon as possible. If this lamp extinguishes after flashing for a while, it indicates that the steering wheel is locked, please attempt to rotate the steering wheel to remove any adverse loads.

## Tyre Pressure Monitoring System (TPMS) Warning - Yellow

If this warning lamp illuminates it indicates that a tyre pressure is low, please check the tyre pressures.

If this lamp flashes first and then remains illuminated after a period of time, it indicates the system has detected a fault. Please contact an MG Authorised Repairer as soon as possible.

#### **ABS Malfunction Warning Lamp - Yellow**

This lamp illuminates to indicate an ABS fault.
Please contact an MG Authorised Repairer as soon as possible.

If an ABS failure occurs while driving, the ABS function will be disabled while normal braking will still be available. Please contact an MG Authorised Repairer as soon as possible.

## Hill Descent Control (HDC) ON/Malfunction Warning - Green/Yellow

With the HDC switch pressed, if the lamp illuminates green, it indicates the HDC system has entered the Standby mode. When the lamp flashes green, it indicates that the system is currently under the control of HDC. Press the HDC switch again, the lamp extinguishes, it indicates the HDC function is deactivated.

If the HDC system detects a fault, this lamp illuminates yellow. Please contact an MG Authorised Repairer as soon as possible.

If this lamp illuminates yellow and flashes, it indicates that the brake system has overheated and the system will be disabled.

## Stability Control/Traction Control System Warning Lamp - Yellow

This lamp illuminates to indicate that a fault has been detected in the system. Please contact an MG Authorised Repairer immediately.

If this lamp flashes during driving, it indicates the system is operating to assist the driver.

## Stability Control/Traction Control System OFF Warning Lamp - Yellow

If the stability control/traction control system is switched off manually, this warning lamp will illuminate.

### **Brake System Malfunction Warning Lamp - Red**

If this lamp illuminates, it indicates a fault or issue has been detected in the brake system such as brake fluid loss or electronic braking-force distribution failure.

Please stop the vehicle as soon as safety permits, shut down the engine, check the brake fluid level (refer to "Brake Fluid Check and Top Up" in "Maintenance" section) and contact an MG Authorised Repairer immediately.

#### Seat Belt Unfastened Warning Lamp - Red

If this lamp illuminates or flashes, it indicates that the seat belt for the driver or passenger remains unfastened.

## Airbag Warning Lamp - Red

This lamp illuminates to indicate a fault in the SRS or seat belt failure has been detected. In this case, please stop the vehicle as soon as safety permits, shut down the engine immediately, and contact an MG Authorised Repairer for service at the earliest opportunity. An SRS or seat belt fault may mean the components may not be deployed in the event of an accident.

### Anti-theft System Warning - Red

If no valid key is detected, this lamp illuminates red, please use the correct key or put the smart key at the bottom of the centre console cup holder. For specific position, please refer to "Alternative Starting Procedure" in "Starting & Driving" chapter.

With the START/STOP Switch in the ON/READY position, if the remote key battery is low, this lamp flashes, please replace the battery as soon as possible.

## Electronic Parking Brake (EPB) / Auto Hold Status Indicator - Red/Green

If this lamp illuminates red, it indicates the EPB system is enabled. If this lamp illuminates red and flashes, it indicates that the EPB system has failed. Please contact an MG Authorised Repairer as soon as possible.

When the auto hold system is operating to assist the driver, this lamp illuminates green.

## Electronic Parking Brake (EPB) System Malfunction Warning Lamp - Yellow

If an electronic parking brake system failure is detected or the system is under diagnosis, the lamp will illuminate. Please contact an MG Authorised Repairer as soon as possible.

#### Low Fuel Warning Lamp - Yellow

The warning lamp illuminates yellow when the fuel remaining in the fuel tank is low. If possible, please refuel before the low fuel warning lamp illuminates.

When the fuel level continues to fall, this lamp flashes. When fuel is added to the tank and the fuel level rises above the alert limit, this lamp extinguishes. If it does not extinguish, please contact an MG Authorised Repairer for service as soon as possible.

Note: When driving on steep or rough roads while the fuel level is low, the warning lamp may illuminate.

#### System Fault Messages Indicator - Yellow

This indicator is used to alert the driver to the fact that there is a warning stored in the instrument pack. Please refer to "Instrument Pack" in this section for these failures.

#### Lane Departure Warning System Indicator - Green/Yellow

This lamp will illuminate yellow when the Lane Departure Warning function is enabled, the lamp will extinguish when the function is disabled.

This lamp will illuminate green when the Lane Departure Warning function is activated.

If the Lane Departure Warning System is not able to function normally the lamp will flash yellow and then remain on after a period of time. Please contact an MG Authorised Repairer for service as soon as possible.

For more information, please refer to "Lane Departure Warning System (LDW)" in "Starting & Driving" section.

## Lane Departure Prevention System Indicator - Green/Yellow

This lamp will illuminate yellow when the Lane Departure Prevention function is enabled, the lamp will extinguish when the function is disabled.

This lamp illuminates green when the Lane Departure Prevention function is activated.

If the Lane Departure Prevention System is not able to function normally the lamp will flash yellow and then remain on after a period of time. Please contact an MG Authorised Repairer.

For more information, please refer to "Lane Departure Prevention System (LDP)" in "Starting & Driving" section.

## Lane Keeping Assist System Indicator - Green/Yellow

This lamp will illuminate yellow when the Lane Keeping Assist function is enabled, the lamp will extinguish when the function is disabled.

This lamp illuminates green when the Lane Keeping Assist function is activated.

If the Lane Keeping Assist System is not able to function normally the lamp will flash yellow and then remain on after a period of time. Please contact an MG Authorised Repairer.

For more information, please refer to "Lane Keeping Assist System (LKA)" in "Starting & Driving" section.

#### MG Pilot System Indicator - Green/Yellow

This lamp will illuminate yellow when the MG Pilot function is enabled, the lamp will extinguish when the function is disabled.

This lamp illuminates green when the MG Pilot function is activated.

If the MG Pilot System is not able to function normally the lamp will flash yellow and then remain on after a period of time. Please contact an MG Authorised Repairer as soon as possible.

For more information, please refer to "MG Pilot System" in "Starting & Driving" section.

## Forward Collision Warning System and Automatic Emergency Braking System (FCW/AEB) Indicator - Yellow

This lamp will illuminate yellow when the forward collision warning system or automatic emergency braking system is turned off.

When both of the forward collision warning system and automatic emergency braking system are enabled, if the indicator remains on, it indicates the system is not able to function normally. Please contact an MG Authorised Repairer as soon as possible.

For more information, please refer to "Forward Collision Warning System (FCW)" and "Automatic Emergency Braking System" in "Starting & Driving" section.

## Automatic Emergency Braking System for Pedestrians (AEBP) Indicator - Yellow

This lamp will illuminate yellow when the automatic emergency braking system for pedestrians is turned off

When the system is enabled, if the indicator remains on, it indicates the system is not able to function normally. Please contact an MG Authorised Repairer as soon as possible.

For more information, please refer to "Automatic Emergency Braking System" in "Starting & Driving" section.

## Manual Speed Assist System Indicator - Green/Yellow

This lamp will illuminate yellow when the Manual Speed Assist function is enabled, the lamp will extinguish when the function is disabled. For specific operation, please refer to "Speed Assist System (SAS)" in "Starting & Driving" section. If the current speed of the vehicle is above the maximum value allowed by the system

the vehicle remains in the stand by state and the lamp will illuminate yellow.

This lamp illuminates green when the Manual Speed Assist function is activated.

If the Manual Speed Assist System is not able to function normally the lamp will flash yellow and then extinguish. Please try to reinstate this function. If this function cannot be switched on, please contact an MG Authorised Repairer as soon as possible.

For more information, please refer to "Speed Assist System (SAS)" in "Starting & Driving" section.

## Intelligent Speed Assist System Indicator - Green/Yellow

This lamp will illuminate yellow when the Intelligent Speed Assist function is enabled, the lamp will extinguish when the function is disabled.

This lamp illuminates green when the Intelligent Speed Assist function is activated.

If the Intelligent Speed Assist System is not able to function normally the lamp will flash yellow and then extinguish. Please try to reinstate this function. If this function cannot be switched on, please contact an MG Authorised Repairer as soon as possible.

For more information, please refer to "Speed Assist System (SAS)" in "Starting & Driving" section.

#### **Manual Speed Assist System Speed Indicator**

Assist function is enabled. 'NNN' denotes the current setting value of the speed limit. If there is no speed limit value the lamp will display '—'.

#### Speed Limit Sign Indicator - Red

'NNN' denotes the speed value of speed limit sign currently recognised. If there is no speed limit value available the lamp will display '—'.

When the Intelligent Speed Assist function is activated or SLIF Warning function is enabled, the lamp will flash if the speed limit value is exceeded, please slow down.

## Speed Limit Sign Additional Information Warning Lamp - Red

This lamp will illuminate when the speed limit sign currently recognised has additional information. Please pay attention to it.

## Adaptive Cruise Control System Indicator -

#### Yellow/Green

If the Adaptive Cruise function is enabled, the Adaptive Cruise Control System will enter the standby state, the lamp illuminates yellow.

When the Adaptive Cruise Control System operates, the lamp will illuminate green, this indicates that the Adaptive Cruise Control System is activated.

NNN

## Adaptive Cruise Control System Malfunction Indicator Lamp - Yellow

This lamp will illuminate if an Adaptive Cruise Control System fault is detected. Please contact an MG Authorised Repairer as soon as possible.

#### Rear Drive Assist System Indicator - Yellow

If the rear driver assist sensors are obscured, this lamp illuminates with prompt messages.

When rear drive assist system detects a fault, this lamp illuminates with prompt messages. Please contact an MG Authorised Repairer as soon as possible.

Refer to "Rear Driver Assistance System" in "Starting & Driving" chapter for more information.

#### eCall SOS Indicator - Red/Yellow/Green

If the system is ready and an emergency services call (eCall) is in progress, the indicator illuminates green.

If the system is still capable of sending out a vehicle information message to the call centre, but other eCall capabilities are limited due to a fault in the system, the indicator will illuminate yellow. If the eCall system has failed and not operational, the indicator illuminates red. If the yellow or red indicator is illuminated permanently after system self-test, please contact an MG Authorised Repairer immediately.

#### **READY Indicator - Green**

This lamp is used to indicate that the vehicle is ready for driving.

#### **Charging Status Indicator - Yellow**

This lamp will illuminate when the vehicle is connected to a charge point, it will remain on during charging and extinguish after charging is completed

#### **Charging Connection Indicator - Red**

This lamp will illuminate when the vehicle is connected to a charge point.

## Power System Malfunction Warning - Red/Yellow

If this lamp illuminates yellow, it indicates that the vehicle has detected a fault and power is limited. Please contact an MG Authorised as soon as possible.

If this lamp illuminates red, it indicates that the vehicle has detected a severe fault. Please stop the vehicle as soon as safety permits, turn off the START/STOP Switch and contact an MG Authorised immediately.

#### Motor Overheat Warning - Red

This lamp will illuminate if the motor temperature is too high. Please contact an MG Authorised as soon as possible.

#### Motor Malfunction Warning - Red

If a fault or failure is detected in the motor or the power electronic box of electric drive system, this lamp will illuminate. Please stop the vehicle as soon as safety permits, turn off the START/STOP Switch and contact an MG Authorised immediately.

# High-voltage Battery Pack Low Battery Warning - Yellow

This lamp will illuminate or flash when the high voltage battery charge is low. Where possible please charge the high voltage battery before this lamp enters the flashing stage.

# High-voltage Battery Pack Disconnection Warning - Yellow

When the high-voltage battery pack is connected, this lamp will not illuminate. This lamp will only

illuminate when the high voltage battery is disconnected or isolated.

## High-voltage Battery Pack Malfunction Warning - Red

This lamp will illuminate if a fault is detected or the high voltage battery fails. Please contact an MG Authorised Repairer immediately.


This lamp will flash if the high voltage battery temperature is too high. Please stop the car as soon as safety permits, switch the vehicle power system to the OFF position, and leave the vehicle immediately. Contact an MG Authorised Repairer at the earliest opportunity.

#### **Driving Power Limited Warning - Yellow**



### Lights and Switches

#### Master Light Switch

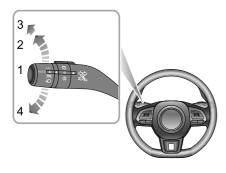

- I AUTO Lamp
- 2 Side Lamps and Switch Backlights
- 3 Headlamp
- 4 Lights Off

#### **AUTO Lamp**

When the START/STOP Switch is in the ACC position, the auto lighting system defaults to the ON position (I). The AUTO lighting system will automatically switch the side lamps and switch illumination on and off according to the intensity of current ambient light.

With the START/STOP Switch in the ON/READY position, the AUTO lighting system will automatically switch the side lamps, switch illumination and dipped beam headlamps on and off according to the intensity of current ambient light.

#### Side Lamps and Switch Backlights

Rotate the master lighting switch to position 2 to operate the side lamps and switch illumination. When only the side lamps are on and the START/STOP Switch is in the ON/READY position, the headlamps will illuminate the daytime running lamps to supplement the light source. With the START/STOP Switch in the OFF position if the lighting switch is in position 2 and the driver's door opened an audible warning will sound to alert the driver, the side lamps will remain on.

#### Headlamp

With the START/STOP Switch in the ON/RUNNING position, rotate the master light switch to position 3 to switch on the dipped beam headlamps, side lamps and switch backlights.

#### **Lights Off**

Rotate the master lighting switch to position 4, this will switch off lamps, releasing the switch will allow it to return to the AUTO switch position.

#### **Daytime Running Lamps**

The daytime running lamps illuminate automatically when the START/STOP Switch is in the ON/READY position. When the dipped headlamps are switched on, the daytime running lamps extinguish automatically

#### Welcome Light

When the car is unlocked, the system will automatically illuminate the dipped beams, side lamps and puddle lamps according to the intensity of the current ambient light.

#### Follow Me Home

After the START/STOP Switch is turned off, pull the lighting lever towards the steering wheel. This will enable the Follow Me Home function, dipped beam headlamps and side lamps will illuminate depending upon the vehicle configuration.

#### Find My Car

After the vehicle has been left in a locked condition for several minutes, pressing the lock button again on the remote key will enable the Find My Car function. This function will identify the car by means of an audible and visual alert. Pressing the Lock button on the remote key again will suspend this operation. Pressing the Unlock button on the remote key will cancel this operation.

### **Headlamp Levelling Manual Adjustment**



Location	Load
2	All the seats occupied plus an evenly distributed load in the boot
3	Driver only, plus an evenly distributed load in the boot

Position 0 is the initial position of the headlamp levelling adjustment switch. The headlamp levelling can be adjusted as per the following table according to the vehicle load.

Location	Load
0	Driver, or driver & front passenger
I	All the seats occupied with no load

#### **Direction Indicator/Master Lighting Switch**



Take care not to dazzle oncoming vehicles when driving using main beam headlamps.



#### **Direction Indicators**

Move the lever down to indicate a LEFT turn (1). Move the lever up to indicate a RIGHT turn (2). The corresponding

GREEN indicator lamp in the instrument pack will flash when the turn signal lamps are working.

Rotating the steering wheel will cancel the indicator operation (small movements of the steering wheel may not operate the self cancelling). To indicate a lane change, move the lever briefly and release, the indicators will flash three times and then cancel.

#### Main/Dipped Beam Headlamps Switching

With the START/STOP Switch in the ON/READY position, the master lighting switch turned to position 3, or the auto function has switched the lights on, push the lever (3) towards the instrument panel to turn the headlamp main beams on. The main beam indicator lamp in the instrument pack will illuminate, press the lever (3) again to switch the headlamps to dipped beam.

#### Main Beam Flash

To briefly flash the main beam on and off, pull the lever (4) towards the steering wheel and then release.

#### Smart Main Beam System



The smart main beam system serves only as an auxiliary function. The driver must check the status of the front lamps, and turn on the front lamps when necessary.

For example: The main beam may not be turned off automatically in the following cases, thus manual switching between the main beam and dipped beam is required:

- The windscreen is dirty, broken or obstructed by other objects blocking the view of the sensor.
- The lamps of other vehicles are missing, damaged, obscured or partially obscured or cannot be detected for some other reasons.
- The lamps of other vehicles are obscured or partially obscured by smoke, fog, snow, water spray or any other conditions that effect visibility.

- When pedestrians, non-motor vehicles and other objects with no obvious light or reflected light are encountered.
- When the headlamps and tail lamps of other vehicles cannot be detected due to the sensor view being impaired due undulating road conditions such as bends, dips or hills.
- When the car is driving on a winding road or mountainous road.

In any of the aforementioned conditions (but not limited to) smart main beam operation may be suspended, it will be necessary to operate the main beam lamps manually.

The smart main beam system uses the front view camera to detect the light intensity of the vehicle ahead. The main beam lamps can be switched on or off automatically by the system when the surroundings are dark and no light detected. The smart beam function can be switched on/off via the infotainment display.

To enable the smart main beam system, the following conditions must met:

- I The master lighting switch must be in the 'Auto' position and the dipped beam lamps switched on via automatic control.
- 2 The vehicle is running and the speed is above 40km/h.
- 3 The rear fog lamps are NOT switched on.

When the smart main beam system is enabled, the auto main beam indicator on the instrument pack illuminates.

The main beam lamps will remain on under automatic control until any of the following conditions occur:

- The system detects the headlamps of approaching vehicles.
- The system detects the tail lamps of vehicles ahead.
- The surroundings become bright enough not to require main beam.
- The vehicle speed drops below the 40km/h threshold.

The system will temporarily suspend the smart main beam function once the following conditions are met:

With the smart main beam system enabled, instantaneously pull the lighting lever towards the steering wheel, the smart main beam function will be temporarily suspended,

it will automatically be re-instated when the switch lever is released.

Note: Continuously operating the main beam switch within 2 seconds will retain the main beam lamps under automatic control, and the system will not exit the smart main beam function.

#### **IMPORTANT**

The smart main beam function uses data from the front view camera, always keep the windscreen clean and free from residue in this area to maintain optimum performance of this system. Any damage in this area, such as stonechips must be repaired at the earliest convenience.

#### Fog Lamp Switch



Fog lights should only be used when visibility is below 100m - other road users could be dazzled in clear conditions.



switch to return to position I. The indicator illuminates on the instrument panel when the rear fog lamps are on.

#### **Hazard Warning Lamps**


Press the hazard warning lamp button in centre console to operate the hazard warning lamps. All turn signal lamps and direction indicator lamps will flash together. Press the button again to switch off the hazard warning lamp. All turn signal lamps and direction indicator lamps will stop flashing.

#### **Rear Fog Lamps**

With the START/STOP Switch in the ON/READY position and the headlamps turned on, rotate the fog lamp button to position I to turn on the rear fog lamps, release the

#### Wipers and Washers

#### **Front Windscreen Wiper Controls**

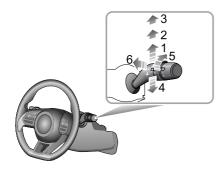

The wipers and washers will only operate when the START/STOP Switch is in the ON/READY position.. Operate the lever to select different wiping modes:

- Intermittent wipe (I)
- · Slow speed wipe (2)
- Fast speed wipe (3)

- Single wipe (4)
- Rain sensor sensitivity adjustment (5)
- Front Windscreen Wash and Wipe (6)

#### Intermittent Wipe

By pushing the lever up to the Intermittent wipe position (I), the wipers will operate automatically. The interval between the Intermittent wipes can be increased/decreased by rotating the switch (5).

The vehicles are equipped with a rain sensor fitted to the interior rearview mirror base to detect varying amounts of water on the outside of the windscreen. With automatic wipe, the vehicle will adjust the wiping speed according to the signals provided by rain sensor. Rotate the switch (5) to adjust the sensitivity of rain sensor. As the sensitivity increases, the wiping interval decreases.

Note: Immediately operating the wiper one time can be achieved by increasing the sensitivity of rain sensor. If the rain sensor detects continuous rainwater, the wipers will keep working. When it is not raining, it is recommended to switch off automatic wipe.

#### Slow Speed Wipe

By pushing the lever up to the slow speed wiping position (2), the wipers will operate slowly.

#### Fast Speed Wipe

By pushing the lever up to the fast speed wiping position (3), the wipers will operate at fast speed.

#### Single Wipe

Pressing the lever down to the single wiping position (4) and releasing will operate a single wipe. If the lever is held down (4), the wipers will operate continuously until the lever is released.

Note: When the car is stationary, if the bonnet is opened, the front wiper/washer operation will be disabled.

#### **IMPORTANT**

- · Avoid operating the wipers on a dry windscreen.
- In freezing or extremely hot conditions, make sure that the wiper blades are not frozen or adhered to the windscreen.
- In winter, remove snow or ice from around the wiper arms and blades, including the wiped area of the screen.

#### Front Windscreen Wash and Wipe


Pulling the lever toward the steering wheel (6) will operate the front windscreen washers. After a short delay, the wipers will commence operating in conjunction with the washers.

Note: The wipers continue operating for a further three wipes after the lever is released. After several seconds, there will be a further wipe to remove any fluid draining down the screen.

#### **IMPORTANT**

If the washers fail to deliver the screen wash solution (dirt or ice may have blocked the jets), release the lever immediately. This will prevent the wipers from operating, and the consequent risk of visibility being impaired by dirt smearing across the unwashed windscreen.

#### **Rear Windscreen Wiper Controls**

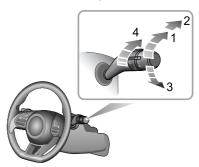

The rear wipers and washers will only operate when the START/STOP Switch is in the "ON/READY" position. Rotate the rear window wiper switch to your desired selection:

- Intermittent wipe (I)
- Wash and wipe (2)
- · Wash and wipe (3)
- Wipe interval adjustment (4)

#### Intermittent position

If the rear wiper switch is rotated to intermittent wipe (1), the rear wiper will operate. It will complete 3 continuous wipes before changing to intermittent mode. The time period between the wipes can be increased/decreased via the switch (4).

#### Wash and wipe

Rotate the rear window wiper switch to wash and wipe (2) position and hold, the rear window wiper and washer will operate, the rear window wiper wipes quickly. release the switch allowing it to return to intermittent wipe (1), the rear window washer will stop operating.

Rotate the rear window wiper switch to wash and wipe (3) and hold, the rear window wiper and washer will operate. release the switch allowing it to return to OFF position, the rear window washer will stop operating, and the rear window wiper wipes for 3 times, after several seconds, the wiper will wipe once more to remove the washer fluid on the windscreen.

Note: When the tailgate is opened, rear wiper operations will be disabled.

Note: When the windscreen wipers are switched on, if Reverse gear is selected, the rear window wiper will operate.

### **Steering System**

#### **Steering Wheel Position Adjustment**



DO NOT adjust the position of the steering wheel while the vehicle is in motion to avoid danger.



Adjust the steering wheel position to suit your driving posture:

- I Fully release the locking lever (as indicated by the arrow).
- 2 Hold the steering wheel with both hands and move it up or down to adjust its height; push and pull the steering wheel to adjust the distance between the steering wheel and the body.
- 3 Once a comfortable driving position has been selected, pull the locking lever fully up to lock the steering wheel into its new position.

#### **Electric Power Steering**



If the electric power steering fails, the steering may appear very heavy, which will significantly affect driving safety.

The electric power steering system works only when the vehicle is started. The system operates via a motor with assistance levels automatically adjusted based on vehicle speed, steering wheel torque and steering wheel angle.

#### **IMPORTANT**

When the electric power steering system operates, holding the steering wheel on fully lock for long periods will result in a reduction in power assistance, causing a heavier feel to the steering.

#### Horn



in this area to avoid any potential conflict with the operation of the airbag.

#### **IMPORTANT**

To avoid possible SRS issues, please do not press with excessive force or hit the airbag cover when operating the horn.

Press the horn button area on the steering wheel (as indicated by the arrow) to operate the horn.

Note: The vehicle horn press and the driver's airbag are located in close proximity on the steering wheel. The illustration shows the position of the horn (indicated by arrow), please ensure that you press

#### **Rearview Mirrors**

The vehicle is fitted with rear view mirrors, these consist of a door mirror fitted to each door and a centrally mounted interior mirror. Rearview mirrors reflect situations directly behind or on both sides of the vehicle thus expanding the driver's field of vision.

The rearview mirrors are safety-critical parts. Proper use and reasonable mirror angle adjustment can improve the driver's driving safety and comfort.

#### **Exterior Door Mirrors**

Note: Objects viewed in exterior door mirrors may appear further away than they actually are.

The mirrors can be electrically folded back towards the side windows into a 'park' position to enable the car to negotiate narrow openings and avoid collisions.


In addition to the folding function, the mirror angle of the exterior door mirrors can be adjusted electronically and also heated.

#### Mirror Glass Heating

The door mirrors have integral heating elements which disperse ice or mist from the glass. The heating elements operate while the Heated Rear Window is switched on.

Note: The heating elements of rear window and mirror will only work when the engine/power system is running.

#### **Power Folding**

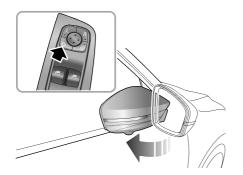


Pressing the switch (arrowed) on the combination switch in the driver side switch panel will electrically fold the exterior door mirrors. Pressing this switch again will restore the mirrors to their original position.

While unlocking/locking the vehicle, the exterior door mirrors will be deployed/folded automatically. This

function can be set in the relevant interface on the infotainment display.

Note: Electrical folding door mirrors that have been moved from their positions by manual or accidental means must be reset by operating the folding switch to completely fold and unfold the mirrors one time.

#### **Electric Adjustment of Mirror Glass**

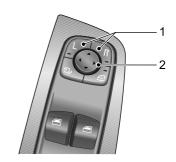

- Press the left (L) or right (R) switch (I) to select the left or right exterior door mirror. The indicator lamps within the switches (I) will illuminate when selected.
- Press one of the 4 arrows of the circular switch (2) to adjust the angle of the exterior door mirror.
- Press the L or R switch (I) again, the corresponding indicator lamp will extinguish, and the mirror adjustment operation will be stopped. This is to avoid accidental adjustment of mirror angle once adjustments has been made.

#### **IMPORTANT**

- Exterior door mirrors are operated by electrical motors. Operating them directly by hand may damage the internal components.
- Washing or flushing exterior door mirrors with high pressure water jets or car washes may result in electrical motor failure.

#### **Puddle Lamp**

Puddle lamps are located within the lower half of the door mirrors. For information on puddle lamp operation

please refer to "Lighting and Switches" in "Instruments and Controls" chapter.

## Automatic Anti-dazzle Interior Rearview Mirror



When the START/STOP Switch is in the ON/READY position, the automatic anti-dazzle function is switched on automatically. When a following vehicle's headlamps could dazzle the driver, the light sensor activates the anti-dazzle function

The automatic anti-dazzle function can be inhibited if:

 The light from the vehicle behind is not seen by the light sensor on the mirror.

· Reverse gear is selected.


Note: Attaching film or objects on the rear window may have influences on the function of the automatic anti-dazzle function.

#### Sunvisor



The vanity mirror on the driver side should only be used when the car is stationary.

Pull the sunvisor downward to use the vanity mirror. The vanity mirror light is switched on when the cover is opened, and it is switched off when the cover is closed.

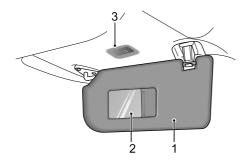

Sunvisor (1), vanity mirror (2) and vanity mirror lights (3) are arranged on the roof ahead of both the driver and the front passenger.

#### Windows



Correctly operate the windows to avoid danger. The driver shall instruct passengers on how to use windows and tell them safety precautions.




Ensure passengers, especially children, are kept clear when raising or lowering a window.



DO NOT operate the power window controls multiple times consecutively in a short period, otherwise the power window controls may be temporarily disabled to protect the motor. If this occurs, please wait a few seconds until the motor cools down. Do not disconnect the battery during the waiting time.


#### **Power Operated Window Switch**

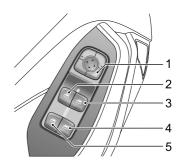

- I Rear Window Isolation Switch
- 2 Front Left Window Switch
- 3 Front Right Window Switch
- 4 Rear Right Window Switch
- 5 Rear Left Window Switch

#### **Window Operation**

The electric windows can be operated with the START/STOP switch in the ACC/ON/READY position (For safety: doors should be closed).

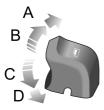

Press the window control switch (as shown in Figures  $2 \sim 5$ ) down to the 1st position (Position C) to lower the window, and pull the switch up to the 1st position (Position B) to raise the window. The window will stop moving as soon as the switch is released.

#### "One-Touch" Down

Briefly press the window control switch (as shown in Figures  $2 \sim 5$ ) down to the 2nd position (Position D), the window automatically descends to fully open. Operate the

switch again to stop the window movement at any time during descent.

#### One Touch Up with Anti-Trap

Briefly pull the window control switch (as shown in Figures  $2 \sim 5$ ) up to the 2nd position (Position A), the window automatically ascends to fully closed. Window movement can be stopped at any time by operating the switch again.

The 'Anti-Trap' function is a safety feature which prevents the window from fully closing if an obstruction is sensed. In this case, the window will move down so that the obstacle can be taken out.

Note: The front and rear passenger windows can also be operated by individual window control switch mounted on each door. If the rear window isolation switch has been activated, the window switches on rear doors will not work.

#### Rear Window Isolation Switch

Press the switch (1) to isolate the rear window controls (an indicator lamp in the switch illuminates), and press again to restore control.

Note: It is recommended that you ISOLATE the rear window switches when carrying a child.

#### "Lazy Lock" Function

The "Lazy Lock" function can open or close all the windows by using the remote key from outside the vehicle as long as it is within detection range.

When the vehicle is powered off and the doors are closed, press and hold the remote key unlock button until the windows start to open, release the unlock button, all windows will open fully. With the windows open, press and hold the remote key lock button until the windows start to close, release the lock button, the windows will completely close.

Note: If the battery is cut off during lifting and lowering of the window, One Touch Up and Anti-Trap mode may be not operational, in this case, fully open the window, then raise the window to the fully closed position by lifting the switch briefly and consecutively. When the window is fully closed, hold the switch in the close position for a further 5 seconds. One Touch Up and Anti-Trap mode will be resumed.

## Sunroof \*

The sunroof consists two pieces of glass and one sunshade. The front glass can be opened by sliding or tilting, the rear one is fixed and cannot be opened, and the sunshade can slide open.

#### Instructions



DO NOT allow passengers to lean out of an open sunroof whilst the vehicle is in motion. Injuries may occur from objects such as tree branches.



Safety of the vehicle occupants must be observed at all times. DO NOT allow limbs to be placed in the moving path of the sunroof at any time, injury may occur.

- Avoid fully opening the sunroof during rain showers.
- It is advised not to open the sunroof at high speeds.
- Where possible, please clean any residual water or raindrops off the sunroof prior to opening. Failure to do so may result in water entering the car.

- DO NOT use abrasive materials to clean the sunroof glass. Use alcohol based solvent.
- DO NOT hold the operating switch in the open/close position for any length of time after operation is complete, this could damage the electrical components.
- Clean the sunroof regularly to maintain operation and performance. Visit an MG Authorised Repairer for service as required.

54

#### **Sunroof Operation**



When the START/STOP Switch is set to ACC or ON/READY, you can operate the sunroof.

Switch I is used to operate the sunroof sunshade, and switch 2 is used to operate the sunroof glass. The method by which the sunroof will open function is identified by the icons on the switches.

#### **Sunroof Glass Operation**

Open the Sunroof Glass by Tilting



Push the sunroof glass switch upward to the 1st position (1) and hold, the sunroof will tilt open. You can stop the movement of the sunroof at any time by releasing the switch. Push the glass switch with slightly harder force to move the switch to its 2nd position (2) and then release, the sunroof will automatically open completely.

#### Close the Sunroof Glass by Tilting

Pull the sunroof glass switch downward to the 1st position (3) and hold, the sunroof will close. You can stop the movement of the sunroof at any time by releasing the switch. Pull the glass switch with slightly harder force to move the switch to its 2nd position (4) and then release, the sunroof will automatically close completely.

#### Open the Sunroof Glass by Sliding



Push the sunroof glass switch backward to the 1st position (3) and hold, the sunroof will slide open. You can stop the movement of the sunroof at any time by releasing the switch. Push the glass switch backward with slightly harder force to move the switch to its 2nd position (4) and then release, the sunroof will automatically open fully. You can stop the movement of the sunroof at any time by pushing the switch backward again.

#### Close the Sunroof Glass by Sliding

Push the sunroof glass switch forward to the 1st position (1) and hold, the sunroof will close. You can stop the movement of the sunroof at any time by releasing the

switch. Push the glass switch forward with slightly harder force to move the switch to its 2nd position (2) and then release, the sunroof will automatically fully close. You can stop the movement of the sunroof at any time by pushing the switch forward again.

#### **Sunroof Sunshade Operation**



#### Open the Sunshade

Push the sunroof sunshade switch backward to the 1st position (3) and hold, the sunshade will slide open. You can stop the movement of the sunshade at any time by releasing the switch. Push the sunshade switch backward with slightly harder force to move the switch to its 2nd position (4) and then release, the sunshade will automatically open

fully. You can stop the movement of the sunshade at any time by pushing the switch backward again.

#### Close the Sunshade

Push the sunroof sunshade switch forward to the 1st position (1) and hold, the sunshade will close. You can stop the movement of the sunshade at any time by releasing the switch. Push the sunshade switch forward with slightly harder force to move the switch to its 2nd position (2) and then release, the sunshade will automatically fully close. You can stop the movement of the sunshade at any time by pushing the switch forward again.

Note: If the vehicle is to be parked in direct sunlight for a length of time it is recommended that the sunshade be closed to protect the interior trim components from damage, and to help regulate the in car temperatures.

## **Anti-pinch Function**

The sunroof and sunshade feature an "Anti-Pinch" function, this is a safety feature which prevents the sunroof or sunshade from fully closing whilst in the automatic mode if an obstruction is sensed - if this

happens the sunroof/sunshade will open slightly to allow the obstruction to be removed.

#### Forcibly Closing the Sunroof (over-riding the anti pinch)

To forcibly close the sunroof glass after an anti-pinch intervention, gently slide the glass switch forwards to the 1st position within 5 seconds and hold in position until the sunroof glass is fully closed.

Note: The anti pinch function is suspended during this operation.

# Forcibly Closing the Sunshade(over-riding the anti pinch)

To forcibly close the sunshade that has reopened due to activation of anti-pinch function: gently slide the sunshade switch forwards to the 1st position within 5 seconds and hold it until the sunshade closes fully.

Note: The anti pinch function is suspended during this operation.

## Linkage between Sunshade and Sunroof Glass

To prevent the sunshade from being exposed, the sunshade will move together with the sunroof glass as one unit when the sunroof is opened. To close the sunshade, please close the sunroof glass first.

#### **Sunroof Initialisation**

In the event of a power failure or battery disconnection when the sunroof glass or sunshade is in motion, the sunroof/sunshade will require initialisation when the power is restored.

To carry out the sunroof glass initialisation operation:

Fully close the glass -gently slide the switch forward to the 2nd position and hold in position for 10 seconds. The sunroof will open a preset amount and stop, it will then close automatically - the sunroof glass is then initialised. During the whole process, the switch must remain in the 2nd position.

To carry out the sunshade initialisation operation:

Fully close the sunshade -slide the close switch foward to the 2nd position and hold in position for 10 seconds.

The sunshade will open a preset amount and stop, it will then close automatically - the sunshade is then initialised. During the whole process, the switch must remain in the 2nd position.

#### Thermal Protection

To prevent the sunroof glass motor and the sunshade motor from being overheated and damaged, the motors are designed with a thermal protection function, any opening or closing operation whilst in the thermal protection state will not move the sunroof. After the motor has cooled down and exits the thermal protection state, the sunroof can be operated until the next thermal protection event.

## "Lazy Lock" Function

"Lazy Lock" function can open or close the sunroof from outside the vehicle.


Press and hold the remote key unlock button for several seconds until the sunroof glass and sunshade start to open, then release the button, the sunroof will continue to open until it is fully opened; with the sunroof open, press and hold the remote key lock button for several seconds until

the sunroof glass and sunshade start to close, then release the button, the sunroof will continue to close until it is fully closed.

# **Interior Light**

## Front Interior Lamp

According to different configurations of the vehicles, the front interior lamp may feature bulb or LED configurations.

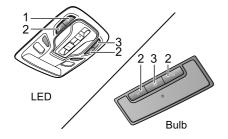

- I Main Manual Control Switch of Front/Rear Interior Lamps
- 2 Manual Control Button of Corresponding Front Interior Lamp
- 3 Automatic Control Button

Press switch I to turn on the front and rear interior lamps, press again to turn off.

Press either of the buttons 2 to turn on a corresponding front interior lamp, press again to turn off.

In addition to the manual control of the interior lamps, some operating conditions will activate an automatic control function. Press button 3 to turn on automatic control, press again to release the button, and turn off the automatic function.

When the automatic control function is enabled, the front and rear interior lamps illuminate automatically if any of the following actions are carried out:

- · The car is unlocked.
- · Any door is opened.
- When the vehicle light sensor detects that the ambient light level is low or the side lights have been illuminated within 30 seconds, the interior light will operate when the START/STOP Switch is set to OFF.


Note: If a door is open for more than 15 minutes, the interior lamps will be switched off automatically to avoid battery drain.

## Rear Interior Lamp \*



The rear courtesy lights are located on the left and right sides of interior roof panel. Press the lamp lens as indicated in the diagram to switch on the rear courtesy lights, press it again to switch off the lights.

## Ambient Lamps \*

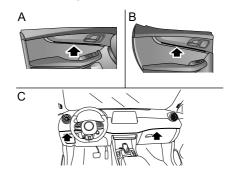

Ambient lamps are fitted on certain models to create a comfortable atmosphere inside the car. The control of the ambient lamps can be set in the infotainment system. Ambient lamps are provided on the front door interior trim panel (A), rear door interior trim panel (B) and fascia panel (C).

#### **Power Socket**




Please ensure the socket lid is inserted when the 12V power socket is not in use. This will ensure no debris or foreign objects enter the socket preventing its use or cause short circuits.



The voltage of the 12V power socket is 12 volt, and the power rating is 120 watt, please do not use the electrical appliance with its power exceeding the rating.




Use of the front console power socket or USB port when the engine is not in motion will cause premature discharging of the vehicle battery, and the vehicle may thus cannot be started.

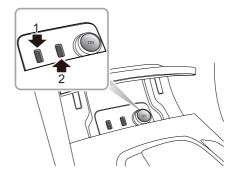

The 12V front power socket is located in the front of the centre console. When the START/STOP Switch is in position ACC/ON/RUNNING, pull out the socket lid, then it can be used as the power supply.

There are two USB ports (I and 2) equipped at the left side of I2V front power socket, the USB ports (I and 2) can either provide a 5V voltage when serving as the power outlet, or realize the data transmission function.

There are also two USB ports equipped at the rear of the centre console, which can only provide a 5V voltage when serving as the power outlet.

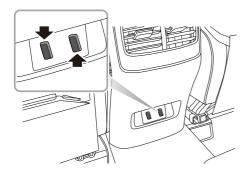


Note: The USB ports may not support some fast charging devices.

# **Storage Devices**

#### Instructions

- Please close all storage devices when the car is in motion. Leaving these storage devices open may cause personal injuries in cases of a sudden start-off, emergency braking and a car accident.
- Do not place flammable materials such as liquid or lighters in any storage devices. The heat in hot conditions may ignite flammable materials and lead to a fire


#### **Glove Box**

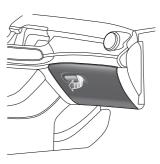

To open the glove box, pull the handle on the glove box cover (as indicated by the arrow). The glove box light will automatically illuminate.

Push the lid forward to close the glove box. Make sure the glove box is fully closed when the car is driving.

# Storage Box - Driver Side

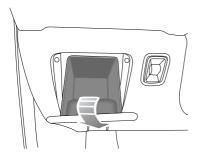

Located beneath the instrument panel on the driver side, pull the storage box lid down to open the box.

### **Centre Console Armrest Box**




Lift the armrest (arrowed) to open the compartment cover. Put the cover down to close it.

# **Cup Holder**



DO NOT place hot drinks in the cup holder whilst driving. Spillage may result in personal injury or damage.

## **Centre Console Cup Holder**

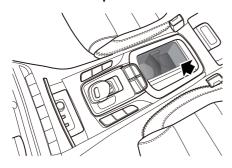

The centre console cup holder is situated at the front end of the centre console armrest assembly, it can be used to hold a cup or beverage bottle.

## Rear Armrest and Rear Cup Holder



Fold forward to open the rear armrest. Press button I to open the cup holder. Press button 2 to open the storage box in the rear of the armrest.

# Roof Luggage Rack \*



Roof loads MUST NOT exceed the maximum authorised load. This may lead to injury or vehicle damage.



Loose or improperly fixed loads may fall from the roof luggage rack and lead to an accident or cause injury.



When heavy or large items are carried on the roof luggage rack it may lead to changes in steering, handling and braking characteristics. Please avoid sharp maneuvers, heavy braking and excessive acceleration.

Pay attention to the following when using the roof luggage rack:

- Fix loads towards the front of the roof as far as possible, and distribute the roof load evenly.
- DO NOT use automatic car washes with loads on the roof luggage rack.

- The overall height of the car is different when loads are fitted to the roof luggage rack. Please ensure there is adequate clearance when entering tunnels and garages.
- Ensure the loads carried by the roof luggage rack do not impede operation of the sunroof, roof antenna of tailgate opening.
- When installing or removing a piece of loading equipment, follow the instructions provided by the manufacturer of the loading equipment.

#### **Maximum Authorised Load for the Roof**

The maximum authorised load for the roof is 75 kg, and the roof load includes the weight of the roof loads and that of the loading equipment installed.


Be sure to know about the weight of loads, and weigh them when necessary. Never exceed the maximum authorised load for the roof.

#### **Periodical Check**

Always check the condition and security of bolt connectors and fasteners before using the rack luggage rack. Periodically check the condition and security of bolt connectors and fasteners.

- 70 Ventilation
- 73 A/C Control Panel
- 75 Automatic Temperature Control Interface \*
- 79 Entertainment Player

# **Ventilation**

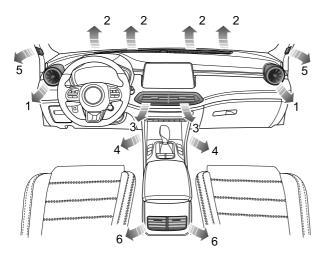

- I Side Vents
- 2 Windscreen Vents
- 3 Centre Vent
- 4 Front Seat Feet Vents
- 5 Front Side Window Vents
- 6 Centre Console Vents

There are also 2 rear seat feet vents, respectively on the floor under the front seats (not shown in the figure).

The air conditioning system is used to adjust the temperature, speed, humidity and cleanliness of the air in the car. Fresh air is drawn in through the air intake grille at the base of the front windscreen and A/C filter.


Always keep the air intake grille clear of obstructions such as leaves, snow or ice.

#### A/C Filter

The A/C filter is used to filter air. To remain fully effective, the filter should be replaced at the recommended service interval.


#### **Vents**

#### Centre Vents

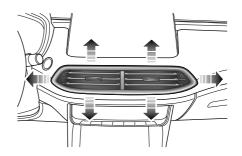


Slide the knob in the centre of the louvres leftward/rightward to the end to open or close the vent. Direct the air flow by moving the knob up and down, or from side to side.

#### Side Vents

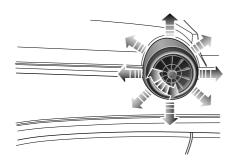

Rotate the knob clockwise or counterclockwise to the end to open or close the vent. Direct the air flow by moving the knob in the centre of the louvres up or down, or from side to side.


#### Centre Console Vents

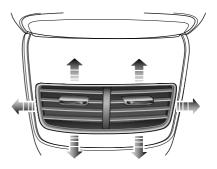

Slide the knob in the centre of the louvres leftward/rightward to the end to open or close the vent. Direct the air flow by moving the knob up and down, or from side to side.

#### A/C Control Panel

#### **Control Panel**

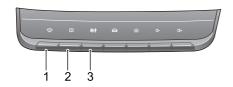

- I Defrost/Demist Button
- 2 Heated Rear Window Button
- 3 A/C Control Shortcut Key

## A/C Control Shortcut Key

Short press the A/C Control Shortcut Key, and quickly pop up the A/C control interface; long press the A/C Control Shortcut Key, to turn on/off the A/C system.

#### **Heated Rear Window**



The rear window heater is a sensitive element, and improper use of it will cause damage. DO NOT scrape or scratch the inside of the glass. DO NOT stick labels over the heating elements.

Press the Heated Rear Window Button to switch the function on or off. The button indicator illuminates when the function is on, and is extinguished when the function is off. The heated rear window features a timer function and will automatically switch off after a preset time.

### **Defrost/Demist**

Press this button to operate the defrost/demist function, the indicator will illuminate. The system will automatically set itself to a preset temperature and blower motor speed to effectively clear the side windows and windscreen

Press again to switch off. The indicator will go off and the system will return to the previous state.

In the defrost/demist mode, operation of any other air distribution modes will quit defrost/demist.

# **Automatic Temperature Control**Interface \*

#### **Control Interface**



- I System On/Off
- 2 Cooling On/Off
- 3 Air Circulation Mode
- 4 Temperature Zone Control
- 5 Left Zone Temperature Control
- 6 Blower Speed Control
- 7 Right Zone Temperature Control
- 8 Auto Mode
- 9 Air Distribution Mode

## System On/Off

Touch the system On/Off touch button to switch the system on or off.

## Cooling On/Off

Touch the cooling On/Off touch button to operate the cooling function.

Note: A small amount of water may remain in the air conditioner after usage, this may produce a peculiar smell. If this is a particular issue, it is recommended to switch off the cooling function and run the blower for a while.

#### Air Circulation Mode

Touch the air circulation mode touch button to switch between air recirculation modes.

During internal recirculation, the air conditioning system circulates the air inside the car to meet the requirements of rapid cooling or heating, and at the same time, it can prevent the entry of traffic fumes.

During the external circulation, the air conditioning system draws air from outside the vehicle to ensure fresh air enters the vehicle.

\*During automatic circulation, the air conditioning system can automatically adjust the internal recirculation or external circulation according to the situation.

Note: Leaving the system in internal recirculation mode can cause the windscreen to mist. If this happens, turn on the defrost/demist mode.

#### **Temperature Zone control**

Touch the Temperature Zone Control Button to switch the system between single or dual temperature zone control. When the button is illuminated both zones are synchronised.

## **Temperature Control**

Touch the temperature control touch button to regulate the temperature of the air supplied by the vents.

## **Blower Speed Control**

Touch the blower speed control touch button to regulate the blower speed.

#### **Auto Mode**

Adjust the temperature on the infotainment screen control interface, set the target temperature required and then press the AUTO On/Off button to enable the auto control function.

In the auto mode, the air distribution mode and the blower speed are automatically adjusted to reach and maintain the required temperature.

Note: To ensure the auto control operates efficiently, all windows and the sunroof must be closed and the A/C inlet grille must be clear of obstruction. In addition, the A/C sensor should not be covered.

The air distribution mode and blower speed can be adjusted manually according to personal preference . In this case the AUTO indicator will extinguish.

#### Air Distribution Mode

Select the corresponding Air Distribution Mode Touch Button as required to regulate the air distribution mode.

, ,				
Touch Key	Air Distribution Mode			
	To 'Face'			
	To 'Face + Feet'			
[ بگ	To 'Feet'			
	To 'Feet + Windscreen'			

To 'Face'. Directs airflow to the centre, centre console and side vents.

To 'Face + Feet'. Directs air to the centre, centre console, side and footwell vents

To 'Feet'. Directs air to footwell vents.

Note: In this mode, a small amount of airflow will be directed to the side, front side window and windscreen/defrost vents.

To 'Feet + Windscreen'. Directs air to the footwell, front side window and windscreen/defrost vents.

Note: In this mode, a small amount of airflow will be directed to the side vents.

## **Entertainment Player**

## **Important Safety Information**

- Do not attempt to fit, repair or modify the entertainment system by yourself, because there are high-voltage components in the device, which may cause electric shock. For internal inspection, adjustment or repair, please consult an MG Authorised Repairer.
- Do not allow this entertainment system to come into contact with liquids and foreign objects. If any of them enter the system by accident, please park your vehicle at a safe place, turn off the START/STOP Switch immediately and contact a local MG Authorised Repairer for service. Do not use the entertainment system in this condition because doing so may result in a fire, electric shock, or other failure.
- If you notice smoke, abnormal noises or odours from the entertainment system, or any other abnormal signs on the screen, turn off the START/STOP Switch immediately and contact a local MG Authorised Repairer for service. Using this entertainment system under this condition may result in permanent damage to the system.

- Operation of the entertainment system is prohibited whilst the vehicle is in motion, so as to avoid affecting the driving safety due to distractions. Please park your vehicle in a safe location and apply the parking brake before making the necessary adjustments or watching videos
- Particularly high or low temperatures will interfere with normal operation of the entertainment system. If the vehicle is parked in direct sun or in a cold location for a long time, the system may not work properly.
   Once the temperature inside the car is back to normal, the system will resume normal function. If it does not resume, please contact a local MG Authorised Repairer for service.
- Be sure to run the vehicle engine while using this entertainment system. Using this system without running the engine can drain the battery.
- When using a mobile phone, keep the antenna of the mobile phone away from the screen to prevent the disruption of video signal in the form of spots, colored stripes, etc. on the screen.

## **Cautions for Using Screen**

- To protect the screen against damage, always touch the panel buttons with your finger.
- Do not use the screen when the temperature is beyond the operating temperature range (-30°C to 85°C).
- Do not use excessive force to drag or press the screen, damage or scratching may occur.
- To clean the screen, please turn off the system first, and then wipe carefully with a dry soft cloth. Do not use irritative or abrasive chemical cleaners.

#### Other Precautions

- For some types of external storage devices, the entertainment system may not be able to identify them or to play the files normally.
- Because of file characteristics, file format, recorded application, playback environment, storage conditions, and other factors, the system may not be possible to play the files normally.

## **Basic Operations**

#### **Control Panel**



- Vehicle Setting Button
   Short press to enter the vehicle settings interface.
- 2 in (HOME) Button

  Short press to return to the main interface.
- 3 Volume Down Button Press to lower the volume.
- 4 Volume Up Button
  Press to increase the volume

#### Main System Interface

Swipe left and right to display all system function icons, such as Music, Radio, Video, Picture, Bluetooth Phone, Vehicle Settings, Air Conditioning, etc.


Page One



I Menu Bar: Displays 5 function icons. Click to enter the relevant function interface, and long press to customize the displayed items.

- 2 Music: Touch to enter the music interface.
- 3 Radio: Touch to enter the radio interface.
- 4 Apple Carplay / Android Auto: Touch to enter Apple Carplay or Android Auto interface.

Page Two

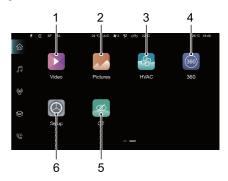

- I Video: Touch to enter the video interface.
- 2 Picture: Touch to enter the picture interface.

- 3 HVAC: Touch to enter the HVAC interface.
- 4 360 \*: Touch to enter the 360 view interface.
- 5 Off: Touch to turn off the display; touch again to wake up the display.
- 6 Setup: Touch to enter the setup interface.

#### Power On/Off

#### Power On

If the START/STOP Switch is turned off with the system in Playback mode last time, the system will turn on automatically when the START/STOP Switch is turned on again.

If the START/STOP Switch is turned off with the system in standby mode last time, short press the HOME button on the system control panel for power-on after the START/STOP Switch is turned on again.

With the system ON, long press the HOME button on the system control panel, the system will enter the standby mode; keep pressing and the system will automatically restart

#### Power Off

Turn off the START/STOP Switch, and the system turns off automatically.

#### Standby Mode


With the START/STOP Switch on, long press the HOME button to allow the entertainment system to enter the standby mode, and the operation of the entertainment system can be suspended.

In Standby mode, all sounds will be muted. To cancel the standby mode, short press the HOME button again.

The standby mode can also be canceled by the following operations:

- The system automatically skips to the parking screen while parking.
- Turn off the START/STOP Switch, and the system is directly powered off.

#### Steering Wheel Control Button

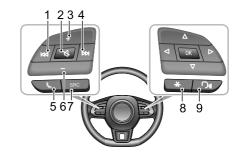

#### KM Button

When playing music, short press to switch to the previous track; short press during playing to return to the beginning of the track (except the Bluetooth music); long press to fast rewind (except the Bluetooth music). When playing video, short press to switch to previous video, and long press to fast rewind. When playing the radio, short press to automatically search previous station; long press to manually search previous station.

## 2 Button

Mute/unmute the system.

- 3 Volume Up Button
- 4 DN Button

When playing music, short press to switch to the next track; long press to fast forward (except the Bluetooth music). When playing video, short press to switch to next video, and long press to fast forward. When playing the radio, short press to automatically search the next station; long press to manually search the next station.

#### 5 & Button

Short press to hang up in calling/talking state; short press to answer and long press to reject in incoming call state.

- 6 Volume Down Button
- 7 SRC Button

Switch to the next available media audio source.

8 "\*" Button on Steering Wheel

The custom function of this button can be set in the Vehicle Settings.

#### 9 Speech Recognition Button

Activate/Cancel speech recognition function. This button will only be used after Vehicle-Mobile Phone Interconnection is enabled

#### **Volume Adjustment**

The audio volume can be adjusted by the control panel and the buttons on the steering wheel. During the volume adjustment, the system may automatically pop up a volume indication window, this will change in accordance with control request.

Note: The control panel and steering wheel buttons can only adjust the volume in media and communication functions.

Note: The playback volume of Bluetooth music can be adjusted through the devices themselves and this entertainment player.

## Inserting and Removing a USB Storage Device

Inserting a USB Storage Device

Insert a USB device to the USB port for connection.

Removing the USB Storage Device

Check that there is no data being accessed before removing the USB storage device.

Note: If data loss or damage to the storage device occurs for any reason, the data will generally never be recovered. For damages, costs or expenses due to data loss or damage, MG Motor assumes no responsibility.

Note: Some USB storage drives may not be recognized.

Note: The entertainment device may not achieve optimum performance when some USB storage devices are used.

Note: Using USB hub or extension cable may not identify USB device.

#### **Bluetooth Phone**

#### Instructions

- Connection to all mobile phones featuring Bluetooth wireless technology cannot be guaranteed.
- The mobile phone that you use must be compatible
  with the entertainment system so that all functions
  of Bluetooth phone of the system can be achieved
  normally.
- When using Bluetooth wireless technology, this entertainment system may not be able to operate all functions in the mobile phone.
- When transmitting voice and data via Bluetooth technology, the straight-line distance between the entertainment system and the mobile phone should not exceed 10 meters. However, the actual transmission distance may be shorter than the estimated distance, depending on the usage environment.
- When the entertainment system is turned off, the Bluetooth connection will also be disconnected.
- Due to Bluetooth wireless connection, interruption or error may occur in the process of transmission in some extreme cases, and the entertainment system may be

unable to be paired and connected with the mobile phone. At this time, it is recommended to clear the paired devices in the device list in the mobile phone and the entertainment system, and perform pairing again.

#### **Bluetooth Pairing and Connection**



The steps of Bluetooth pairing and connection are as follows:

- Touch [Bluetooth Connection] in the Settings interface to enter the Bluetooth Connection interface, and turn on the Bluetooth switch.
- · The system displays the Bluetooth device name.
- Enable the Bluetooth function in the mobile phone and search for the entertainment system for pairing. The mobile phone will receive a Bluetooth pairing request. After the pairing is completed, the status bar will display

- the Bluetooth icon  $^{\mbox{\ensuremath{B}}}$ . If the pairing fails, please repeat the above steps.
- The mobile phones that have been successfully paired will be stored in the list of paired devices. Touch to connect the Bluetooth of the mobile phone, and touch to disconnect the Bluetooth. Touch to delete the mobile phone from the list of paired devices.

#### Make a Call



You may make a call through the following methods:

- Dial pad input.
- Dial a number in Contacts.
- · Dial a number in Call History.
- Make a call directly on the mobile phone.

### Hang Up

You may end a call through the following methods:

- Touch to hang up the phone.
- Briefly press on the steering wheel to hang up the phone.

· Hang up on the mobile phone.

#### **Incoming Call**

#### Answer a Call

- When an incoming call comes, touch Sto answer the call
- In the incoming call state, briefly press button on the steering wheel to answer the call.
- · Answer an incoming call on the mobile phone.

#### Reject a Call

- In the incoming call state, touch to reject the call.
- In the incoming call state, long press button on the steering wheel to reject the call.
- · Reject an incoming call on the mobile phone.

#### Switching to Private Mode

During the call, touch to switch from voice mode to private mode. Touch to switch from voice mode to speaker mode.

During the call, touch Sto switch between Microphone Mute or Enabled function.

During the call, touch to enter the Input interface.

In the private mode, you may proceed with the call with the mobile phone; the speakers and microphone of the entertainment system will be muted, but Bluetooth is still connected.

#### **Entertainment**

#### Precautions for Storage Media Playback Mode

- This system supports USB flash drive and Bluetooth storage media.
- If the USB flash drive is not in use for a long time, DO NOT leave the USB flash drive connected to guarantee good connectivity.
- Do not remove the USB storage medium directly when it is in use. Failure to follow these instructions could result in damage to the USB storage medium or failure to the entertainment system.
- Keep the USB port dry. Pay attention to avoid a child stuffing the USB port, the port will become unusable if it is blocked.

#### Radio

Touch the Radio area in the main interface to enter the radio interface.

#### DAB



- I Current Station Name
- 2 DAB/FM/AM Band Switching
- 3 Station Favorites List

Click the + sign to favorite the current station, and long press the favorite station to select and cancel the favorite according to your needs.

4 Sound Settings

- 5 Electronic Program Guide \*
- 6 DAB Categories List
- 7 Radio Information

Touching the button will display radio information, such as text, picture.

8 Station List

Touch to enter the station list, search for the station and store the searched stations in the station list.


9 Next Station

Short press to automatically search for the next station; long press to manually search for the next station

10 Previous Station

Short press to automatically search for the previous station; long press to manually search for the previous station.

#### FM/AM

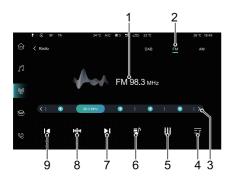

- I Current Station Frequency
- 2 DAB/FM/AM Band Switching
- 3 Station Favorites List

Click the + sign to favorite the current station, and long press the favorite station to select and cancel the favorite according to your needs.

4 Radio Information

Touching the button will display radio information, such as text, picture.

- 5 Sound Settings
- 6 Station List

Touch to enter the station list, search for the station and store the searched stations in the station list.

7 Next Station

Short press to automatically search for the next station; long press to manually search for the next station.

8 Station Preview


Automatically search for and preview each station and play each for several seconds. During the preview, click the button to terminate the preview function, and play the current previewing station.

9 Previous Station

Short press to automatically search for the previous station; long press to manually search for the previous station.

#### **USB Music**

Insert USB storage device to USB port. Touch the Music area in the main interface to enter Music Playback interface.

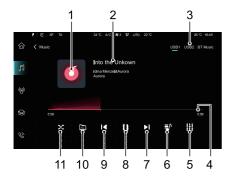

- I Album Cover
- 2 Track/Artist/Album Name
- 3 Music Playback Media Switching

If there are two USB storage devices, you can choose to play the music in USBI or USB2. When Bluetooth is connected, you can choose to play Bluetooth music.

- 4 Playback Progress Bar
- 5 Sound Settings
- 6 Music List
- 7 Next Track

Short press to switch to the next track; long press to fast forward.

- 8 Play/Pause
- 9 Previous Track

Short press to switch to the previous track; short press during playback to return to the beginning of the track; long press to fast rewind.

10 Playback Range

The playback range can be selected as the current folder or all folders.


11 Playback Mode

The playback mode can be selected as Single Loop, All Loop or Random Playback.

#### **Bluetooth Music**

To play music via Bluetooth, firstly connect the Bluetooth device. Refer to the "Bluetooth Pairing and Connection" in "Bluetooth Phone" section for details.

Touch the Music area in the main interface to enter Music Playback interface.

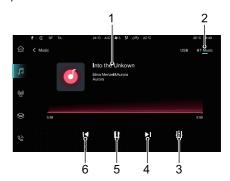


- I Track/Artist/Album Name
- 2 Music Playback Media Switching

If there are two USB storage devices, you can choose to play the music in USBI or USB2. When Bluetooth is connected, you can choose to play Bluetooth music.

- 3 Sound Settings
- 4 Next Track
- 5 Play/Pause
- 6 Previous Track

#### **USB Video**

Insert USB storage device to USB port. Touch [Video] in the main interface to enter the Video Playback interface.

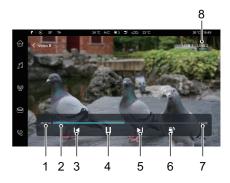

- I Current Elapsed Time
- 2 Playback Progress Bar Drag the progress bar forward or backward to directly skip to certain playing point.
- 3 Previous Video

Short press to switch to the previous video; long press to fast rewind.

- 4 Play/Pause
- 5 Next Video

Short press to switch to the next video; long press to fast forward.

6 Video List

You may view and play the corresponding video file.

- 7 Total Video Duration
- 8 USB Storage Device

If there are two USB storage devices, you can choose to play the videos in USB1 or USB2.

Note: Due to differences in the compression ratio and bit rate of the multimedia formats downloaded from the Internet and other factors, not all the videos may be decoded and blayed.

Note: For your driving safety, when the vehicle speed reaches a certain value, the video safety mode will


be activated automatically, and the video cannot be played at the moment.

Note: The video cannot be played during a call.

Note: When playing a video, click the screen to awaken the menu bar mode, and click it again to exit menu har mode.

#### **USB Picture**

Insert USB storage device to USB port. Touch [Pictures] in the main interface to enter Picture Viewing interface.

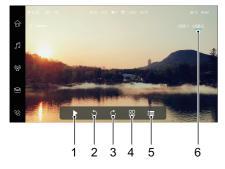

- I Auto/Pause Playback
- 2 Rotate Counterclockwise
- 3 Rotate Clockwise
- 4 Thumbnail

- 5 Picture List
- 6 USB Storage Device

If there are two USB storage devices, you can choose to play the pictures in USB1 or USB2.

Note: The system supports the viewing of pictures in a USB storage device. Due to differences in picture resolution, format compression ratio and some other factors, not all pictures may be decoded and displayed.

Note: When playing pictures, click the screen to awaken the menu bar mode, and click it again to exit menu bar mode.

Note: Swipe the screen left or right to switch to the next or previous picture.

Note: Pictures can be zoomed in or out with two fingers.

#### **Vehicle-Mobile Phone Interconnection**

Note: Only the USB port on the left supports the vehicle-mobile phone interconnection function.

Note: Due to the differences of mobile phone models and system versions, some mobile phones may not be able to use the vehicle-mobile phone interconnection function normally.

#### **Android Auto**

Android Auto enables information interaction between the android mobile phone and the on-board Infotainment system, including map, music, telephone, messages, voice commands.

For the initial application, download and install Android Auto APP to your mobile phone from the market in which it will be operating.

When using, connect the mobile phone to the Infotainment system mainframe using a suitable USB cable. In the main interface, touch [Android Auto] area to enter the Android Auto interface. Operate according to the

interface prompt, then you can use the function once the connection is successful.

## Apple CarPlay

This function can realize the interconnection between iPhone functions (Map, Music, Phone Call, Voice Recognition, etc.) and the onboard mainframe.

#### Connection Method

- I Confirm that the mobile phone has the CarPlay function.
- 2 Use a USB cable to connect the mobile phone to the onboard entertainment system mainframe.
- 3 Touch the [Apple CarPlay] area in the main interface of the entertainment system to start CarPlay.
- 4 After the vehicle and mobile phone are successfully connected, you can operate the iPhone in the mainframe.
- 5 Press the HOME button on the control panel to return to the main system interface.

#### Air Conditioning

Touch the A/C area in the main interface to enter the A/C System Settings interface. Refer to "Electric Temperature Control Interface" or "Automatic Temperature Control Interface" section in this manual for details.

## 360° View \*

Touch the 360° View area in the main interface to enter the 360° View interface. Refer to the "360 Around View System" section of this manual for details.

## **Vehicle Settings**

Touch the Vehicle Settings area in the main interface to enter the Vehicle Settings interface. The lights, door locks, driving control, etc. can be set.

## Settings

Touch the Settings area in the main interface to enter the Settings interface. You can set the Bluetooth connection, audio, display, time and date, etc., and view the system information.

Note: In the System Information interface, you can choose to restore the factory settings according to your needs. After restoring factory settings, the mainframe is reset to its original settings and all data in the entertainment system will be deleted. Please use with caution.

100 Seats

105 Seat Belts

116 Airbag Supplementary Restraint System

125 Child Restraints

#### **Seats**

#### Overview



To avoid personal injuries due to the loss of control, DO NOT adjust the seats while the car is moving.

An ideal position of the seat should make sure your driving position is comfortable, which allows you to hold the steering wheel with your arms and legs slightly bent and control all the equipment. Make sure your driving position is comfortable and enables you to maintain full control of the vehicle.

DO NOT recline the front seat backrest excessively. Optimum benefit is obtained from the seat belt with the backrest angle set to approximately 25° from the upright (vertical). The driver and front passenger seats should be positioned as far rearward as practical. Take care when adjusting the height of the front seat - the feet of the rear passenger could become trapped when the seat is lowered. A properly adjusted seat helps reduce the risk of injury from sitting too close to an inflating airbag.


#### **Head Restraint**



Adjust the height of the head restraint so that the top of it is in line with the top of the occupant's head. This location may reduce the risk of head and neck injuries in the event of a collision. DO NOT adjust or remove the head restraints while the car is moving.



DO NOT hang anything on any head restraint or head restraint rod.

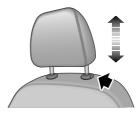

The head restraint is designed to prevent rearward movement of the head in the event of a collision or


emergency braking, thereby reducing the risk of head and neck injuries.

When adjusting a head restraint from low to high position, pull the head restraint directly upward, and gently press it downward after it reaches the desired position to make sure that it is locked in position. To remove the head restraint, press and hold the guide sleeve button (as indicated by the arrow) on the left of the head restraint, then pull the head restraint upward to remove it.

When adjusting a head restraint from high to low position, press the guide sleeve button (as indicated by the arrow) on the left of the head restraint, and press the head restraint downward; release the button after it reaches the desired position, and gently press the head restraint downward to make sure that it is locked in position.

#### Front Seats

#### Manual Seat \*

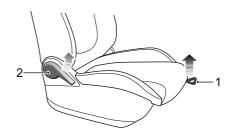


#### · Forward/Backward Adjustment

Lift the lever (1) under the seat cushion, slide the seat into an appropriate position and release the lever. Make sure that the seat is locked in place.

· Backrest Adjustment

Lift the lever (2), adjust the backrest until it moves into a satisfiable position , put down the lever.

#### **Power Seat**

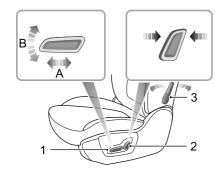

· Forward/Backward Adjustment

Push the switch (I) forward or backward (A) to move the seat forward/backward.

Cushion Height Adjustment

Pull the switch (I) upward or push downward (B) to raise or lower the seat cushion.

Backrest Adjustment

Move the switch (2) forward/backward to adjust the backrest until it reaches the desired angle.

Lumbar Support Adjustment \*

Move the lever (3) to adjust the level of the lumbar support.

#### **Rear Seats**



### **Adjustment of Rear Seat Backrest**

Pull the control lever located at the top of the rear seat backrest upwards to release the locked state of the backrest; then adjust the backrest to the desired position, release the lever. Ensure the backrest is completely locked in position.

## Folding Rear Seats

To increase the luggage space, the rear seat backrest can be folded fully forward. When folding the backrest completely, firstly insert the rear seat belt buckle into the corresponding slot, then fully lower (or remove) all head restraints, pull the respective control lever at the top of the seat backrest upwards and fold the seat backrest forward.

To return the backrest to an upright position, pull the respective control lever upward to release the lock, raise the backrest to the desired position, a click will be heard when the seat is locked.

Note: When returning the rear seat backrest to the desired position, make sure that the rear seat belt is not trapped.

Note: When the head restraint of the rear seat is not fully lowered or the backrest of the front seat is inclined backward excessively, the folding of the rear seat is very likely to damage the back of the front seat, small storage compartment or head restraint of the rear seat.

Note: If the rear seat belt buckle is not completely inserted into the corresponding slot, folding the backrest is very likely to damage the rear seat backrest cover or foam.

#### Front Seat Heating



If bare skin is in contact with the heated seats for excessive periods of time, it may cause burns.

The seat cushion and backrest of front seats are provided with heating elements. After the vehicle power mode is set to READY, access the air conditioning control interface and press the seat heating switch on the display to enable the heating function of the corresponding seat.

When pressing a seat heater switch, the corresponding seat will become warm. Press the switch again to stop the heating function. When the seat heating function is activated, the operating indicator in the switch illuminates. When the seat cushion and backrest temperature reaches approximately 38°C, the heating function will be deactivated automatically.

#### **IMPORTANT**

- DO NOT cover the heated seats with blankets, cushions or other insulation type objects or materials.
- If the seat temperature has reached 38°C and continues getting hotter when using the seat heating system, please turn off the seat heating and contact an MG Authorised Repairer.
- Overuse of the driver's heated seat may cause drowsiness and could affect safety.

#### **Seat Belts**



It is important that all seat belts are worn correctly. Always check that all passengers are wearing seat belts. DO NOT carry passengers that are unable to wear correctly positioned seat belts. Wearing seat belts incorrectly may cause serious injury or even death in the event of a collision.



Airbags can not replace seat belts. Airbags can only provide extra support when triggered, and not all traffic accidents will trigger airbags. Whether airbags are triggered or not, seat belts can reduce the risks of serious injury or death in accidents. Therefore, seat belts must be worn correctly.



NEVER unfasten a seat belt whilst driving. Serious injury or death may occur in the case of an accident or emergency braking. This vehicle is equipped with seat belt warning lamp to remind you to fasten your seat belt.

During driving, seat belts must be fastened, this is because:

- You can never predict if you will be involved in a collision accident and how serious it may be.
- In many cases of collision accidents, passengers with seat belts correctly fastened are well-protected, while passengers with seat belts not fastened suffer from serious injury or even death.

Therefore, all passengers must wear seat belts correctly, even during short-distance journeys.

## **Protection Provided by Seat Belts**



It is of equal importance for passengers in the rear seat to fasten their seat belts correctly. Otherwise, passengers with seat belts not correctly fastened will be thrown forward in accidents, and will endanger themselves as well as the driver and other passengers.

When the vehicle is in motion, the travelling speed of the occupants is identical to that of the vehicle.

In the event of a 'head on collision' or emergency braking, the vehicle may stop, but the occupants will carry on travelling until they come into contact with a stationary object. This object may be the steering wheel, dashboard, windscreen and others.

A correctly fastened seat belt will eliminate this risk of injury. When the seat belt is worn correctly, it will lock automatically in collision accidents or emergency braking to reduce your speed together with the vehicle, so as to prevent the out-of-control movement which may cause serious injury to driver and passengers.



## **Wearing Seat Belts**



Incorrectly worn seat belts could cause injury or death in the event of an accident.



Seat belts are designed for one person. DO NOT share seat belts.



DO NOT wrap a seat belt around when holding a baby or child in your arms.



Remove any heavy coats or clothing when wearing a seat belt, failure to do so can affect protection provided by the seat belt.



Seat belts should not be wrapped around hard or sharp objects such as pens, spectacles or keys to avoid additional injury to the users.



Seat belts cannot function correctly when the seats are reclined excessively. DO NOT drive when the seats are excessively reclined.

The seat belts fitted to your vehicle are designed for use by normal sized adults. This part of the literature refers to adult use. For advice on seat belt use with children, please see 'Children and Seat Belts'.

All seat belts are 3 point lap-shoulder belts.

In order to maintain effective protection, the passengers must sit in the correct orientation, feet placed on the floor in front of them, with an upright body (no excessive recline) and the seat belt correctly fastened.

## **Fastening Seat Belts**

Please follow the instructions below to fasten the seat belts correctly.

- I Adjust the seat correctly.
- 2 Hold the metal tab, pull the seat belt out steadily over the shoulder and across your chest. Ensure there is no twist on the belt.



3 Insert the metal tab into the buckle until you hear a 'click', this indicates the seat belt is securely locked.



- 4 Remove any slackness in the belt by pulling up on the diagonal section of the belt.
- 5 To release the seat belt, press the red button on the buckle. The seat belt will retract automatically to its original place.


#### **IMPORTANT**

- Always ensure the seat belt will not become trapped in the door aperture when closing the door, damage will occur.
- Pulling the seat belt out too quickly may cause it to 'lock'. In this case, allow the seat belt to retract slightly and then pull it across your body slowly.
- If it is difficult to pull the seat belt out, it may be due
  to twisted webbing. If this is the case, fully extract
  the seat belt, remove the twist, allow the seat belt
  to retract slowly.
- When using the rear seat belts please ensure they are fully retracted into the correct position to avoid jamming in the rear seat catches. Even if the seat belt is not completely smoothed, it is still required to be worn during driving, but the twisted part of the seat belt shall not contact the passenger. When this happens, please go to an MG Authorised Repairer for repair.

## **Correct Routing of the Seat Belts**



Ensure the seat belt is correctly positioned on the body, NEVER cross the neck or abdomen, NEVER pass the seat belt behind the back or under the arms.

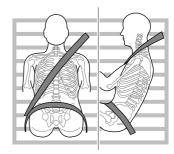

When wearing seat belts, the lap belt section should be positioned as low as possible across your hips. NEVER cross the abdomen. In the event of a collision, the lap belt can apply a force on the hips and reduce the possibility of

you slipping under the lap belt. If you slip under the lap belt, the belt will apply force on your abdomen, which may cause serious or fatal injuries. The diagonal section of the belt should cross the middle of the shoulder and the chest. In the event of emergency braking or collision, the diagonal section of the belt will be locked. NEVER position a seat belt across your neck, across the body under your arms or behind your back.

To ensure that the seat belts always provide maximum protection, ensure the belt is flat, not loose and contacts the body.

### Upper Anchorage Height Adjustment




During driving, DO NOT adjust the height of seat belt.



Ensure the fixing point of seat belt is adjusted to the proper height and locked before driving, otherwise injury or even death may occur in collision accidents.

The vehicle is equipped with an adjustable upper fixing point on the driver and passenger seat belts. Adjust the height so that the diagonal section of the belt crosses the middle of the shoulder. The seat belt should be positioned away from the neck and head and in a manner where the occupant cannot slide under the belt. incorrect positioning will reduce the efficiency of the seat belt in the event of a collision or emergency braking.

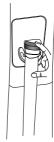

Adjusting the seat belt fixing point correctly.

I Hold the seat belt.

- 2 Press release button and move the height adjuster to desired position. Move the adjuster by pushing the slider.
- 3 After moving the adjuster to desired position, release the button and try to move the adjuster downward to determine whether it is locked in place. The adjuster must be locked in place prior to use.

### **Seat Belts During Pregnancy**

Wearing correctly positioned seat belts will provide protection for both mother and unborn child in the event of a collision or emergency braking.



The diagonal section of the seat belt should pass across the chest as normal, the lap section of the belt should pass below the belly, low and snug on the hip bones. NEVER position the belt on or above the belly.

Please consult your physician for further details.

#### Seat Belts and Disabilities

It is a legal requirement that all occupants wear seat belts, this include people with disabilities.

Depending upon the disability, consult your physician for further details.

#### Children and Seat Belts



Proper protection measures must be taken for children during driving.

For safety reasons, children shall ride in child restraint device fixed to the rear seat.

#### Infants



Only recommended child restraints suitable for the age, height and weight of the child should be used.



NEVER carry a child or infant with your arms during driving. When collision accidents occur, the weight of child will produce so great force that you can not hold the child. The child will be thrown forward and suffer serious injury or even death.

The seat belts fitted to your vehicle are designed for adults, they are not suitable for children. In the event of an accident or collision the children are not secure, it could cause death or serious injury.

Infants MUST use a suitable child restraint device. Please consult the child seat manufacturers guide lines when selecting the correct seat. Follow the manufacturers instructions on installation. Please refer to "Child Restraints" in this chapter for more details.

#### Older Children



NEVER share a seat belt amongst children. In the event of an accident or collision the children are not secure, it could cause death or serious injury.



As children grow and become older/larger it will get to the stage when they no longer require child seat restraints, at this point they will require use of the vehicle standard seat belt. Please ensure the seat belt is correctly positioned on the body of the child.

When fastening a seat belt for a child always check it for correct positioning. Adjust the height of seat belt to ensure the shoulder belt is kept away from the child's face and neck. Position the lap belt across the hips as low as possible, and tighten adequately. Correct positioning means that the seat belts can pass the applied force to the strongest part of child's body in accidents.

If the shoulder belt is too close to child's face or neck, it may be necessary to use a child booster cushion (always ensure that it meets any relevant laws or standards.

#### Seat Belt Pre-tensioners



The seat belt pre-tensioners will only be activated once and then MUST BE REPLACED. Failure to replace the pre-tensioners will reduce the efficiency of the vehicle's restraint system.



If the pre-tensioners have been activated, the seat belts will still function as restraints, and must be worn in the event that the vehicle remains in a drivable condition. The seat belt pre-tensioners should be replaced at the earliest opportunity by an MG Authorised Repairer.

The vehicle is fitted with seat belt pre-tensioners, these are designed to retract the seat belts and work in conjunction with the airbags in the event of a severe collision. They are designed to retract the seat belt and 'secure' the occupant in the seat

The airbag warning light on the instrument pack will alert the driver to any malfunction of the seat belt pretensioners.(see 'Warning Lights and Indicators' in the 'Instruments and Controls' chapter).

The seat belt pre-tensioners can only be activated once, after activation they must be replaced. This may also involve replacement of other SRS components. Please refer to 'Replacing Airbag System Parts'.

#### **IMPORTANT**

- Seat belt pre-tensioners will not be activated by minor impacts.
- The removal or replacement of a pre-tensioner must be carried out by the manufacturer trained, dealer technicians.
- 10 years from the initial date of registration (or installation date of a replacement seat belt pre-tensioner), some components will need to be replaced. The appropriate page of the Service Records must be signed and stamped once the work has been completed.

# **Seat Belt Checks, Maintenance and Replacement**

#### **Seat Belt Checks**



Split, worn or frayed seat belts may not function correctly in the event of a collision, if there are any signs of damage, replace the belt immediately.



Always ensure the red release button on the seat belt buckle is pointing upwards to ensure easy release in the event of an emergency.

Please follow the instructions below to check the seat belt warning lamp, seat belt, metal tab, buckle, retractor and fixing device regularly:

- Insert the seat belt metal tab into the corresponding buckle and pull seat belt webbing close to the buckle quickly to check that the belt clasp locks.
- Hold the metal tab and pull the seat belt forward quickly to check that the seat belt reel locks automatically, preventing the webbing from extending.

- Fully extract the seat belt and visibly examine for twists, fraying, splits or worn areas.
- Fully extract the seat belt and allow to return slowly to ensure continual and complete smooth operation.
- Visibly examine the seat belt for missing or broken components.
- Ensure the seat belt warning system is fully functional.
   If the seat belt fails any of the above tests or inspections contact an MG Authorised Repairer immediately for repairs.

#### Seat Belt Maintenance



DO NOT attempt to remove, install, modify, disassemble or dispose of the seat belts. Have any necessary repairs carried out by your MG Authorised Repairer. Inappropriate handling may lead to incorrect operation.



Ensure no foreign or sharp objects become lodged in the seat belt mechanisms. DO NOT allow liquids to contaminate the seat belt buckle, this could affect the buckle engagement.

Seat belts should only be cleaned with warm soapy water. DO NOT use any solvent to clean the seat belt. DO NOT attempt to bleach or dye the seat belt, it may weaken the seat belt. After cleaning, wipe with a cloth and allow to dry. DO NOT allow the seat belt to fully retract before it is completely dry. Keep seat belts clean and dry.

If there are contaminants accumulated in the retractor, the retraction of the seat belt will be slow. Please use a clean and dry cloth to remove any contaminants.

#### **Replacing Seat Belts**



Collision accidents may damage the seat belt system. The seat belt system may not be able to protect users after damage which may result in serious injury or even death. After an accident, seat belts should be checked and replaced as needed immediately.

Seat belts should not require change after minor collisions, however, some other parts of the seat belt system may require attention. Please consult an MG Authorised Repairer for advice.

# Airbag Supplementary Restraint System

#### Overview



The airbag SRS provides ADDITIONAL protection in a severe frontal impact only. It does not replace the need, or requirement to wear a seat belt.




The airbags together with the seat belts provide optimum protection for adults, but it is not the case for infants. The seat belt and airbag systems in the vehicle are not designed for protecting infants. The protection required by infants should be provided by child restraints.

The Airbag Supplementary Restraint System generally consists of:

- · Front Airbags (fitted to the centre of the steering wheel and dashboard above the glove compartment)
- · Seat Side Airbags (fitted to the outer side of the seat squab)

· Side Head Impact Protection Airbags (fitted behind the headlining)

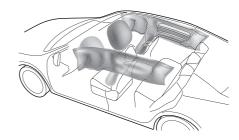

In the corresponding place where airbags are fitted, there is a warning sign stating 'AIRBAG'.

## Airbag Warning Light



The airbag warning light is located in the instrument pack. If this lamp does not extinguish or

illuminates during driving, it indicates that there is a failure in the SRS or seat belt. Please consult an MG Authorised Repairer at the earliest opportunity. An SRS or seat belt fault may mean the components may not be deployed in the event of an accident.

## **Airbag Deployment**



Front seat passengers should not place feet, knees or any other part of the body in contact with, or in close proximity to a front airbag.



To minimise the risk of accidental injury from inflating airbags, seat belts should be worn correctly at all times. In addition, both driver and front seat passenger should adjust their seat to provide sufficient distance from the front airbags. If side airbags/side head impact protection airbags are fitted, both driver and front seat passenger should be seated to maintain sufficient distance from the upper part of the body to the sides of the vehicle, this will ensure maximum protection when the side airbags/side head impact protection airbags are deployed.



When airbags are deployed, children without proper protection may suffer from serious injury or even death. DO NOT carry children in the arms or on the knees during traveling. Children should wear seat belts suitable to age. DO NOT lean out of windows.



An inflating airbag can cause facial abrasions and other injuries if the occupant is too close to the airbag at the time of its deployment.



DO NOT affix or place any objects on, or adjacent to the airbags. This may affect the airbag passage or create projectiles that may cause injury or serious harm in the event of airbag deployment.



After deployment the airbag components become very hot. DO NOT touch any airbag related components, it may cause burns or serious injury.



DO NOT knock or strike the position where airbags or related parts are located, so as to avoid accidental airbag deployment which may cause serious injury or even death.

In the event of a collision, the airbag control unit monitors the rate of deceleration or acceleration induced by the collision, to determine whether the airbags should be deployed. Airbag deployment is virtually instantaneous and occurs with considerable force, accompanied by a loud noise

Provided the front seat occupants are correctly seated and with seat belts properly worn, the airbags will provide additional protection to the chest and facial areas in the event of the car receiving a severe frontal impact.

Side airbags and side head impact protection airbags are designed to offer additional protection to the side of the body facing the impact, if a severe side collision occurs.

#### **IMPORTANT**

- Airbags can not protect lower body parts of passengers.
- Airbags are not designed for rear collision, minor frontal or side impacts, or if the vehicle overturns; nor will it operate as a result of heavy braking.
- Deployment and retraction of the frontal and side airbags takes place very quickly and will not protect against the effects of secondary impacts that may occur.
- When an airbag inflates, a fine powder is released.
  This is not an indication of a malfunction, however,
  the powder may cause irritation to the skin and
  should be thoroughly flushed from the eyes and any
  cuts or abrasions of the skin.
- After inflation, front and side airbags deflate immediately. This provides a gradual cushioning effect for the occupant and also ensures that the driver's forward vision is not obscured.

## Front Airbags



NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur. Refer to 'Disabling the Passenger Airbag'.



Front seat passengers should not place feet, knees or any other part of the body in contact with, or in close proximity to a front airbag.



In extreme cases driving on very uneven surfaces may cause airbag deployment. Please take extra care when driving on uneven roads.

Airbags are designed to deploy during serious impacts, the following conditions may cause airbag deployment.

- A frontal collision with unmovable or non deformable solid objects at a high speed.
- Conditions that can cause serious chassis damage, such as a collision with kerbstones, road edges, deep ravines or holes.

#### Seat Side Airbags



The manufacture and material of the seat is critical to the correct operation of side airbags. Therefore, please DO NOT fit seat covers which may affect side airbag deployment.

In the event of a serious side impact, the relevant side airbag will deploy (only the affected side).

 The airbag will be deployed in the event that the side of the vehicle is impacted with a solid object or another vehicle

#### **Side Head Impact Protection Airbags**

In the event of a serious side impact, the relevant side curtain airbag will deploy (only the affected side).

 The side curtain airbag will be deployed in the event that the side of the vehicle is impacted with a solid object or another vehicle.

# Conditions in Which Airbags Will Not Deploy

The deployment of airbags does not depend on the vehicle speed, but on the object that the vehicle hits, angle of impact and the rate at which the car changes speed as a result of a collision. When the impact force of collision is absorbed or dispersed to vehicle body, airbags may not deploy; however, airbags may sometimes deploy according to impact condition. Therefore, the deployment of airbags shall not be judged based on the severity of vehicle damage.

#### Front Airbags

Under certain conditions the front airbags may not be deployed. Some examples are listed below:

- The impact point is not central to the front of the vehicle.
- The impact is not of sufficient force (the impact is with an object that is not solid, such as a lamp post or central barriers).
- The impact area is high (collision with the tailgate of a truck).
- · Impacts to the rear or side of the vehicle.

- · The vehicle rolling over.
- · Frontal collision at an angle with guard bars.

# Seat Side Airbags and Side Head Impact Protection Airbags

Under certain conditions the seat side and side head airbags may not be deployed. Some examples are listed below:

- Side impacts at certain angles.
- · Light side impacts such as a motorcycle.
  - Impacts that are not central to the side of the vehicle, either too far toward the engine compartment or the loadspace.
- · The vehicle rolling over.
- · Frontal collision at an angle with guard bars.
- The angled impact is not of sufficient force (the impact is with an object that is not solid, such as a lamp post or central barriers).
- The impact is not of sufficient force (with another vehicle, stationary or moving).
- The impact is from the rear of the vehicle.

## Disabling the Passenger Airbag



The passenger airbag switch is located in the right fascia panel end cover trim. Insert the key and rotate the switch to the on or off position to enable or disable the passenger airbag.

Note: The Passenger Airbag should only be disabled when a rear facing child seat is fitted to the front passenger seat.

Note: When an adult is seated in the front passenger seat, ensure that the airbag is switched on.



When the switch is turned to the ON position, the ON indicator light (located in the PAB display panel in the lamp assembly ) illuminates, this indicates that the passenger airbag is enabled.

The passenger airbag status light is located in the roof mounted interior lamp assembly. The shape of the lamp assembly varies according to the configuration of the vehicle.

When the switch is turned to the OFF position, the OFF indicator light (located in the PAB display panel in the lamp assembly) illuminates, this indicates that the passenger airbag is disabled.

## Service and Replacement of Airbags

#### Service Information



DO NOT install or modify the airbag. Any changes to the vehicle structure or airbag system wiring harness are strictly prohibited.



Changes to vehicle structure is prohibited. This may affect the normal operation of the SRS.



DO NOT allow these areas to be flooded with liquid and DO NOT use petrol, detergent, furniture cream or polishes.



If water contaminates or enters the SRS it may cause damage and affect deployment. In this case contact an MG Authorised Repairer immediately.

To prevent damage to the airbag SRS, the following areas should be cleaned sparingly with a damp cloth and upholstery cleaner ONLY:

- · Steering wheel centre pad.
- · Area of dashboard containing the passenger airbag.
- Area of roof lining and front pillar finishers which enclose the side head impact protection modules.

If the airbag warning lamp fails to illuminate, stays on, or if there is damage to the front or side of the vehicle, or the airbag covers show signs of damage, contact an MG Authorised Repairer immediately.

#### **IMPORTANT**

- The removal or replacement of an airbag module should be carried out by an MG Authorised Repairer.
- After 10 years from the initial date of registration (or installation date of a replacement airbag), some components will need to be replaced by an MG Authorised Repairer. The appropriate page of the Service Records must be signed and stamped once the work has been completed.

## **Replacing Airbag System Parts**



Even if the airbag does not deploy, collisions may cause damage to SRS in the vehicle. Airbags may not function properly after damage, and can not protect you and other passengers when a second collision occurs, which may cause serious injury or even death. To ensure that SRS can function properly after collision, please go to an MG Authorised Repairer to check airbags and repair as necessary.

Airbags are designed for using once only. Once the airbag is deployed, you must replace SRS parts. Please go to an MG Authorised Repairer for replacement.

## Disposal of Airbags

When your vehicle is sold, ensure that the new owner knows the vehicle is equipped with airbags, and is aware of the replacement date of SRS.

If the vehicle is scrapped, the undeployed airbags may have potential risks, therefore, before the disposal, they must be deployed safely in a certain environment by a professional from an MG Authorised Repairer.

#### **Child Restraints**

# Important Safety Instructions about Using Child Restraints

It is recommended that children below the age of 12 years old should be seated on the rear seat of the vehicle, in a child restraint system appropriate to the children's weight and size. Infants less than 2 years old should be restrained in an infant child restraint system.

It is recommended that a child restraint system that complies with UN ECE-R44 or ECE-R129 standard are fitted in this vehicle. Check markings on the child restraint system.

There are a number of child restraint systems available of different type and specification. For optimum protection, it is recommended that you choose restraint systems appropriate to the child's age and weight.

It is important to comply with installation instructions supplied by the child restraint manufacturer and that child restraint system is properly secured to the vehicle. Failure to follow these instructions may cause death or serious injury to the child in an event of a sudden stop or accident.

- All occupants, including children must wear seat belts or use an appropriate child restraint.
- MG strongly recommends that children under 12 years
  of age or less than 1.5 metres tall should use the
  appropriate child restraint fitted to the rear seat.
- · Only one child can be carried in any one restraint.
- Do not put the child on the lap or in arms when sitting in any seat.
- Always adjust the seat back rest to a proper position and ensure it is locked in position when installing a child seat or restraint.
- If installing a rear facing child restraint to the rear seat, the corresponding front seat should be adjusted forward; if installing a forward facing child restraint to the rear seat, you may need to adjust the height of the headrest to the lowest; if installing a forward facing child restraint to the front seat, you may need to remove its headrest.
- Never let your child stand or kneel on the seat during driving.
- Always ensure the child is seated correctly in the child restraint.

- The ways of using seat belts have a great influence on the maximum protection offered by the seat belt, you must comply with the child restraint manufacturer's instructions on proper use of seat belts. If seat belts are not properly fastened, a minor traffic accident may also lead to injury.
- Child restraints that are not fitted correctly may move and injure other occupants in the event of an accident or emergency braking. Therefore, even if there is no infant or child in the child restraint, it also should be fitted properly and securely in the vehicle.

# Warnings and Instructions on Use of Child Restraint on Front Passenger Seat





NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.



In cases where there is a need to install a rear facing child restraint on the front passenger seat, use the key to deactivate the front passenger airbag function, or severe injury or even death can occur.



Once the child restraint is removed from the front passenger seat, use the key to reactivate the front passenger airbag.



When installing a child restraint on the front passenger seat, move the front passenger seat as far rearward as possible.



Use one child restraint per child.

Please study the safety warning label on the sun visor. Where possible always install child restraints on the rear seat. If it is necessary to install a child restraint on the front seat please observe the warnings above.

### Children's Safety and Side Airbags



Children should not be allowed in areas where airbags may be deployed, there is a risk of serious injury.



Only recommended child restraints suitable for the age, height and weight of the child should be used.



DO NOT place any items in areas where airbags may be deployed, there is a risk of serious injury.

In the event of a side collision, the side airbags can provide better protection for the passenger. However, when the airbag is triggered a very strong expansion force is generated, if the passenger's seating position is not correct, the airbags or items in the side airbag deployment area may cause injury.

When the correct child restraint is used to secure the child properly in the rear seat and the child's seating position is correct, there is enough space between the child and the side airbag deployment region for the airbag to deploy without any hindrance, and thus provide the best protection.

## **Child Restraints Groups**

### Secured Using 3 Point lap Diagonal Belts



Please DO NOT put the rear facing child restraint in the front passenger seat, this may cause serious injury or even death.



It is recommended that children should always be seated in the rear of the vehicle in a child restraint or restraint system, and fixed with 3 point, lap diagonal seat belts.

#### ISOFIX Child Restraint Systems



The ISOFIX anchorages in the rear seat are designed for use with ISOFIX systems only.



Child restraint anchorages are designed to withstand only those loads imposed by correctly fitted child restraints. Under no circumstances are they to be used for adult seat belts, harnesses, or for attaching other items or equipment to the vehicle.


Note: When installing and using any child restraint system, always follow the manufacturer's instructions.

Note: The rear seats fitted to this vehicle are provided with the ISOFIX interface (as indicated by the arrow in the following image), these are designed to connect to an ISOFIX child seat.

- I Fasten vehicle-approved ISOFIX child restraint systems to the mounting brackets.
- 2 When using ISOFIX mounting brackets for seat mounting, universally approved child restraint systems for ISOFIX may be used.

Note: When using seat mounting, universally approved child restraint systems, top tether must be used.


Note: Please refer to the child restraint system manufacturer's instructions for details.

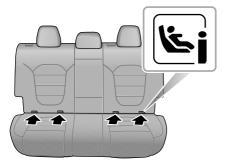

3 To fasten the top tether strap of the child restraint system, route the tether strap under the head restraint and attach to the anchorage hook being careful not to twist the strap. If not using ISOFIX lower anchorages, using the seatbelt, complete the installation in line with the child restraint manufacturers instructions.

4 After installation apply suitable force to ensure the restraint is securely fastened.

Note: When installing and removing any child restraint system, always follow the manufacturer's instructions.

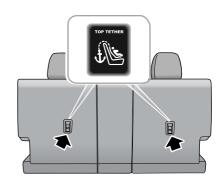

## **Approved Child Restraint Positions**

It is recommended that a child restraint system that complies with UN ECE-R44 or ECE-R129 standard are fitted in this vehicle. Check markings on the child restraint system.

#### **Approved Child Restraint Positions (for non ISOFIX Child Restraints)**

Mass Group	Seating Positions					
	Front	Rear Outboard	Rear Middle			
	With Front Passenger Airbag OFF Switch					
	Airbag ON	Airbag OFF				
0 group (less than 10 kg)	×	U	U	υ		
0+ group (less than 13 kg)	×	U	U	υ		
I group (9 ~ 18 kg)	×	U	U	υ		
II group (15 ~ 25 kg)	X	U	U	U		
III group (22 ~ 36 kg)	×	U	U	υ		

Note: Description of letters in the table:

U = Suitable for universal child restraint systems approved for this mass group;

X = Seat position not suitable for child restraint systems in this mass group.

130

#### **Approved Child Restraint Positions (for ISOFIX Child Restraints)**

Seating Position		Mass group categories				
		0 group	0+ group	l group		
		Rear facing		Forward facing	Rear facing	
		Up to 29 lbs(13 kg)		20–40 lbs(9 ~ 18 kg)		
Front Passenger	Size Class	Not ISOFIX aguirond				
Seat	Seat Type	Not ISOFIX equipped				
Rear Outboard Seat ISOFIX	Size Class	C , D , E <sup>I</sup>		A , B , BI <sup>I</sup>	C , D <sup>I</sup>	
	Seat Type	IL	2	IL,IUF	IL	
Rear Centre Seat	Size Class	Not ISOFIX equipped				
	Seat Type					

Note: IL Suitable for particular ISOFIX child restraints systems of the semi-universal category. Please consult child restraints systems suppliers' vehicle recommendation lists;

IUF Suitable for ISOFIX forward facing child restraints systems of universal category approved for use in this mass group and ISOFIX size class;

1. The ISOFIX size class for both universal and semi-universal child seat systems is defined by the capital letters grade A ~ G. These identification letters are displayed on the ISOFIX child seat;

- 2. At time of publishing the recommended Group 0+ ISOFIX baby safety seat is the Britax Romer Baby Safe Plus;
- <sup>3</sup>. At time of publishing the recommended Group I ISOFIX child seat is the Britax Romer Duo.
- <sup>4</sup>. At time of publishing the recommended Group II-III ISOFIX child seat is the KidFix II XP SICT and KidFix<sup>2</sup> R.

#### Table of I- Size child seats

The table gives a recommendation for which I- Size child seats suit which locations, and for what size of child.

The child seat must be approved in accordance with UN Reg R129.

Type of child seat	Front passenger seat	Rear outboard seats	Rear centre seat
I- Size child restraint systems	X	I-U	X

Note: I-U Suitable for use with forward and rear facing I- Size child restraint systems.

X Not suitable for use with I- Size restraint systems.

#### Group 0/0+ Child Restraint



When the front passenger airbag is active, never place a rear facing child restraint on the front passenger seat, severe injury or even death can occur.



Child restraints that can be adjusted to lying position are most suitable for infants who are lighter than 10 kg (normally for those younger than 9 months) or those who are lighter than 13 kg (normally for those younger than 24 months).

#### **Group I Child Restraint**



When the front passenger airbag is active, never place a rear facing child restraint on the front passenger seat, severe injury or even death can occur.



Backward/forward child restraints are most suitable for infants whose weight is  $9 \sim 18$  kg (normally for those older than 9 months and younger than 4 years old).

#### **Group II Child Restraint**



The diagonal section of the seat belt should pass across the shoulder and upper body, away from the neck. The lap section of the belt should pass across the hips, away from the abdomen.



The combination of child restraint and 3 point lap diagonal seat belt is most suitable for children whose weight is  $15 \sim 25$  kg (normally for those older than 3 years old and younger than 7 years old).

#### **Group III Child Restraint**



The diagonal section of the seat belt should pass across the shoulder and upper body, away from the neck. The lap section of the belt should pass across the hips, away from the abdomen.



The combination of child booster seat and vehicle 3 point lap diagonal seat belt is most suitable for children whose weight is  $22 \sim 36$  kg and whose height is below 1.5 m (normally for those about 7 years old or those older than 7 years old).

- 136 Keys 139 Child Proof Locks 140 Alarm Systems 149 Starting and Stopping Power System 153 Pedestrian Alert Control System 154 Economical and Environmental Driving 157 Catalytic Converter 159 Fuel System 162 Vehicle Hybrid Control 163 Charging Requirements 173 Flectric Drive Transmission 181 Brake System 194 Tyre Pressure Monitoring System (TPMS)
- 195 Adaptive Cruise Control System \*
- 206 Parking Aid System
- 210 Rear Driver Assistance System \*
- 217 Driving Assist System
- 245 Load Carrying

## **Keys**

#### Overview



Please keep the spare key in a safe place - not in the car!




It is recommended that spare keys are not kept on the same key ring, since this may cause interference, prevent correct key recognition and therefore prevent the correct operation of the vehicle power system.



The smart key contains delicate circuits and must be protected from impact and water damage, high temperature and humidity, direct sunlight and the effects of solvents, waxes and abrasive cleaners.

Your vehicle is supplied with two smart keys, each one contains a back up mechanical key blade, this will operate the driver door mechanical lock. The smart keys supplied are programmed to the security system on the car, any key that is not programmed to the car will not operate the keyless entry function or the vehicle immobiliser.

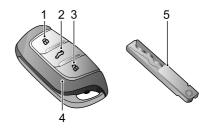

- I Lock Button
- 2 Tailgate Button
- 3 Unlock Button
- 4 Smart Key
- 5 Mechanical Key

The smart key only works within a certain range. Its working range is sometimes influenced by the key battery condition, physical and geographical factors. For safety consideration, after you lock your vehicle using the smart key, please recheck to ensure the vehicle is locked.

If your key is lost/stolen or broken, a replacement can be obtained from an MG Authorised Repairer. The lost/stolen key can be deactivated. If the lost key is found, an MG Authorised Repairer can reactivate it.

Note: Any key made independently outside of MG Authorised Repairer Network may not allow your car to enter READY mode, and may affect the safety of your car. To obtain a suitable key replacement, it is recommended that you contact an MG Authorised Repairer.


Note: The new key cannot be offered to you immediately because it requires programming to the vehicle by the MG Authorised Repairer.

Note: When operating your vehicle with the smart key, avoid placing it near any devices with strong radio interference (such as notebook computers and other electronic products), the normal function of the key may be affected.

## Replacing the Battery

Please use the picture guide to replace the smart key battery if any of the following conditions occur:

- The smart key locking/unlocking function range is reduced:
- The display screen shows "The power of the smart key is low, please replace the battery".

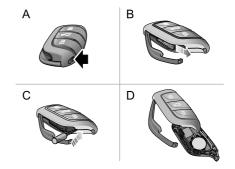

Press the button (A) on the smart key to eject the decorative trim

- 2 Remove the backup mechanical key (B) in the arrowed direction.
- 3 Using a suitable flat bladed tool, insert the tool into the side of the key (C), carefully prise off the battery cover and separate the upper and lower casings (D).
- 4 Remove the battery from the slot.
- 5 Put the new battery in the slot, and make sure it is in full contact with the slot.

Note: Make sure that the polarity of battery is correct ('+' side facing down).

Note: It is recommended to use a CR2032 battery.

- 6 Refit the cover and press tightly, ensuring the gap around the cover is even.
- 7 Refit the mechanical key, and close the decorative trim.
- 8 Set the vehicle power system to READY to resynchronise the key with the vehicle.


#### **IMPORTANT**

- Use of an incorrect or inappropriate battery may damage the smart key. The new replacement's rated voltage, sizes and specifications must be the same as the old one.
- · Incorrect fitting of the battery may damage the key.
- Disposal of the used battery must be strictly in accordance with relevant environmental protection acts.

#### Child Proof Locks



NEVER leave children unsupervised in the car.

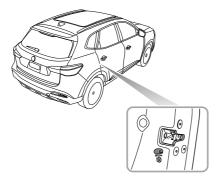

Steps for enabling or disabling the child proof locks are as follows:

 Open the rear door at corresponding side, move the child proof lock lever to the lock position in the direction of the arrow to engage the child proof lock;  Move the lever to the unlock position in the reverse direction of the arrow to disable the child proof lock.

With the child proof locks engaged, the rear doors cannot be opened from inside the car, but can be opened from outside the car.

## **Alarm Systems**

Your car is fitted with an body anti-theft system and power immobilisation system. To ensure maximum safety and operation convenience, we strongly recommend you to carefully read this chapter to fully understand the activation and deactivation of anti-theft systems.

#### **Power Immobilisation**

Power Immobilisation is designed to safeguard the vehicle from theft. The power immobilisation system can only be deactivated to start the car by using the matched key.

Press the START/STOP Switch, once a valid key is detected in the vehicle, immobilisation system will be deactivated automatically.

If the message centre displays "Smart Key Not Detected" or "Put Key Into Backup Position" or the power immobiliser system warning lamp illuminates, please put the smart key into backup position (refer to "Alternative Starting Procedure" in "Starting and Stopping the Power System" section), or try to use the spare key. If the car can still not be started, please contact an MG Authorised Repairer.

#### **Body Anti-theft System**

#### Locking and Unlocking

When the vehicle is locked, the indicator lamps will flash three times as confirmation; when it is unlocked, the indicator lamps will flash once.

#### Operation of Door Lock System (Key)

#### Key Locking

- Using the remote key to lock: press the lock button on the key to lock the car after closing the doors, bonnet and tailgate.
- Using the mechanical key to lock: partially operate
  the door release handle, using a suitable flat blade
  tool, insert the tool into the underside of the trim and
  carefully remove the door lock trim cover, insert the
  key into the driver door lock and turn clockwise to
  lock the car.

## Key Unlocking

 Using the remote key to unlock: press the unlock button on the key to unlock the car.

 Using the mechanical key to unlock: partially operate the door release handle, using a suitable flat blade tool, insert the tool into the underside of the trim and carefully remove the driver door lock trim cover, insert the key into the driver door lock and turn counterclockwise to unlock the car.

Note: If the START/STOP Switch is not placed in ACC or ON/READY position or the remote key unlock is not activated within 15 seconds after the vehicle is unlocked with the mechanical key, the immobiliser alarm will be triggered.

Note: If no panels are opened within 30 seconds after the vehicle is unlocked by using the remote key, all doors will automatically re-lock.

#### Operation of Door Lock System (Keyless)

The keyless entry system can lock and unlock the doors or open the tailgate as long as you carry the smart key and approach to the car.

#### **IMPORTANT**

The smart key must be within 1.5 metres of the vehicle for the keyless system to operate correctly


#### **Keyless Locking**

After switching the vehicle power system to OFF using the START/STOP Switch and exiting the car, press the door handle button once before moving away from the car to lock all doors and tailgate (no need to press the lock button on the key). Note, this will also arm the alarm and immobilise the vehicle.

#### **Keyless Unlocking**

Press the button on the front door handle once to unlock the car, then pull the door handle to open the door.

Note: When the vehicle is locked, if you are within the smart key range and operate the door handle button, but carry out no further action, after 30 seconds the vehicle will automatically re-lock itself to remain secure.

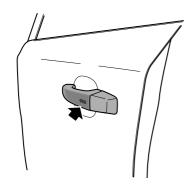

#### **IMPORTANT**

After the door is locked by using the key, press the button on the door handle to unlock the car. If the car cannot be unlocked or locked normally, seek an MG Authorised Repairer.

#### Mislock

If the driver's door is not fully closed when the smart key lock button is pressed, or the vehicle power system has not been switched OFF, the vehicle horn will sound once, indicating a mislock. In this case, none of the doors will lock, the alarm system will not be armed and the direction indicator lights will not flash.

If locking operation is performed when the driver's door is closed but the passenger's door or bonnet and tailgate are not fully closed, the vehicle horn will sound once, indicating a mislock. In this case, the 'partial arming' attributes of the body anti-theft system will enable (all fully closed doors, bonnet or tailgate apertures will be protected, but an open aperture will not!) . As soon as the open aperture is closed, the system will automatically revert to an armed state; If the remote key is placed (or left) in the vehicle again, the vehicle will automatically unlock when the open aperture is closed.


Note: When the vehicle is locked, only unlock and open the tailgate, put the remote key back into (or left behind) the vehicle, and close the tailgate. At

this time, the tailgate will automatically pop open and cannot be closed.

#### **Anti-Theft Alarm Sounder**

If the anti-theft alarm has been triggered, the car horn will sound continuously. Press the UNLOCK button on the key, the anti-theft alarm will be deactivated.

#### Interior Lock and Unlock Switch

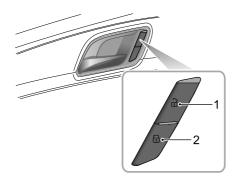

- Unlock Switch
- 2 Lock Switch

When the body anti-theft system is not in operation, press the lock switch (2) after closing all doors to lock all doors; press the unlock switch (1) to unlock all doors.

Note: If the body anti-theft system is switched on, pressing the lock/unlock switch will not lock/unlock the doors but will trigger the alarm system.

If the doors, bonnet and tailgate are closed, press the interior lock switch, the yellow indicator on the interior lock switch illuminates.

If a mislock is caused by non-driver door, tailgate or bonnet, press the interior lock switch, the yellow indicator on the interior lock switch illuminates.

#### Interior Door Handles

Pull the interior door handle to unlock and open the door.

#### Speed Lock

All the doors will be locked automatically when the road speed exceeds 15 km/h.

#### Automatic Unlock

When the vehicle power system is switched to the OFF position, all the doors will be unlocked automatically.


## Manual Tailgate \*



If the tailgate can not be closed due to the type of cargo loaded, be sure to close all windows during driving, select the face distribution mode of the air condition, and set the blower to maximum speed, so as to decrease exhaust fumes entering the vehicle.

The manual tailgate can be opened using the following 2 methods:

- I When the car is unlocked or the matched key appears within Im range around the tailgate, directly press the open switch on the tailgate to open the tailgate (A).
- 2 Press and hold the tailgate open button (B) for more than 2 seconds to unlock and release the tailgate, the tailgate can then be manually lifted open.

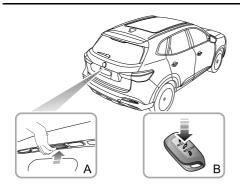

## Electric Tailgate \*



If the tailgate can not be closed due to the type of cargo loaded, be sure to close all windows during driving, select the face distribution mode of the air condition, and set the blower to maximum speed, so as to decrease exhaust fumes entering the vehicle.




Before operating the electric tailgate, ensure no persons, animals or obstructions are within the direct vicinity of the tailgate, they may become trapped between the tailgate and a vehicle or the tailgate and an obstacle. Ensure any items carried in the rear of the vehicle have adequate clearance from the tailgate when closing.

Electric tailgate can be operated only when the vehicle is in P gear.

Whilst the electric tailgate is operating the system will emit an audible warning.

## Electric Tailgate Open/Close Mode

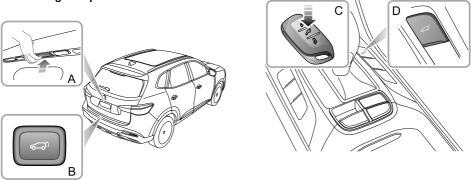

Electric tailgate can be opened or closed using the following methods:

- I Open/Close from outside: When the vehicle is unlocked or matched key appears within I m range around the tailgate, press button A to open the tailgate, press button B to close.
- 2 **Open/Close by smart key**: When START/STOP Switch is in the OFF position, press and hold the tailgate button C on the smart key to automatically open or close the tailgate.
- 3 **Open/Close from inside**: Press and hold the tailgate switch button Don centre console to automatically open or close the tailgate. (If the vehicle is locked from the outside, switch button D will not operate.)

Note: In certain conditions where the vehicle has been stopped or parked on an extreme incline, the tailgate may can not be electrically opened or fully closed due to the change of centre-of-gravity position.

If the tailgate fails to fully open to it's preset height, or fully close, carry out a manual operation to close the tailgate, this will restore the electric tailgate operation.

Note: During manual operation of the electric tailgate, avoid violent or rapid operation, failure to follow these instructions may result in damage to the power tailgate system.

When the tailgate is fully closed it will lock in position using the electronic catch.

#### **Anti-pinch Function**

Whilst opening the tailgate: In cases where an object that interferes with the tailgate operation is detected, the tailgate will stop opening and return to a safe angle automatically where the obstruction/s can be removed.

Whilst closing the tailgate: In cases where an object that interferes with the tailgate operation is detected,

the tailgate will stop closing and return to a safe angle automatically where the obstructions can be removed.

Note: If the anti-punch function has been activated multiple times in a brief period, the system will suspend the electric opening/closing function for protection. In this situation, the tailgate can be fully closed once manually so as to reset the function of electric tailgate.

Note: If the tailgate is frequently operated in a short period, the system thermal protection may be triggered, causing the electric opening/closing function to be temporarily unavailable. Operation will be suspended for a preset time limit.

#### Setting Opening Height for Electric Tailgate

Users can set the opening height of electric tailgate as needed by using the Close button on the tailgate or Infotainment screen. The electric tailgate controller will record the new opening height.

Note: The opening height setting values of the electric tailgate must be between 40% and 100% of its total stroke.

#### Setting mode 1:

- I Place the tailgate to desired setting height, and keep it stationary.
- 2 Press and hold the Close button on the tailgate for a minimum of 3 seconds. A buzzer will sound to indicate the successful setting.

#### Setting mode 2:


Turn on the Infotainment system, enter the height setting interface for the electric tailgate under "Setting" menu, and move the height setting slider to desired position.

Note: If an electric tailgate system failure occurs, a relevant warning message "Power Liftgate System Fault" and icon will be displayed in the message centre of the instrument pack, please consult an MG Authorised Repairer.

#### Tailgate Emergency Open

The tailgate emergency opening mechanism is located inside the tailgate as part of the catch.

Fold down the rear seat to gain access, remove the blanking plug, insert a suitable tool into the opening slot and release the tailgate lock.

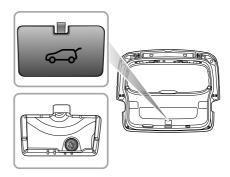

# Starting and Stopping Power System START/STOP Switch



The keyless START/STOP Switch is located in the fascia to the right of the steering column, it is a push button style switch. To operate the switch the smart key must be inside the vehicle.

The operational status displays are as follows:

Indicator Off (OFF)

If the switch has not been operated and there are no indicators illuminated, the power system is OFF. The power seats and electric door mirrors remain operational.

#### Yellow Light (ACC)

Pressing the START/STOP Switch without the footbrake being applied whilst the vehicle power system is OFF will place the system in the ACC state, this will illuminate the yellow indicator in the switch button. The ACC position allows operation of certain ancillaries such as power windows.

#### Green Light (ON/READY)

- Whilst in the ACC state, pressing the START/STOP Switch without the footbrake being applied will place the system in the ON state, the green indicator will illuminate. This will allow the remaining electrical systems to operate.
- Pressing the START/STOP Switch with P selected and the footbrake applied will place the vehicle in the READY state, the green indicator will illuminate and the word READY will appear in instrument panel information display. This indicates that all electrical

systems will operate and the vehicle is ready to be driven.

Note: Whilst in the OFF state, if the driver exits the vehicle leaving the smart key inside and closes the driver's door, subsequent re-opening of the driver's door will cause a buzzer to sound and display a warning message in the instrument pack message centre to indicate that the key is still in the car.

Note: To remove the electronic shift control lever from P the vehicle must be in an ON/READY state and the footbrake applied.

If your car is subject to strong radio signals the keyless entry and start systems may suffer from interference and not function correctly. Please see the 'Alternative Starting' procedure.

#### **READY Mode**

#### Setting the power system into READY mode:

- I Ensure all unnecessary electrical loads (inc AC) are switched off.
- 2 Ensure the parking brake is applied. (refer to "Brake System" of this chapter)
- 3 Ensure P or N is selected.
- 4 Press the brake pedal.
- 5 Press the START/STOP Switch (do not hold the button in, release immediately).
- 6 The green indicator will illuminate and READY will be displayed in the instrument pack message centre.

#### **Cold Climates**

In temperatures of - $10^{\circ}$ C and below, engine cranking time will increase. It is essential that all unnecessary electrical equipment is switched off while cranking.

#### **IMPORTANT**

- If the vehicle will not enter a READY state, please check for any warning indicators or messages displayed in the instrument pack message centre. In extremely low temperatures please allow 5 minutes between power up attempts.
- In extremely low temperature, if the power system fails to start up for 3 successive attempts (Ready indicator of the power system fails to illuminate), it is recommended to turn off the power supply and wait for rescue.
- Do not leave the START/STOP Switch in an ACC or ON/READY state for long periods of time, excessive use of electrical equipment may lead to a discharged battery.
- The vehicle is fitted with an anti-theft system.
   Independently sourced keys may not allow vehicle entry and system power up. Any new keys will require programming using the manufacturers software.
- Your car is fitted with complex electronic control systems, please ensure that all other radio transmission or electromagnetic devices are kept away from the smart key and centre console cubby areas.
   They may cause interference and operational issues.

#### **Alternative Starting Procedure**



If the car is located in an area where there are strong radio signals causing interference or the smart key battery condition is low, please use the following steps to attempt to start the car:

I Place the smart key centrally in the centre console cup holder cubby box with the buttons facing upward - as shown in the illustration.

2 Ensure P or N is selected, press the brake pedal and then press the START/STOP Switch to start the power system.

If the vehicle power system cannot be changed after the car has left the area of strong radio interference or had the smart key battery replaced please consult an MG Authorised Repairer.

#### **IMPORTANT**

Application scope of alternative starting procedure:

- The Alternative Starting Procedure should only be required if the smart key battery is very low or flat.
- Once the vehicle has been removed from the area of excessive radio interference the keyless entry and Start Stop systems should return to normal.

#### Switching the Power System OFF

Setting the power system to OFF.

- I After bringing the car to a halt, ALWAYS maintain brake pedal application.
- 2 Apply the parking brake.
- 3 Place the shift lever in P position.
- 4 Press the START/STOP Switch to shut down the power system.

## **Pedestrian Alert Control System**

When the vehicle is running in pure electric mode at low speed, the system controls a speaker that sounds to remind pedestrians in the vicinity of your presence.

#### **Sound Strategies**

The speaker sounds when all of the following conditions are met:

- I The vehicle is READY;
- 2 The Pedestrian Alert System is fault free;
- 3 During acceleration, the vehicle speed is above 0 km/h and less than 30 km/h; during deceleration, the vehicle speed is greater than 0 km/h and less than, or equal to 25 km/h.

## **Economical and Environmental Driving**

#### Running-in

The engine, transmission, brakes and tyres need time to 'bed-in' and adjust to the demands of everyday motoring. During the first 1500 km, it is essential that you drive with consideration for the running-in process and heed the following advice:

- Do not allow the engine to exceed 3000 rpm in any gear or the vehicle speed to exceed 120 km/h.
- Do not operate at full throttle or allow the engine to labour in any gear.
- Do not drive at a constant speed (either high speed or low speed).
- · Avoid heavy braking where possible.

After 1500 km, engine speeds can be gradually increased.

#### **Environment Protection**

Your vehicle has been designed with the latest technology in order to minimize the environmental impact of exhaust emissions

#### **Economic Driving and Maintenance**

The following are some suggestions on saving fuel and extending the life of the vehicles.

- Maintain the correct tyre pressure; insufficient air pressure will accelerate tyre wear and waste fuel.
- Do not carry unnecessary weight. Heavy loads will increase the engine load resulting in higher fuel consumption.
- · Avoid engine idling for extended periods.
- Maintain slow and smooth acceleration and avoid harsh acceleration; change to a higher gear as soon as possible.
- Avoid labouring the engine or over running. Choose appropriate gears according to the road conditions.
- Avoid continuous acceleration or deceleration. A stop-go driving style will consume more fuel.
- Avoid unnecessary stopping and braking, maintain steady speed and attempt to anticipate traffic lights.

Note: Keep an appropriate distance from other vehicles to avoid emergency braking and reduce brake pad wear.

- Avoid traffic congestion and jam areas as much as possible.
- Anticipating obstructions and slowing down well in advance, avoids the need for unnecessary acceleration and harsh braking. A smooth driving style not only reduces fuel consumption, but can reduce the emission of noxious gases.
- Do not ride the brake pedal, this can cause premature wear, overheating and increased fuel consumption.
- Maintain an appropriate speed on the highway. Higher speeds use more fuel. Appropriate speed can save fuel.
- Maintain the correct wheel alignment. Avoid collision
  with the kerb and reduce speed on uneven road
  surfaces. Out of specification wheel alignment will not
  only lead to excessive tyre wear, but also increases the
  engine load and fuel consumption.
- Avoid driving on mud or beaches. This will prevent corrosion of the vehicle underside.
- Maintain the vehicle in accordance with MG recommendations. Dirty air filters, oil etc., will reduce the engine's performance and raise fuel consumption.

- Note: To extend the life of all components and reduce operating costs, regular MG Approved maintenance is needed.
- Do not stop the engine straight after high speed or long ascents or towing a trailer. Allow the engine to idle for 20 to 100 seconds depending upon driving loads and conditions. Avoid hard acceleration on a cold engine.

## **Driving in Special Environment**

#### Driving in Rain or Snow



Emergency braking, accelerating and steering on slippery roads will reduce the vehicle's handling performance and grip.

- When raining the windows may fog, reducing visibility (Use the Air-conditioning demist function).
- Grip will be reduced when it rains, so please reduce speed drive carefully.
- · Reduce speed when it rains.
- Avoid driving in high speed, because the film of water between the tyres and the road will affecting the steering and braking performance.

#### Driving through Water

Avoid driving through floods after heavy rain, which may lead to serious damage to the vehicle.

## **Catalytic Converter**



The temperatures of exhaust systems that contain particulate filters and catalytic converters can be extremely high, DO NOT park on ground where combustible materials such as dry grass or leaves could come into contact with the exhaust system - in dry weather a fire could result.



The exhaust system incorporates a catalytic converter, these help to convert poisonous exhaust emissions from the engine into environmentally less harmful gases. Catalytic converter is easily damaged through improper use, please observe the following precautions to minimise the chance of accidental damage.

#### Fuel

- · Use ONLY fuel recommended for your car.
- Never allow the car to run out of fuel this could cause engine misfire and serious damage to the catalytic converter.

#### **Engine Oils**

 It is strongly recommended that only oils that meet the manufacturers specification are used.

Note: Regular maintenance must be carried out in accordance with the schedule specified in the 'Service Portfolio'.

#### Starting

Pay attention to the following when starting the engine:

- Do not continue to operate the starter after a few failed attempts; consult an MG Authorised Repairer.
- Do not operate the starter if an engine misfire is suspected and do not attempt to clear a misfire by pressing the accelerator pedal.
- Do not attempt to push or tow start the car.

#### Driving

Please pay attention to the following conditions:

- Do not overload or excessively 'rev' of engine.
- Do not stop the engine when the car is in motion with D or a gear selected.

- Consult an MG Authorised Repairer if you think your car's oil consumption is abnormal.
- If a misfire is suspected, or the car lacks power while driving, provided the engine has reached its normal operating temperature, it may be driven SLOWLY (at risk of catalyst and particulate filter damage) to an MG Authorised Repairer.
- Do not drive on terrain likely to subject the underside of the car to heavy impacts.

Note: Any engine misfire, loss of engine performance or engine run-on, could seriously damage the catalytic converter. Any modifications to engine without being authorised is prohibited.

## Fuel System

#### **Fuel Requirements**




Use only the recommended fuel which meets national standard and is recommended by the manufacturer. Failure to use correct grade may result in serious damage to your vehicle's fuel system, engine and exhaust system.

Please refuel according to the information on the fuel refill label. For details, refer to "Main Parameters of Engine" in "Technical Data" chapter.

If a lower grade of fuel is used, an engine knocking noise may occur, please use the recommended grade fuel as soon as possible. If the engine knocking noise is still noticeable after using the recommended grade fuel, please contact MG Authorised Repairer immediately.

#### **Fuel Filler**

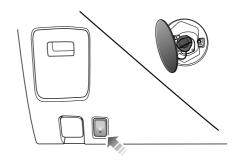

#### Fuel Filler Flap

Fuel filler flap is located at the left rear of the vehicle. The vehicle uses a high-pressure fuel tank system. The pressure in the fuel tank will be higher than atmospheric pressure. Before opening the fuel filler flap, press the fuel filler flap release switch (located at the bottom left of the driver side lower dash panel) for 2 seconds then release, the system will start the refueling preparations

for pressure relief. Simultaneously the instrument pack will show "Please Wait to Refuel...". After the refueling preparations are completed, the indicator on the fuel filler flap release switch illuminates green, the instrument pack shows "Please Refuel". At this time, you can open the fuel filler flap.

In some rare cases, the fuel filler flap may fail to open within 30 seconds of pressing the fuel filler flap release switch for the first time. This is because the pressure relief process has not been completed. Please press the button a second time. When the fuel filler flap opens, please unscrew the fuel filler cap slowly for refueling. In some cases the fuel delivery nozzle may 'cut off' prematurely, if this continues please consult an MG Authorised Repairer for service as soon as possible.

If either of the following occur, it indicates that the refueling system detected a fault or failed. In this case, please contact an MG Authorised Repairer for service.

- The indicator lamp on the fuel filler flap release switch flashes green;
- The instrument pack shows "Please Service the Refueling System".



Shut down the power system before refueling. If the fuel filler flap release switch is pressed when the engine is running or the pure electric mode is supplied by high voltage, the fuel filler flap will not open, and the instrument pack displays "Please Switch the Engine Off While Refueling". In this case, please shut down the engine first and then open the fuel filler flap.

After the refueling is completed, please close the fuel filler flap immediately, the system will automatically lock the flap after it has been closed for about 5 seconds. At this time, the indicator lamp on the fuel filler flap release switch extinguishes, the corresponding text message disappears from the instrument pack.



If the fuel filler flap is not closed, when the vehicle reaches a certain speed, there will be a voice prompting the driver, and the instrument pack will display "Fuel Filler Flap Open". Please stop the vehicle as soon as conditions and safety permits, and close the fuel filler flap.



Even if the fuel filler flap has not been closed, the release switch will still need to be pressed before refueling. The fuel filler flap can only be opened after the refueling preparations are completed, failure to do so endangers safety.

#### Fuel Filler Cap

Slowly rotate counterclockwise to release the fuel filler cap.

After refueling, replace the fuel filler cap and tighten till you hear a "click".

## Refueling



Vehicle fuel gases are highly flammable and, in confined spaces, are also extremely explosive.

Always take care when refueling:

- Stop the power system;
- Do not smoke or use a naked flame;
- Do not use a mobile phone;
- Prevent fuel spillage;
- · Do not overfill the tank.

Do not fully fill the tank if the vehicle is to be parked in direct sunlight or high ambient temperatures - expansion of the fuel could cause spillage. The fuel filler tube is designed to accept a narrow, long filler nozzle. A small cover is incorporated within the filler neck, by inserting the filler nozzle thoroughly before fuel filling, the cover can be fully opened.

Start the engine after the fuel filling. If the engine does not run smoothly, shut down and do not start it again, contact an MG Authorised Repairer immediately for service.

#### **Vehicle Hybrid Control**

## **Crash Outage Control**

If a crash or serious impact occurs, a signal from the SDM (Airbag Module) will disconnect the relays within the battery management system isolating the high voltage battery from the systems on the vehicle.

## **Electric Power Management Mode**

The vehicle features an electric power management function of the high-voltage battery pack. The driver can select different electric power management modes, and can view the currently selected electric power management mode via the instrument pack. Please refer to 'Electric Power Management Mode' in 'Start & Driving' chapter.

## **Power Limit of Electrical Appliances**

According to the current load conditions and the status of the low-voltage (12V) battery, the vehicle can limit the power of some comfort electrical appliances, such as restricting partial lighting, air conditioning blower. At the

same time, the prompt information will be displayed in the information centre in the instrument pack.

#### **IMPORTANT**

If any of the conditions described above occur, please charge the low voltage battery as soon as possible.

## **Charging Requirements**



Prior to using any charging equipment please inspect the sockets, plugs and cables for any damage. DO NOT use any equipment that shows signs of misuse or damage.



It is recommended that the charging cable be connected to the charging device before connecting to the vehicle and charging commences.



DO NOT attempt to switch the vehicle power system ON during charging.



After charging completion, switch off the charger (where necessary), disconnect the cable from the vehicle, fit the waterproof blanking plug, close the charging point door. If necessary you can then disconnect the cable from the charger (where applicable).



Whilst charging the car on rainy days, where possible, please avoid connecting the charger during torrential rain or storms. If excessive water is evident around the charging plugs please use a suitable cloth to dry the area as best possible before removing the waterproof blanking plugs and connecting the charging cables.



DO NOT touch the charging connector or charging plug when your hand is wet.



DO NOT stand in water or snow when connecting or disconnecting the charging cable.



DO NOT attempt to charge when the charging connector and plug are wet.



Always keep the charging connector and charging plug in a clean and dry condition. Be sure to keep the charging cable in conditions where there is no water or moisture.



Only use the correct charger for charging the hybrid vehicle. Using any other charger or connector configuration may cause failure.



Take care not to drop the charging connector. This could result in damage.



STOP charging immediately if you find anything abnormal, such as sparks, burning or smoke.



High voltage charging equipment can cause interference with electronic medical devices When using medical electrical devices such as pacemakers, please consult your doctor about whether charging your hybrid vehicle will impact the operation of the device. In some instances, electromagnetic waves that are generated from the charger can seriously impact medical electric device operation.



NEVER use a high powered jet wash directly on the charger door or to clean around the charge point.



Always hold the charging connector handle or plug when connecting or removing the charging cable, if you pull the cable itself (without using the handle), the internal wires may disconnect or get damaged. This may lead to electric shock or fire.

## **Charging Your Vehicle at Home**

Whilst your MG has been supplied with a home charging kit it is essential that you check with a qualified electrician that the infrastructure of your property will support the charging equipment. Please seek qualified advice that your current electrical supply and circuits will support the requirements of the charging equipment.

## **Installed Charging Points**

Various companies will supply and install charging points to your property, MG insist that only qualified reputable suppliers and installers are used - failure to have the correct

equipment installed by a qualified professional may result in overloaded circuits and fire.

#### Home Charging Guide

ONLY use certified approved equipment.

ONLY use qualified suppliers and installers.

When the battery is fully charged, disconnect the cable plug from the vehicle socket - if it is necessary to interrupt the charging of the vehicle, disconnect the vehicle plug first, then isolate the power supply.

NEVER allow water or fluids to enter or contaminate your charger or vehicle charging sockets.

NEVER use damaged charging points, equipment or sockets.

STOP charging immediately if you see anything unusual, smell burning or see sparks. ALWAYS follow the operating instructions supplied with your charging equipment.

ALWAYS follow the operating instructions supplied with your charging equipment.

## **Charging and Medical Condition Awareness**




High voltage charging equipment can create areas of strong electromagnetic interference, this may cause operational issues with electronic medical devices.

When using medical electrical devices such as pacemakers or cardioverter defibrillators (ICD's) please consult your doctor about whether charging your hybrid vehicle will impact on the operation of the device. In some instances, electromagnetic waves that are generated from the charger can seriously impact medical electric device operation.

Note: There are no cautions issued about medical devices when the car is not connected to a charge point and charging. It is perfectly safe for individuals fitted with pacemakers or cardioverter defibrillators to drive or ride in the vehicle.

## **Charging Port**

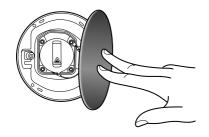

## **Charging Flap Door**

The charging flap door is located rear right of the vehicle, it is incorporated into the master lock system. When the vehicle is unlocked, press the door to release it from the sprung loaded catch. Pull out the waterproof blanking plug then you can access the charging port.

#### **Charging Port Electronic Lock**

In order to prevent the charging connector and cable being disconnected inadvertently during charging, the charging socket features an electronic locking mechanism.

The electronic lock is activated automatically when certain conditions are met, and remains in a locked state until the car is unlocked

Note: After the car is unlocked charging will stop, failure to remove the charging plug within 60 seconds will result in the car re-activating the electronic lock and charging will re-start.

## Manually Releasing the Charging Port Lock in Emergency Situations



The vehicle features an emergency release device for the charging port lock.

To access the manual release, remove the trim plate covering the service access hole on right side of boot - see picture.

## **Charging Operation**

#### **AC Charging Points**

#### **IMPORTANT**

Please ensure that only charge points that meet IEC 61851 and IEC 62196 are used to connect to your vehicle.

Using an AC charging device:

- I Ensure vehicle power system is OFF and all doors are closed.
- 2 Open the charging port door, remove the waterproof blanking plug from the charging plug connector.
- 3 Plug the cable from the charger point into the vehicle.

  Lock the vehicle
- 4 After completing charging, unlock the vehicle and disconnect the plug from the vehicle.
- 5 Ensure the charge socket is free from debris, fit the waterproof plug. Close the charging point door.

Note: If at any time during the charging process you should want to check the state of charge, please switch

the vehicle power system to the ON position. the high voltage battery state of charge will be displayed in the message centre in the instrument pack.

Note: If the vehicle is unlocked during the charging process, charging will be suspended. Charging will resume when the vehicle is re-locked. If charging does not automatically resume after locking the vehicle, it may be necessary to remove and refit the charger cable.

## **Residential Charging**

Your vehicle will have been supplied with a residential charging device. This device can be plugged into a standard household 3 pin socket.

During the charging operation the vehicle power system must be OFF. Carry out the following procedure to charge the car using the charger supplied with the vehicle:


I Ensure vehicle power system is OFF and all doors are closed.

- 2 Open the charging port door, remove the waterproof blanking plug from the charging plug connector. Ensure the surroundings are clean, dry and free from debris.
- 3 Connect the charging plug to the socket on the vehicle.
- 4 Connect the charging device plug to the domestic electricity supply. Lock the vehicle.
- 5 After completing charging, unlock the vehicle, disconnect the charging cable from the vehicle, and then the domestic plug.
- 6 Ensure the charge socket is free from debris, fit the waterproof plug. Close the charging point door.

Note: If at any time during the charging process you should want to check the state of charge, please switch the vehicle power system to the ON position. the high voltage battery state of charge will be displayed in the message centre in the instrument pack.

Note: If the vehicle is unlocked during the charging process, charging will be suspended. Charging will resume when the vehicle is re-locked. If charging does not automatically resume after locking the vehicle,

it may be necessary to remove and refit the charger cable.

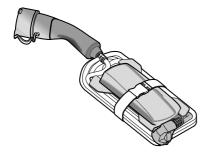

Slow charging kit (supplied with the vehicle)

## **Charging Information**

At the beginning of the charging process, the following information will be displayed within the instrument pack message centre.



- I Current Time
- 2 High-voltage Battery Pack Status
- 3 Driving Range by High-voltage Battery Pack
- 4 Charging Status

## **Equalisation Charging**

Equalisation charging means that after a normal charging process the battery management system will enter a mode where it will attempt to equalise the charge of every battery cell.

If an equalisation charge has not been carried out for some time the message centre in the instrument pack will display 'Please Slow-Charge the Vehicle'. Please refer to 'High Voltage Battery Pack' in the 'Maintenance' section.

On average it takes at least 5 hours to complete a charge that includes the equalisation charge.

Note: Ambient temperatures have an effect on charging times, it may take longer to complete a charge when the ambient temperatures are low.

#### **Charging Times**

On average it takes approximately 4.5 hours to charge the high voltage battery form low battery warning to 100% (charge quantity can be checked using the instrument pack).

At low temperatures the charging time will be extended.

- If an equalisation charge has not been conducted for a long time the required charge time will be extended.
- An equalisation charge must be carried out prior to using the car after a long period of storage or non use.
   In these cases the charging time will be extended.

#### **Electric Drive Transmission**


#### Instructions

The following information is very important; please read carefully before use:

- The electric drive transmission is a high voltage unit;
   DO NOT touch it unless you have the correct training and qualifications.
- Before setting the vehicle in READY mode, place the shift lever in P or N position, ensure the foot brake is pressed and electronic parking brake is applied.
- After setting the vehicle in READY mode, ensure the foot brake and electronic parking brake are applied, shift the lever to the required gear.
- Release the electronic parking brake but maintain foot brake application until you are ready to manoeuvre the vehicle. Once the foot brake is released, on flat road, the vehicle will automatically start off at a slow speed without application of the accelerator.

#### **Gear Shift**

#### **Electronic Shift Lever**

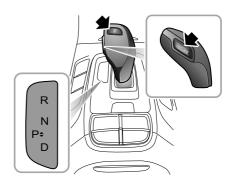

The Electronic Shift Lever features a P (Park) button on the top and an UNLOCK button on the side.



Unless necessary, it is not recommended to press the unlock button during gear shifting. This may cause incorrect gear selection and subsequently damage the drivetrain.

The Electronic Shift Lever defaults to the middle steady-state. The forward and backward positions are non-steady states.

#### **Transmission Gears**



DO NOT move the shift lever to N in order to coast whilst driving.



During driving, DO NOT move the shift lever from D to R or P position, severe damage to the electric drive transmission or an accident can occur.

P: Park

In this position, the electronic parking brake is applied.

To release the electronic parking brake, refer to "Electronic Parking Brake (EPB)" in "Brake System" section.

If any gear other than P is selected and the vehicle speed is below 2 km/h, Park can be engaged using the following procedure:

- I Press the P button to engage P gear;
- 2 Turn off the ignition switch and the vehicle engages P gear automatically.
- 3 With the brake pedal released and the driver's seat belt unfastened, when opening the driver's door the vehicle engages P gear automatically.

#### · R: Reverse

Select this gear only when the vehicle is stationary and the engine is running at idle speed.

With the brake pedal depressed, press and hold the UNLOCK button, push the shift lever forward to the end, the vehicle engages R gear.

#### · N: Neutral

Select this gear when the vehicle is stationary (for example, waiting for traffic lights).

Whilst in P gear, with the brake pedal depressed, press and hold the UNLOCK button, push the shift

lever forward or backward to the first unsteady state position, the vehicle engages N gear.

Whilst in D gear, push the shift lever forward to the first unsteady state position, and the vehicle engages N gear.

Whilst in R gear, push the shift lever backward to the first unsteady state position, and the vehicle engages N gear.

#### · D: Drive

This is used for normal driving and will allow automatic selection of drive gears depending on vehicle speed and accelerator position.

Whilst in P gear, with the brake pedal depressed, press and hold the UNLOCK button, push the shift lever backward to the end, and the vehicle engages D gear.

Whilst in R or N gear, push the shift lever backward to the end, and the vehicle engages D gear.

The highlighted letter in the information centre indicates the selected gear.

#### Kick-down



The drive wheels may skid when kick-down is activated on road surfaces with low adhesion, this may lead to the vehicle sliding out of control.

With D gear selected, pressing the accelerator pedal all the way down in one motion (also known as Kick-down) will provide better acceleration performance during overtaking. Under certain conditions, it will allow the transmission to shift to a lower gear immediately, and provide fast acceleration. Once the accelerator pedal is released, it will resume a suitable normal gear (based on the vehicle speed and the position of the accelerator pedal).

#### **Vehicle Start-off**

P is the initial gear position after the vehicle is started. With the brake pedal depressed, after shifting to the desired gear and waiting for the full engagement of the electric drive transmission, release the brake pedal and depress the accelerator pedal to begin vehicle motion.

## **Driving on Hills**



In cases where a short stop on a hill is required, such as a traffic jam, DO NOT momentarily apply the accelerator to prevent "roll back". This could cause the transmission to overheat and result in damage.

#### Hill Start (Start Assist)

In cases of a hill start, where the vehicle has been stationary for some time, the foot brake has been released and the electronic parking brake applied, the starting aid function of the electronic parking brake (EPB) can be used to prevent the vehicle from rolling backwards. With the seat belt safely fastened, press the foot brake, apply the electronic parking brake system, and select the desired gear (D/R), then release the foot brake; press the accelerator pedal to engage vehicle drive, the electronic parking brake system will automatically be deactivated.

Models fitted with Hill Hold Control can use this function to assist hill starts. For details on hill hold control system, please refer to "Foot Brake" of "Brake System" section.

Note: The aid of these functions cannot defy the laws of physics. DO NOT drive the vehicle beyond its physical limitations, loss of control will still occur.

## **Energy Regeneration**




Deceleration caused by energy regeneration is NOT a substitute for braking required for safety. ALWAYS prepare for braking to ensure safe driving.

When the vehicle is in a braking or coasting state, the energy regeneration function is activated, the motor converts part of the kinetic energy of the vehicle into electric energy, which is then stored in the high voltage battery.

Energy cannot be regenerated or is limited under some conditions, such as:

- · N gear is selected;
- During torque intervention (gear shifting, tyre skidding, etc.):
- · High voltage battery is fully charged;
- High voltage battery temperature is too high or too low.

## **Electric Power Management Mode**

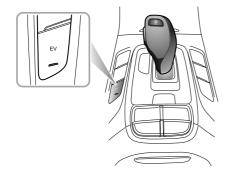

The vehicle features electric power management of the high-voltage battery pack. The driver can manually select different electric power management modes, and can view the currently selected electric power management mode via the instrument cluster.

Switching between "EV" mode and "AUTO" mode can be realised through the EV switch on the centre console. Switching between "Default", "Medium battery level" and "High battery level" can be realised through the entertainment system display.

Only when the following conditions are met can the driver make a forced selection of "EV" mode for pure electric driving through EV switch:

- High-voltage battery power is sufficient;
- A/C system has no heating function request;
- The bonnet is fully closed;
- The hybrid system has no stored faults or codes related to EV (pure electric) mode;
- The vehicle speed is not higher than the maximum speed limit allowed in the pure electric mode.

In "EV" mode, if the conditions are not met, the system will automatically exit and enter "AUTO" mode. The instrument cluster will display a prompt stating: "Exit from EV Mode". When selecting "EV" mode without meeting the pre-conditions, the instrument cluster will display a prompt stating: "EV Mode Entry Not Support".

In "AUTO" mode, based on the current high-voltage battery power, power is automatically managed by the system. When "AUTO" mode is enabled, the instrument cluster displays  $\stackrel{\text{AUTO}}{=}$ .

"Default" mode is "AUTO" mode.

In "Medium battery level" mode, the engine continuously charges the high-voltage battery in an attempt to maintain approximately 50% battery power. When "Medium battery level" mode is enabled, the instrument cluster displays

In "High battery level" mode, the engine continuously charges the high-voltage battery to enough power for pure electric or high-power driving in the future. When "High battery level" mode is enabled, the instrument cluster displays .

When the START/STOP Switch is switched off, the vehicle will switch back to last selected mode (EV or AUTO mode) by default.

#### **Protection Mode**



When parking the vehicle, please ensure the vehicle is parked safely and that all traffic by-laws are observed.

#### **Overheating Protection**

Starting off frequently at high ambient temperatures, quick and frequently accelerating/decelerating, climbing a steep slope for a long period of time, or overloading the electric drive transmission may cause high temperatures. In order to prevent the motor from damage, the system will enter the overheating protection function.

When the system detects electric drive transmission overheating, the warning indicator in the instrument cluster ( will illuminate.

In this case, park your vehicle safely or whilst maintaining a light load, continue to drive your vehicle at a constant speed to cool the motor. The vehicle can only be started or driven in different gears after the motor temperature has reduced or warning indicator is off.

If the above-mentioned warning indicator does not go out after the electric drive transmission has cooled down for a long time (about 20 minutes), please stop the vehicle in a safe place and contact an MG Authorised Repairer for assistance as soon as possible, otherwise it may seriously damage the electric drive transmission.

#### **IMPORTANT**

When the electric drive transmission is under overheating protection, in order to avoid damage to the motor, the power of the power system will be limited, and the warning indicator in the instrument cluster will illuminate. In severe cases, the instrument cluster displays "Power Limited, Limiting Speed" and the warning indicator will illuminate. After decelerating, this will disappear when the electric drive transmission temperature returns to normal.

#### **Motor Malfunction**

When the system detects any fault in the electric drive transmission motor or the power electronic box, the warning indicator in the instrument cluster 🖭 will

illuminate. In such a case, please contact an MG Authorised Repairer for assistance.

#### Limp Mode

When some faults occur in the electric drive transmission, the electric drive transmission will enter Limp Mode. At this time, the electric drive transmission can only work in certain gears, the red warning indicator in the instrument cluster illuminates, and the instrument cluster displays the warning message "Vehicle Control System Fault" simultaneously. After a few seconds, the warning message disappears and the warning indicator remains ON. In such a case, please contact an MG Authorised Repairer for assistance.

#### Severe Functional Failure

When some serious functional failures occur in the electric drive transmission, the red warning indicator in the instrument cluster illuminates, and the instrument cluster displays the warning message "Vehicle Control System Fault" simultaneously. After a few seconds, the warning message disappears and the warning indicator remains on. At this time, in order to protect the

electric drive transmission, the hybrid system will forcibly cut off the power transmission, the vehicle will not be able to drive! In such a case, please contact an MG Authorised Repairer for assistance.

When some serious functional failures occur in the gear shift system, the instrument cluster will display "EP" or P button indicator will flash. At this time, for safe driving, if the vehicle speed is lower than a certain value, the hybrid system will forcibly cut off the power transmission, the vehicle will not be able to drive! In such a case, please contact an MG Authorised Repairer for assistance as soon as possible.

#### Engine fails to start

When engine intervention is required, the system will attempt to start the engine. If engine starting is not successful, the yellow warning indicator in the instrument cluster will illuminate. Due to the engine's failure to operate, the vehicle can only be driven in the pure electric mode at this time, attention should be paid to the high-voltage battery power. The instrument cluster will display a warning message "Engine Fault, Pay Attention to

SOC". In such a case, please contact an MG Authorised Repairer for assistance.

## **Brake System**

#### Foot Brake

For added safety, the hydraulic braking system operates through dual circuits. If one circuit should fail, the other will continue to function, but greater pedal pressure will be needed, and increased brake pedal travel, and longer stopping distances will be experienced. In the event of a brake failure where only one circuit is operational, the car should be brought to a halt as soon as traffic conditions safely allow. DO NOT continue driving - seek an MG Authorised Repairer.

#### Servo Assistance

The braking system is servo assisted, always be aware of the followings during the operation:

- The servo assistance functions with the engine started up only. Never allow the car to freewheel with the engine turned off.
- If the engine should stop for any reason while driving, bring the car to a halt as quickly as traffic conditions safely allow, and do not pump the brake pedal as the braking system will lose any remaining servo assistance.

Once the engine has stopped, it will lose any remaining servo assistance, use suitable force to apply the brake pedal to stop the car safely in the current traffic conditions. Contact an MG Authorised Repairer.

 Efficiency of the brake servo booster can be affected by engine stall or other conditions, such as the change of barometric pressure. These conditions could result in extra force required to operate the brake pedal to stop the car.

#### **Wet Conditions**

Driving through water or heavy rain may adversely affect braking efficiency. In this case, keep a safe distance from other vehicles and intermittently apply the brake pedal to keep the brake disc surface dry.

#### **Electronic Brake Force Distribution (EBD)**

Your car is equipped with EBD, which, in order to maintain braking efficiency, distributes braking forces between front and rear wheels, under all load conditions.

EBD integrates a monitoring system. The monitoring system is linked to the brake system malfunction indicator

lamp on the instrument pack. Refer to "Warning Lights and Indicators" in "Instruments and Controls" chapter.

If the indicator lamp illuminates while driving, or remains illuminated after the START/STOP Switch is turned on (ON/RUNNING position), it indicates there is a failure with the braking system, and EBD may be inoperative. In such a case, stop the car as soon as safety permits and seek an MG Authorised Repairer immediately. DO NOT drive the car with the braking system malfunction indicator lamp illuminated.

#### Electronic Brake Assistance (EBA)

The car is equipped with EBA. When the brake pedal is applied for emergency braking, EBA system will help the driver increase the braking force acted on each wheel to reach the working point of ABS, thereby shortening the braking distance.

#### Hill Hold Control (HHC)



HHC has limitations when subject to adverse conditions such as wet or icy surfaces and steep slopes. And the driver's attention to driving safety cannot be compromised even when HHC is enabled.



HHC is not a substitute for parking brake application, otherwise the serious accident may cause. The system is only applicable to the hill hold control during driving.



With the HHC in service, it is strictly prohibited for the driver to leave the vehicle, otherwise the severe accident may cause.



In order to prevent the vehicle from slipping by accident when starting on stop-and-go uphill conditions, please fully depress the brake pedal for a few seconds before start-off.

HHC assists the driver in starting the vehicle on uphill, and meanwhile prevents the vehicle from slipping during start-off.

The following conditions must be fulfilled to activate HHC:

- · Close the driver side door and fasten the seat belt.
- · Stop the vehicle on a slope with certain extent.
- · SCS is fault free.
- · EPB is released and fault free.
- Clutch pedal is pressed (MT), or in D or R gear (AT).
- · Engine is started.
- Sufficient brake pedal application force has been applied.

If the driver releases the brake pedal on a hill, HHC will maintain brake pressure for  $1\sim2$  seconds. If the vehicle fails to start in such  $1\sim2$  seconds, the brake automatically releases and the vehicle slips, the brake pedal should be depressed immediately in such a case.

Note: HHC is available in both forward and backward directions when pulling away on uphill slopes.

Note: When the message centre of instrument pack shows "Hill Hold Unavailable", it indicates that the hill hold control is invalid or is not properly enabled, please seek an MG Authorised Repairer urgently.

#### **Auto Hold**



When auto hold stops the vehicle for reasons such as engine cut out, releasing the seat belt or pressing the auto hold switch, the electronic parking brake is applied. It cannot be guaranteed that the vehicle will be stabilised in all cases. For example, the rear wheels are on a slippery road surface, or the vehicle incline is too great (larger than 20%). Please make sure that the vehicle is safely stabilised prior to exiting.



DO NOT take any extra risks when driving due to the fact the vehicle is fitted with additional convenience functions. The driver should pay full attention and observe the surroundings even if the vehicle is equipped with auto hold system.



The auto hold function cannot guarantee the stability of the vehicle when starting off or braking on hills especially on slippery or icy surfaces.



DO NOT leave the vehicle when the engine is operating and the auto hold is active.



Auto hold cannot guarantee the electronic parking brake operation in all cases where the engine is stopped. Please ensure the electronic parking brake is applied and the vehicle is stabilised prior to exiting the vehicle.




The auto hold function should be switched off during the use of automatic car washes, the electronic parking brake may suddenly apply and cause vehicle damage.

If the vehicle is required to stop frequently for a length of time (such as traffic lights, traffic queues or stop/start), and the engine is running, the auto hold system assists in stabilising the vehicle, enabling you to remove your foot from the brake pedal when the vehicle is stationary and the Auto Hold active.

Auto hold has 3 main states:

I Off: Function in Off state.

- 2 Standby: Function in Standby state; the function is activated but it is not parked. In Standby state, the vehicle will automatically park once the conditions for parking are all met.
- 3 Parking: Function in Parked state. In this state the green (©) indicator in the instrument pack illuminates.

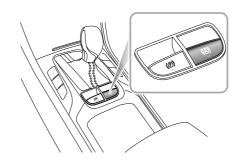

With the driver's seat belt fastened, the door closed and the engine running, press the auto hold switch to switch the auto hold function from Off to Standby state.

With the brake pedal firmly pressed and the vehicle completely stopped, the auto hold function will switch from the Standby state to the Parking state.

When the auto hold is in the Parking state, engaging forward or reverse gear and pressing the accelerator will automatically release the auto hold function.

With the auto hold in the Parking state, it will result in the electronic parking brake being applied and the system exiting the Parking state in some cases (such as removing the seat belt, switching off the engine and stopping for a certain time etc.)

Note: With the brake pressed, press the switch to switch off the auto hold function, but the electronic parking brake will not be applied.

Note: It is recommended to turn off the auto hold function when reversing into the garage.

Note: For MT models, press the accelerator pedal to start off.

#### Hill Descent Control (HDC)



HDC system is just an auxiliary function. In some cases (such as slippery ground, snowy road surface or steep slope, etc.), HDC system cannot overcome the physical limitation to ensure the vehicle drives down the steep slope at a low speed.



Even when HDC system is in use, the driver shall still pay close attention to the driving state of the vehicle, and take active control when necessary. Because in certain cases, HDC may remove itself from the operating state temporarily.



Under some driving conditions on downhill surfaces (e.g. driving down a slope with high speed, the slope is less than 10%, etc.), HDC is inoperative, so the driver shall be required to control the speed by depressing the brake pedal to ensure the safe driving.


HDC system is an auxiliary function specially designed for driving on acute downhill surface. HDC system reduces

the speed by applying the brake force, thus assists the driver to drive on acute downhill surface with low speed. Therefore, please do not use this function when driving on the ordinary road.

When the HDC is working, the brake system may generate strong vibration or noise. It is normal during the operation of HDC.

Note: During the operation of hill descent control (HDC) system, please do not switch the shift lever to "N" position. Such operation may deactivate the HDC function.

#### **HDC System On/Off**

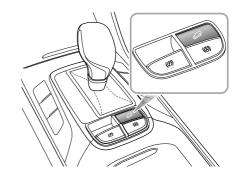

When the START/STOP Switch is placed in ON/RUNNING position, HDC system is deemed as closed. Press the button to turn on/off HDC system.

Normally, HDC system has four states as follows:

I Standby: press HDC switch to start HDC system and enter into standby state. And HDC indicator on the instrument pack illuminates green.

2 Operating: in Standby mode, when the vehicle drives down the acute downhill surface, and the driver does not depress the brake and accelerator pedal, if the vehicle speed is higher than 8km/h but less than 35km/h, HDC system will automatically enter into the Operating state. Meanwhile, HDC indicator on the instrument pack flashes green, which may be accompanied by the working noise of the brake system, and the vehicle speed is obviously reduced.

When driving forward, the target speed under the control of HDC system is 8km/h.

When reversing, the target speed under the control of HDC system is 8km/h.

- 3 Temporary Deactivation: depress the accelerator pedal or brake pedal to a certain extent in Operating mode, HDC system will temporarily remove itself from the operating state.
- 4 Off: press HDC switch again to turn off HDC system.

Note: For MT models, HDC function can be applied only in the 1st gear.

Note: When the vehicle steers at a fast speed on the hill with a certain gradient, HDC system may switch from Standby mode to Operating mode.

Note: With HDC system in operative, the brake system will automatically pressurize and hold, when depressing the brake pedal at this time, you will be responded with a certain pressure feedback, which is normal during the operation of HDC system.

#### **HDC ON/Malfunction Indicator Lamp**

Refer to "Warning Lights and Indicators" in "Instruments and Controls" chapter.

## Anti-lock Brake System (ABS)



ABS cannot overcome the physical limitations of stopping the car in too short a distance, cornering at too high a speed, or the danger of aquaplaning, i.e. where a layer of water prevents adequate contact between the tyres and the road surface.

The purpose of the ABS is to prevent the wheels from locking while braking, thereby enabling the driver to retain steering control of the car.

The fact that a car is fitted with ABS must never tempt the driver into taking risks that could affect his/her safety or that of other road users. In all cases, it remains the driver's responsibility to drive within normal safety margins, having due consideration for prevailing weather and traffic conditions.

Under normal braking conditions, ABS will not be activated. However, once the braking force exceeds the available adhesion between the tyres and the road surface, thereby causing the wheels to lock, ABS will automatically

come into operation. This will be recognisable by a rapid pulsation felt through the brake pedal.

#### **Braking in an Emergency**



DO NOT pump the brake pedal at any time; this will interrupt the operation of ABS and may increase the braking distance.

If an emergency situation occurs, the driver should apply full braking effort even when the road surface is slippery. ABS will ensure that the wheels do not lock and that the car is brought to a halt in the shortest possible distance for the prevailing road surface conditions.

Note: On soft surfaces such as powdery snow, sand or gravel, the braking distance produced by the ABS system may be greater than that for a non-ABS system, even improved steering would be experienced. This is because the natural action of locked wheels on soft surfaces is to build up a wedge of material in front of the tyre contact patch. This effect assists the car to stop.

No matter how hard you brake, you are still able to continue steering the vehicle as normal.

#### **IMPORTANT**

ABS can not reliably make up for the driver's mis-operation or lack of experience.

## ABS Malfunction Indicator Lamp

Refer to "Warning Lights and Indicators" in "Instruments and Controls" chapter.

Note: The normal (non-ABS) braking system remains fully operational and is not affected by partial or full loss of ABS. However, the braking distances may increase.

## **Active Rollover Protection (ARP)**



ARP system is just a kind of safe-assistant device, which cannot possibly surpass the physics laws to guarantee the vehicle from rollover.

In case that the vehicle with high centre of mass due to dynamic driving (such as change lane) or stable driving (such as loop driving) may roll over, ARP brakes the outside

wheels to under-steer, thereby preventing the vehicle from rollover.

Note: With ARP in use, the vehicle under-steers and it is normal if it fails to steer fully according to the intent of the driver during the operation of ARP.

# Emergency Braking Hazard Warning Lights Control System (HAZ)

With the car driving at high speed, when the driver makes an emergency brake, the system will automatically enable the brake lamp strobe to remind the following vehicles, thereby effectively reducing the risk of rear-end collision accidents.

Note: With the hazard warning lamp turned on, the emergency braking hazard warning lights control system (HAZ) will not function.

After HAZ is activated, when the car is not in emergency brake condition (e.g. when the deceleration is small), the brake lamp strobe function will stop after several seconds.

Note: If the car speed is less than 10km/h when the brake lamp strobe stops, the hazard warning lamp will illuminate automatically. Short press the hazard

warning lamp switch or speed up to above 20km/h for 5s to turn off the hazard warning lamp.

## **Electronic Differential System (XDS)**

Your car is provided with electronic differential system (XDS). In case the understeering occurs when making a turn at high speed, the system will apply the brake to the wheels at inner side to improve the accuracy of steering.


Note: XDS will shut down as SCS and TCS are turned off.

190

#### **Electronic Parking Brake (EPB)**



In the event of EPB malfunction where EPB release is not possible, DO NOT tow the vehicle with all four, or rear wheels in contact with the road surface. Damage may occur.

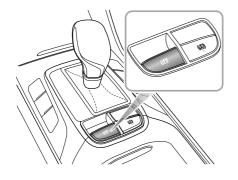

#### Applying the EPB

While the vehicle is stationary, the EPB can be applied. Ensure the EPB is applied every time the vehicle is left or parked.

- Pull the EPB switch upward until the indicator in the EPB switch illuminates.
- If the indicator in the EPB switch and the indicator in the instrument pack illuminates (B), the EPB is applied.
- If the EPB malfunction indicator lamp (2) in the instrument pack remains on, it indicates that a fault has been detected. Please contact an MG Authorised Repairer immediately.

Note: An audible motor noise may be heard when applying or releasing the EPB.

#### **IMPORTANT**

- In the event of a flat battery or power failure, it is not possible to apply or release the EPB. In such a case, 'jump leads' shall be used for emergency engine start, please refer to "Emergency Starting" in "Emergency Information" chapter.
- In the event of a power interruption or flat battery, the EPB will not operate and the EPB warning lamp in the instrument panel will illuminate. To restore normal operation, press the brake pedal, press EPB switch and then pull EPB switch (this may have to be repeated), the EPB warning lamp will extinguish and normal operation will resume.

## Releasing the EPB

- Switch on the vehicle, press the brake pedal, and press the EPB switch.
- If the indicator in the EPB switch and the indicator in the instrument pack (P) are extinguished, the EPB is released.

#### Starting Aid

The EPB can predict the driver's intention and automatically release the EPB.

When the driver's seat belt is fastened, the engine is started up, Drive gear is selected and the accelerator pedal is depressed for start-off; or when the clutch pedal is depressed and Drive gear is engaged, then release the clutch pedal and depress the accelerator pedal for start-off, the EPB will automatically release.

## **Emergency Braking Function**



Inappropriate use of the EPB can lead to accidents and injuries. Do not apply the EPB for vehicle braking, unless in emergency.



During emergency braking using the EPB, DO NOT switch off the vehicle, this could result in serious injury.

When the car is in motion, in case of any emergency, such as the car can not be stopped by the brake pedal, it can be decelerated by pulling up and holding EPB switch.

- Pull the EPB switch upward and hold to realize the emergency braking. During emergency braking, a continual audible warning will sound.
- To cancel the emergency braking process, release the EPB switch.

# Tyre Pressure Monitoring System (TPMS)



TPMS can not replace routine maintenance and checks of tyre condition and pressures.



Using equipment that transmits on frequencies similar to that of the TPMS may interfere with the operation of the Tyre Pressure Monitoring System, this may illuminate a warning or register a temporary fault.

TPMS uses pressure sensors built into tyre valves to continuously monitor pressure and transmit data to the ECU inside the vehicle using RF signals. If it deduces that the pressure of that tyre has fallen below the predefined limit of the system, the warning light in the instrument pack will illuminate (always yellow). For more information, please refer to 'Instrument Pack' in 'Instruments and Controls' section. Check your tyres at the earliest opportunity and reinflate to the correct pressure. Please refer to 'Tyre Pressure (Cold)' in 'Technical Data' section.

Note: TPMS only warns of low tyre pressures, it does not re-inflate the tyre.




If the TPMS malfunction indicator lamp illuminates, and on some models, is accompanied by the warning message "XX Tyre Pressure Low" displayed, it is advised that you please stop the car as soon as possible, check the tyre pressure and inflate the tyre to recommended pressure value. The tyre pressure label attached to the B pillar indicates the standard pressure value required by your vehicle tyres when they are cold.

Over or under-inflated tyres wear out more rapidly and also have a detrimental effect on the car's handling characteristics. Under-inflated tyres increase the rolling resistance of the car which, in turn, increases fuel consumption.

#### **TPMS Self-learning**

When replacing a TPMS sensor and receiver, or performing tyre rotation, TPMS self-learning is required, please consult an MG Authorised Repairer for details.

## Adaptive Cruise Control System \*

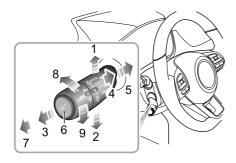

Speed Limit Increase
 Resume (5)
 /Accelerate (1)
 Set (6)

• Speed Limit Decrease • OFF (7)

/Decelerate (2)

• Increase the Distance (8)

Cancel (3)

• Reduce the Distance (9)

On/Standby (4)



The Adaptive Cruise Control (ACC) system is designed as a comfort system enabling the driver to maintain a constant speed or distance from the car in front. It provides assistance to the driver, it DOES NOT replace any of the drivers responsibilities. When using the ACC it is important that the driver maintains concentration at ALL times.



During the operation of the Adaptive Cruise Control System (ACC) the autonomous braking of the vehicle is limited. Therefore it is ESSENTIAL that the driver maintains concentration, observes the local laws, road and traffic conditions, and if at any time feels there is a danger to themselves or surroundings they should apply the brakes and disconnect the ACC.

The ACC system can automatically switch between constant speed cruise and car following cruise control depending on whether it can detect a vehicle directly ahead. Constant speed cruise control is permitted

between 20mph-90mph/30kmh-150kmh or car following cruise control by setting the distance between the vehicle and the vehicles directly ahead.

When activated if the ACC system detects a car in the same lane directly ahead it may accelerate or gently apply the brakes of the car to maintain the set following distance.

Note: The Adaptive Cruise Control System (ACC) is designed for motorway cruising or any other journey where a constant speed or distance between your car and the vehicle in front can be maintained for a lengthy period.

## **Adaptive Cruise Control System Activation**

The Adaptive Cruise Control system is operated with a lever switch located, at the left side of the steering wheel underneath the indicator/lighting stalk switch.

- When the START/STOP Switch light is green, if the adaptive cruise lever switch is in the 'OFF' position (7), then the adaptive cruise control system is switched OFF.
- 2 Move the adaptive cruise lever switch to the 'ON' position (4), the adaptive cruise system status indicator

- on the instrument pack ₨ illuminates yellow, and the adaptive cruise control system is in the Standby mode.
- The system will automatically detect the speed and position of the vehicle ahead, if your vehicle speed is above 3mph/5kmh, after pressing the 'Set' button (6) at the end of the adaptive cruise stalk lever, the indicator on the instrument pack & will turn green, and the adaptive cruise control system enters the Activated mode, its target speed is the actual speed at activation; if your vehicle speed is less than 20mph/30kmh, then the target speed of the system is set at 20mph/30kmh. If the speed of the vehicle ahead is greater than the cruise target speed of your vehicle, your vehicle will maintain the target speed to conduct constant speed cruise; if the speed of the vehicle ahead is lower than the cruise target speed of your vehicle, it will enter the car-following cruise, an image of your car and the car ahead separated by a grid is displayed in the instrument pack message centre, in this mode the actual speed may be less than the set target speed. Whilst in the car following cruise mode, you can follow the vehicle ahead to a stop, if the amount of time that the vehicle is in a stopped condition is

less than approximately 3 seconds your vehicle may automatically pull away to follow the vehicle ahead, if the stopped time exceeds 3 seconds your car will not automatically pull away, you will receive a prompt in the instrument pack message centre requesting you to re-activate the adaptive cruise control using the method displayed.



After following the vehicle ahead to a stop, the driver must observe any local traffic laws and ensure that there are no obstacles or other traffic participants, such as pedestrians, directly in front of the vehicle before allowing it to pull away and begin to follow the vehicle ahead again.



Whilst using the car following cruise function it is strongly recommended that the driver does not touch the accelerator pedal. Any activation of the accelerator will not allow the system to automatically apply the brakes should this be necessary.



DO NOT exit the vehicle when the ACC car following cruise function has stopped, or is keeping the car stationary. Before exiting the car the shift control lever should be in the Park position, the parking brake applied and the power switch in the OFF position.



If the ACC system has already stopped the vehicle, and the ACC function is disabled, turned off or cancelled, the vehicle will no longer stay still, it may move forward or slip backward. When the vehicle is stopped and kept still by the ACC system, be sure to be ready to apply the brakes manually.

4 If the vehicle speed exceeds the maximum function speed of the ACC, 90mph/150kmh, the system will automatically switch to the Standby mode, this means that all acceleration and braking manoeuvres must be carried out by the driver according to local traffic laws and traffic and road conditions.

5 If the adaptive cruise control system is already in use, the driver should pay special attention in the following conditions, select the appropriate speed, and be ready to take action or apply brakes.

#### **IMPORTANT**

When an image of your car and rear end of the vehicle ahead separated by a grid, is displayed in the instrument pack message centre the ACC system will make any necessary response to the vehicle ahead, if the image is not displayed the ACC system will NOT make any response, the responsibility for any manoeuvres rest with the driver.

- Encounters a vehicle or object which is stationary or traversing the lanes.
- Approaching the vehicle ahead too fast, the adaptive cruise control system cannot apply sufficient braking force.
- · A vehicle suddenly cuts into the lane in front.
- The vehicle ahead makes an emergency braking manoeuvre.

- An oncoming vehicle crosses the centre of the road and is driving towards you in the same lane.
- · Encounters a vehicle driving at a low speed.
- Encounters a vehicle with loaded items protruding from the body side, rear or roof of the vehicle.
- Encounters a vehicle with a higher chassis (e.g., a truck).
- Encounters pedestrians, non-motor vehicles or animals.
- The vehicle is driving on a steep slope, an uneven road or a complex traffic road section.
- The vehicle makes a sharp turn.
- Water or snow splashed by surrounding vehicles hinders camera or radar detection.
- Excessive weight being carried in the boot space or cargo area causing the front of the car to point upwards.
- · A fault exists in the system.

Note: Manual deactivation of either the Traction Control System (TCS) or Stability Control System (SCS) will inhibit the operation of the Adaptive Cruise Control (ACC).

## **Adaptive Cruise Target Speed Adjustment**

In order to set the target speed, the adaptive cruise control system must be in an active mode.

Use the accelerator pedal to reach the desired speed, short press the 'Set' button (6) on the end of the adaptive cruise switch lever, release the control button and accelerator pedal. The vehicle will cruise at the desired speed.

Move the lever switch upward (I) and hold, the target speed will increase until the desired set speed appears in the instrument pack, then release the switch. When it is confirmed that there is no vehicle in front of your vehicle or the vehicle ahead exceeds the preselected following distance, the speed will be increased to the set speed.

Move the lever switch downward (2) and hold, the target speed will decrease until the desired set speed appears in the instrument pack, then release the switch. When it is determined that the vehicle ahead driving slowly is within the pre-selected following distance, the vehicle speed will decrease and keep the selected following distance.

Note: Briefly operate the adaptive cruise lever switch upward (1) or downward (2) once, the target speed

will change 5kmh, press and hold the lever upward or downward and the speed will increase or decrease in Ikmh increments, release the lever when the desired speed reading is displayed.

Note: If the vehicle ahead continually makes hard acceleration or deceleration manoeuvres the adaptive cruise control may not be able accurately maintain the required distance between vehicles. It is important that the driver always concentrates and pay attention to the current vehicle position and situation in case they need to make a braking or avoidance manoeuvre.

# Adaptive Cruise Target Following Distance Adjustment

When the adaptive cruise control system is activated, rotate the switch on the end of the lever upward (8) or downward (9) to adjust the following distance, you are able to toggle between 3 distance settings, the current following distance setting will be stored by the system until it is changed, and displayed in the message centre in the instrument pack.

Always select an appropriate following distance that is relative to the current speed of your vehicle and the vehicle you are following, the greater the speed, the further the distance. ALWAYS consider current traffic, road and weather conditions when making your selection.

## **Adaptive Cruise Pause**

When the adaptive cruise control system is activated, move the lever switch to the 'Cancel' position (3), and the system will exit to the Standby mode.

## **Automatic Deactivation of Adaptive Cruise**

In the following situations, the ACC may be automatically deactivated, this transfers full control of the vehicle to the driver.

- Move the lever switch to 'Off' position (7).
- Press the brake pedal whilst the vehicle is in motion.
- Move the shift lever away from the  $\ensuremath{\mathsf{D}}$  position.
- · The driver unfastens his/her seat belt.
- Press and hold the accelerator pedal beyond a preset time period.
- · Open any door, bonnet or tailgate.

- · Pull the EPB switch up to apply the parking brake.
- Follow the vehicle ahead to a stop and the stop time exceeds 3 minutes
- The sensor or radar view is blocked, the ambient light condition triggers the preset safe exit mechanism of the light sensor, or the system fails.

Note: If following the vehicle ahead to a stop with the adaptive cruise control system enabled, if any of the following conditions occur whilst the vehicle is in a stopped state, the EPB will automatically be applied:

- · The driver unfastens his/her seat belt.
- The driver door is opened.
- · The stop time exceeds 3 minutes.

## **Adaptive Cruise Override**

If the driver has cause to use the accelerator pedal when the ACC is activated, the vehicle will remain in Cruise mode while the vehicle speed increases. When the accelerator pedal is released, the ACC will resume to operate at previously set cruise speed.

If the driver accelerates to a higher speed and then releases the accelerator the ACC will decrease to the target cruise

speed in a more gradual manner. If it is necessary to decrease to the target cruise speed rapidly, the driver may manually move the lever switch 'Deceleration' (2).

Note: If the accelerator pedal is pressed and held above the preset time period the ACC may exit to the Standby mode.

### **Adaptive Cruise Resume**

If the ACC system has reverted to, or been switched to, the Standby mode it can be reactivated by moving the lever switch to 'Resume' position (5). The target cruise speed will automatically be set to the target speed before exiting the adaptive cruise control system.


When driving at a high speed, if the driver resumes to a lower target cruise speed, the ACC will decrease to the target cruise speed in a more gradual manner. If it is necessary to decrease to the target cruise speed rapidly, the driver may manually move the lever switch 'Deceleration' (2).


### Clear the Speed Memory

If the lever switch is moved to 'OFF' position (7) or the vehicle START/STOP Switch is switched to the OFF position, the system may clear the adaptive cruise control set speed in the memory.

### **Special Driving Environments**


The Adaptive Cruise Control (ACC) system has it's limitations. Listed below are some conditions that may be beyond the safe operating limits. The driver should maintain control of the vehicle and must remain alert at all times. They should pay special attention to the traffic conditions and surroundings, select the appropriate speed and be ready to take any required actions.

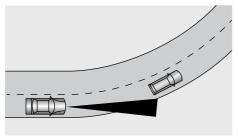

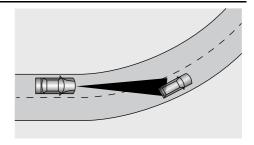


When turning at an intersection or following a vehicle into, or out of a curve, the ACC system may be unable to detect the vehicle ahead, even if it is in the same lane, it is possible the system may detect a vehicle in another lane.

Note: Do not use the adaptive cruise control system on entrance/exit ramps or sharp bends.

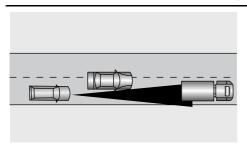


If the vehicle ahead changes lanes, but does not drive into the lane completely, the ACC system may be unable to detect the vehicle.

If the vehicle ahead changes lanes, but does not exit the lane completely, the adaptive cruise control system may determine that the vehicle ahead has exited the lane and accelerate to any preset speed.

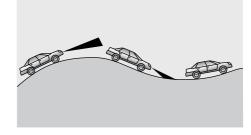

When driving on uneven roads that may include steep climbs or dips please DO NOT use the ACC system.

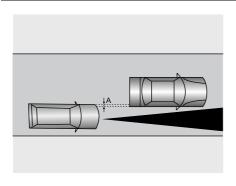

When driving behind a vehicle that is only partially overlapping your vehicle, 'A' in the graphic, the ACC system may be unable to detect anything.

Note: Please DO NOT use the adaptive cruise control system in the following situations:

 The ambient light level is insufficiently low, extremely bright, or the forward lighting of the vehicle is poor or compromised.

- The front view camera in the windscreen and/or radar sensor in the front bumper have a restricted field of vision, or severe weather such as heavy fog, heavy rain, heavy snow, ice, etc are affecting the sensor's field of view.
  - In conditions where the demist function of the windscreen is impaired.
- When driving the vehicle on a low-friction road (rapid changes in tyre traction may result in excessive wheel slip).
- When driving on a strong reflective road surface as a result of rain, snow, or ice.
- When the radar may be affected by electromagnetic interference (for example, metal objects such as rails and metal plates for road construction).
- After the position of radar has changed (for example, collision, vibration).
- Radar signals could be incorrectly reflected by local conditions (e.g., in multi-storey car parks, tunnels, water jets from sprinklers, etc.) these may degrade the function of the radar sensor.

Note: The time threshold value and vehicle speed provided in the system function description are just for your reference.

### **Parking Aid System**

### **Ultrasonic Sensor Parking Aid**



The purpose of the parking aid is to assist the driver in reversing! The sensors may not be able to detect obstacles of certain type, e.g. narrow posts or small objects no more than a few inches wide, small objects close to the ground, objects above the tailgate and some objects with non-reflective surfaces.



Keep the sensors free from dirt, ice and snow. If deposits build up on the surface of the sensors, their performance may be impaired. When washing the car, avoid aiming high pressure water jets directly at the sensors from close range.

### Rear Parking Aid

The ultrasonic sensors in the rear bumper monitor the area behind the vehicle to search for obstacles. If any obstacle is detected, the system will calculate its distance from the rear of the vehicle and communicates the message to the driver by sounding warning chimes.

### Front and Rear Parking Aid

The ultrasonic sensors in the front and rear bumper monitor the area front and behind the vehicle to search for obstacles. If an obstruction is detected, the sensors calculate its distance from the front of the car and communicate this message to the driver by sounding warning chimes.

### Parking Aid in Operation

### Rear Parking Aid


When the START/STOP Switch light is green, the rear parking aid is enabled automatically when reverse gear is selected, and it is switched off as soon as reverse gear is disengaged. A short beep is given by the parking aid. I second after selecting the reverse gear to indicate that the system is operating normally. If an obstacle is detected at the rear, the system will prompt the driver with warning alarms.

Note: If a longer, higher pitched sound is emitted (for approximate 3 seconds) when reverse gear is selected, this indicates a fault in the system. Seek assistance from your MG Authorised Repairer.

### Front and Rear Parking Aid system

- I. The system can be switched on in the following ways:
- · select R gear;
- When the START/STOP Switch light is green, the vehicle speed is less than 15km/h, select N or D gear and switch on the parking aid switch;
- 2. The system can be switched off in the following ways:

- Select P gear;
- Vehicle speed is more than I5km/h, system switched off automatic;
- Select N or D gear and switch off the parking aid switch.

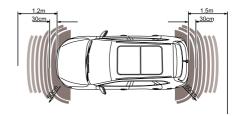

With the parking aid enabled, when obstacles are detected, the system will give sounds in different frequencies (there might be blind areas).

 If an obstacle is located within 1.5m range of the rear parking aid sensors or within 0.6m range of the

corner sensor, the warning commences. As the car moves closer to the obstacle, the audible sounds are transmitted more rapidly.

- If an obstacle is located within 1.2m range of the front parking aid sensors or within 0.6m range of the corner sensor, the warning commences. As the car moves closer to the obstacle, the audible sounds are transmitted more rapidly.
- Once the obstacle is within 0.3m range of the front or rear bumper, the audible sounds will merge into a continuous warning.

### Parking Camera \*



The purpose of the parking camera system is to assist the driver during reversing! The camera has limited field of view and cannot detect obstructions outside the field of view.

Some models have a rear parking camera fitted between the rear license plate lamps. When reverse gear is selected, the camera will display an image of what is immediately behind the car. This image will be shown on the infotainment system display.

### 360 Panoramic Imaging System \*



The purpose of the 360 panoramic imaging system is to assist the driver during reversing! The cameras have a limited field of view and cannot detect obstructions outside the field of view.



Although the entertainment display can provide high-definition images around the vehicle, please still pay attention to the current actual road conditions for your driving safety.

With the 360 panoramic imaging system working, the display interface will show a 360° panoramic image of the vehicle to facilitate the observation of the surrounding environment to make driving safer.

- When the reverse gear is selected, the system will automatically switch to the display interface of a 360° panoramic image, this will appear in the entertainment display.
- Touch or press the 360° View button to enter into the display interface of the 360 panoramic imaging system,

you are then able to touch buttons on the display to check images from different angles of view of the vehicle to provide a much safer driving environment.

- Touch the Setting button in the screen to open the 'Settings' interface, here you are able to switch the "when corner lights/indicators\* are active start the 360° view" function ON/OFF. When a forward gear is selected and the left/right corner light/indicator\* is on, the 360 panoramic image system will display the corresponding left/right view.
- Touch the Setting button in the screen to open the 'Settings' interface, here you are able to set the parking aid line to static, dynamic, dynamic + static, and off state.

Note: When the shift lever is placed in forward gear position, in no case can 360 panoramic imaging system be enabled as long as the vehicle speed exceeds or equals to the relevant value (standard definition panoramic imaging system 15km/h, high-definition panoramic imaging system 30km/h).

Note: For the vehicle equipped with the towing module, Parking Aid and Rear Driver Assistance are not available when the towing mode is on.

Note: The time threshold value and vehicle speed provided in the system function description are just for your reference.

### Rear Driver Assistance System \*

### **System Overview**



The effective recognition capabilities of the rear sensors can be limited by objects such as roadside buildings, guardrails, changes in pitch angle of the car due to heavy loading, road conditions such as bends or bumps or weather conditions such as snow and ice etc. Any of the above may trigger a false alarm.



The rear driver assist system may not provide adequate warning of very fast approaching vehicles or operate correctly on tight curves of radius.



The rear driver assist system will not operate correctly whilst towing a trailer or caravan.



The rear driver assistance function is only an aide, it is NOT a substitute for the attention of the driver. The driver must always remain in control, observe the surroundings and drive safely.



The correct operation of the rear sensors will be compromised if they are misaligned due to accident damage. This may cause the system to automatically shutdown.



To ensure that the radar sensors work correctly, the rear bumper should be kept free of snow and ice and must not be covered.




Use of non recommended materials or paint on rear bumper repairs may have a detrimental effect on the operation of the rear sensors. Please only use recommended materials.

The rear driver assistance system includes blind spot detection (BSD), lane change assist (LCA), rear cross

traffic alert (RCTA) and door open warning (DOW) functions.

The rear driver assistance modules are mounted at the rear of the vehicle on each side, they can assist in detecting vehicles behind or to the side of your vehicle.

The warning lamps to support this system are located within the LH and RH door quarter light trims, they will illuminate or flash to warn of an approaching object or car to assist you in manoeuvring the car safely.

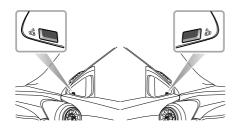

Note: The radar requires calibration on new vehicles and on vehicles where a rear detecting radar sensor

has been replaced. The rear detection radar sensors possess an automatic calibration function to compensate for installation errors within a certain range. When the START/STOP Switch light is green, the radar will automatically enter the calibration state. During the calibration process, the system will provide limited functions, and the alarm may be inaccurate. Upon completion of the calibration, the system will resume all functions.

### Switching the System Functions On/Off


The rear driver assist system function switches can be accessed via the infotainment screen. Select ON/OFF to activate/deactivate the system.

Note: For the vehicle equipped with the towing module, Parking Aid and Rear Driver Assistance are not available when the towing mode is on.

### **System Functions**

### **Blind Spot Detection (BSD)**

When the vehicle is driving forward, the system will monitor for motor vehicles located in the blind zones of the left and right exterior mirrors. When the conditions for activating the blind spot detection function are met, the corresponding warning lamps will illuminate. Subsequent operation of the relevant indicator will cause the warning lamp to flash to remind the driver of an approaching vehicle.

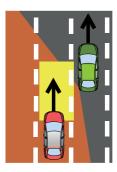

The conditions for activating the blind spot detection function include:


- I Rear driver assistance system is in the ON state and no faults are present in the system.
- 2 Blind spot detection (BSD) function is enabled.
- 3 The vehicle speed is above 10mph/15kmh.
- 4 There are motor vehicles in the blind zone of the vehicle. The system monitors both the left and right of the vehicle, the monitored areas are I m ahead, 7m

behind the rear of the vehicle, and 3.5m from the side of the vehicle.

Note: The warning lamps will not illuminate whilst you are overtaking another vehicle and your speed is greater than that of the vehicle you are passing, even though it is in the blind zone.

### Lane Change Assist (LCA)

When the vehicle is driving forward, the system will monitor for motor vehicles approaching rapidly in the adjacent lanes. When the indicators are activated, and the conditions for activating the lane change assist function are met, the system will flash the respective warning lamp to warn the driver of an approaching vehicle. This aims to help avoid collisions when changing lanes.

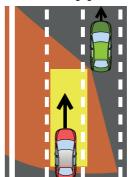


The conditions for activating the lane change assist function include:

- I Rear driver assistance system is in the ON state and no faults are present in the system.
- 2 Lane change assist (LCA) function is enabled.
- 3 The vehicle speed is above 10mph/15kmh.
- 4 The speed of the approaching vehicle is higher than the speed of your vehicle.
- 5 The approaching vehicle enters the detection area of the LCA, the monitored areas are 7-70mbehind your vehicle and 3.5m to the side of your vehicle.
- 6 The approaching vehicle is likely to have a collision with your vehicle within 3.8 seconds.

### Rear Cross Traffic Alert (RCTA)

When the vehicle is reversing, the system will monitor vehicles approaching from the left and right rear. When the conditions for activating RCTA function are met, the warning lamps on the corresponding side will illuminate, simultaneously a warning triangle icon for the corresponding side will be displayed in the infotainment screen to alert the driver to the situation.

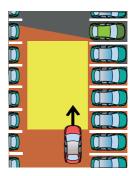

The conditions for activating the rear cross traffic alert function include:

- I Rear driver assistance system is in the ON state and no faults are present in the system.
- 2 Rear cross traffic alert (RCTA) function is enabled.
- 3 The vehicle is in Reverse gear.
- 4 The vehicle speed is less than 6mph/10kmh.
- 5 The speed of the vehicle being monitored is above 6mph/10kmh.
- 6 The motor vehicle drives across the system detection areas. The areas monitored to the left and right of the vehicle are 7m behind the rear of the vehicle, and 30m from the side
- 7 The approaching vehicle is likely to have a collision with your vehicle within 3.3 seconds.

### Door Open Warning (DOW)

Whilst the vehicle is stationary, the Door Open Warning system monitors the surrounding area for approaching vehicles, motorcycles and bicycles.

If the approaching object meets the conditions programmed into the system the corresponding warning light will illuminate to warn the occupant of the approaching object and assist in avoiding any collisions when the door is opened.



The conditions for activating the door open warning function include:

- I Rear driver assistance system is in the ON state and no faults are present in the system.
- 2 Door open warning (DOW) function is enabled.
- 3 The vehicle is in ACC or the START/STOP Switch light is green.
- 4 The vehicle is in stationary or speed < Imph/3kmh.
- 5 The speed of the vehicle being monitored is above 6mph/10kmh.
- 6 The vehicle drives across the system detection areas. The detection areas are: Rearward of the door mirrors and 2.4 metres from each side of the vehicle.
- 7 The approaching vehicle is likely to have a collision with your vehicle within 3.3 seconds.

Note: The detection area, collision time threshold value and vehicle speed provided in the system function description are just for your reference.

### **Driving Assist System**

The driving assist system can detect the road and environmental information ahead of the vehicle by utilising a front view camera and a front detection radar under certain conditions. This information is used to relay warning messages or provide assistance to help the driver control the vehicle more safely and reliably. The front view camera is located at the upper middle of the windscreen , the front detection radar is located at the lower middle of the front bumper.

### **Description of Front View Camera**

Note: The calibration of front view camera requires professional knowledge and tools. If calibration is required, please seek an MG Authorised Repairer.

### Calibration of front view camera

The front view camera will require re-calibration after any of the following operations:

- · Removal and refitting of the front view camera.
- · Replacement of the windscreen.

#### Obstruction of the front view camera

On occasion the front view camera view may become obstructed by foreign objects or stains on the glass. In these cases a prompt message will appear in the information centre. Please clean or wipe immediately.

# In the following situations, the detection performance of front view camera will be affected:

 Driving in poor weather conditions where visibility is reduced due to thick fog, heavy rain or snow etc.

- The front view camera is affected by light, for example low light levels at night, poor auxiliary lighting, excessive backlighting in the view, light from oncoming vehicles, abrupt change of brightness such as a quick bright/dark jump (tunnel entrance/exit), driving on surfaces with strong reflective properties (road surface covered with water or snow), or driving in places with insufficient light, such as tunnels, surrounded by tall buildings, underground parking lots, etc.
- The front view camera is partially or fully blocked by obstacles, e.g. dust, foreign objects on the windscreen.
- · The windscreen in view is damaged.
- Not calibrated after removing/refitting the front view camera.
- · Not calibrated after removing/refitting the windscreen.
- The front view camera is not secured in place.
- The outer surface of the windscreen is not clean (including wiper sweep).
- The demist/defrost action on the windscreen is inefficient in wet conditions.

### **Description of Front Detection Radar**

### Calibration of front detection radar

Front detection radar re-calibration is required after any of the following:

- Front detection radar mis-alignment failure, for example the position of the front detection radar has changed.
- Remove/refit the front detection radar or radar bracket.
- · Remove/refit the front anti-collision beam.
- The four-wheel alignment parameters or the driving axis have changed.

Note: If the front detection radar is subject to strong vibration or slight impact, the mounting position of the front detection radar needs to be checked and re-calibrated as necessary.

Note: The calibration of front detection radar requires professional knowledge and tools. If calibration is required, please seek an MG Authorised Repairer.

## Front radar performance will be effected in the following situations:

- When the front detection radar is covered by mud, snow, excessive water (rain) or water spray from the road.
- When the radar or surrounding areas are covered by objects such as self-adhesive labels or auxiliary lamps.
- Some targets may affect and weaken the detection capability of the front detection radar, such as road barriers, fences and tunnel entrances.
- When the front detection radar is subject to strong vibration or slight impact.
- When the front detection radar is affected by the environment, such as strong electromagnetic field interference or due to the target itself.

Note: Any snow that gathers on the front radar may be removed using a soft brush, and any ice should be removed using a propriety deicing spray.

Note: Avoid any collision or contact with the front radar module, this may cause misalignment. Any damage, however slight, may cause system performance issues.

### Speed Assist System (SAS)



The intelligent speed limit is an auxiliary function, it may display an incorrect speed limit value or no speed limit value in the instrument pack due to various factors. As a result, the vehicle speed is not restricted within the correct range. The driver still needs to observe the speed limit of the road traffic, and speeding is strictly prohibited.



The front view camera cannot recognise speed limit signs painted on the road surface. The driver MUST observe these speed limits and adjust the their speed accordingly.

The speed assist system has the following functions:



I Speed Limit Information Function (SLIF): The vehicle detects a speed limit sign (as shown above) at the roadside with the front view camera. The speed limit sign identified will be displayed in the instrument pack.

When the vehicle speed exceeds the speed limit by a preset amount, a visual warning in the instrument pack will flash.

- 2 Manual Speed Assist (MSA): The driver sets the maximum speed using the adaptive cruise control lever. The system will actively intervene and keep the vehicle speed within the permitted maximum speed limit. An acoustic warning and a visual warning will be utilised during the intervention. Please refer to the section "Speed settings of manual speed assist".
- 3 Intelligent Speed Assist (ISA): The vehicle detects a speed limit sign (as shown above) at the roadside with the front view camera. The speed limit sign identified will be displayed in the instrument pack. The system will automatically intervene and maintain speed control to keep the vehicle speed within the permitted maximum speed limit. An acoustic warning and a visual warning will be utilised when over speed.

### Speed assistance system setting

The operating interface for the speed assistance system is located in the infotainment display. Enter the vehicle

setting interface to locate the driving assist option, scroll across the page to find the setting interface for the speed assistance system:

- I Touch the corresponding button on the infotainment display to select closed or open the function.
- 2 Touch the corresponding button on the infotainment display to select the speed assist mode: speed limit information function, manual speed assist and intelligent speed assist.


### Speed settings of manual speed assist:

After the manual speed assist function is enabled, the speed limit value can be set by using the adaptive cruise control lever as follows:

I Moving the control lever up to adjust the speed limit. After the speed limit value is displayed in the instrument pack, press the SET button (3 in the figure below), the manual speed assist function will be activated. When pressing the SET button, if the actual speed value is smaller than setting, the speed limit value displayed in the instrument pack will be defined as setting. If the actual speed value is larger than speed limit adjusted, the speed limit value displayed in the

instrument pack will be defined as the current actual speed and rounded to the nearest value. Moving the lever up or down once will increase or decrease the speed limit at certain intervals, and pressing and holding the lever up or down will continuously change the speed limit.

- 2 After the manual speed assist function is activated, the system will actively intervene and keep the vehicle speed within the target speed limit. If the current actual speed exceeds the target speed limit value set by the driver, the system will reduce the speed untill it is below the target speed limit.
- 3 After the manual speed assist function is activated, the driver can press the SET button (3 in the figure below) on the adaptive cruise control lever to reinstate the system to standby state. Press the SET button again, the manual speed assist function will be resumed.

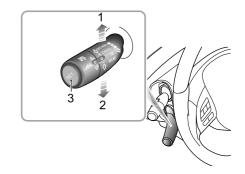

When the speed limit information function or intelligent speed assist function is enabled, the speed limit value indication illuminates. The "NNN" is displayed as "—". When the vehicle passes the first speed limit sign identified, the speed limit indication displays the real-time speed limit value.

Note: When the vehicle needs to change lane, make a turn or turn around at an intersection and the driver

NNN

uses an indicator in advance and slows down, the original speed limit value on the instrument pack will be reset and displayed as "—" until a new speed limit sign is detected. If the conditions are not met, the original speed limit value will be maintained and not be reset. The driver MUST observe the speed limits and adjust the their speed accordingly.

When the intelligent speed assist function is activated by pressing the SET button on the adaptive cruise control lever, the system indicator lamp in the instrument pack illuminates from yellow to green. If the intelligent speed assist function detects a fault or failure, the indicator lamp will flash yellow then extinguish. Please try to restart this function. If this function cannot be turned on, please contact an MG Authorised Repairer.

When the speed limit information function or intelligent speed assist function is enabled, and the front view camera detects a speed limit sign with text message below, the warning lamp illuminates yellow to remind the driver to recognise the text message by themselves.

The camera cannot recognise the text messages provided below the speed limit sign, such as auxiliary lane, 100km ahead, school section, 7:00-10:00. The camera will recognise the speed limit sign with text messages as a normal speed limit sign. The driver is required to make correct judgement according to the text message.

When the manual speed assist function is activated by pressing the SET button on the adaptive cruise control lever, the system indicator lamp in the instrument pack illuminates from yellow to green. If the actual speed exceeds the maximum value that can be set, the system will remain in the standby state, and the indicator lamp remains yellow. If the manual speed assist function detects a fault or failure, the indicator lamp will flash yellow then extinguish. Please try to restart this function. If this function cannot be turned on, please contact an MG Authorised Repairer.

When the manual speed assist function is enabled, the speed limit value indication illuminates. The "NNN" is displayed as "—". Move the adaptive cruise

control lever up and down to adjust the target speed limit value. The "NNN" will now show the adjusted speed limit value.

The driver can directly switch off, or temporarily suspend the speed assist system by carry out the following actions:

- I To temporarily exceed the speed limit (overtaking manoeuvre), press the accelerator pedal hard. The indicator lamp in the instrument pack illuminates green, and the speed limit value flashes.
- 2 Gently press the SET button on the end of the adaptive cruise control lever, the indicator lamp in the instrument pack will change to yellow. Press the SET button again to resume the functions.
- 3 Move the adaptive cruise control lever to the "ON" position to switch the speed assistance system off. Then the indicator lamp in the instrument pack will extinguish.

# The speed limit information function and intelligent speed limit function may be impaired in the following situations:

- I The detection performance of front view camera is affected.
- 2 The vehicle is driven at a high speed.
- 3 The speed limit signs are obscured by trees along the road, ice/frost, snow, dust, etc.
- 4 The speed limit signs are incorrectly placed or damaged.
- 5 There are multiple speed limit signs above the lane or on the sides of the road. Currently, the front view camera can only recognise the speed limit signs for the lane in which the vehicle is being driven.
- 6 Non standard speed limit signs or signs that contain additional information.
- 7 The speed limit signs set up at a fork in the road, on a bend or on-ramp/off-ramp.
- 8 During manoeuvres such as lane-changing.

#### **IMPORTANT**

- The camera may not correctly recognise speed limit signs during poor lighting conditions, bad weather, non-standardized or sheltered speed limit signs or the camera's own restrictions which include the recognition of similar signs (e.g., recognise a weight limit sign as a speed limit sign, or recognise a minimum speed sign as the maximum speed sign).
- Some drastic or rapid steering operations made by the driver may be judged as changing lane or turning around at an intersection by the system. This will result in the identified speed limit signs being cleared.

### Lane Departure Warning System (LDW)



The lane departure warning system is an auxiliary system that provides assistance to the driver. It does NOT remove the responsibility of safe driving from the driver. When choosing to use the lane departure warning system, the driver MUST always pay attention to the surroundings, hold the steering wheel and be prepared to make manoeuvres at any time. Failure to maintain overall control of the vehicle may result in an accident or personal injury.



The lane departure warning system does not always recognise the lane line. Sometimes poor road surfaces, certain road structures or objects may be mistaken for lane lines. When such situations occur, the lane departure warning system must be immediately turned off.

The lane departure warning system uses the front view camera to detect the lane lines ahead of the vehicle.

The system will operate when the following detection conditions are met:

- The function is switched ON.
- · Vehicle speed is above 60km/h.
- · Lane line markings are clear.

As long as the system recognises at least one lane line the indicator lamp in the instrument pack will illuminate green. When a wheel is about to cross the lane line, or has already crossed the line, the following warnings will be provided to prompt the driver to take action and maintain the vehicle position between the lane lines:


- · An audible warning sound is emitted.
- A visible warning depicting a car passing a lane line is displayed in the information message centre in the instrument pack.
- The steering wheel produces an vibration warning.

The function will automatically exit when the vehicle speed drops below 55 km/h.

### Lane departure warning system setting

The operating interface for the lane departure warning system is located in the infotainment display. Enter the

vehicle setting interface to locate the driving assist option, scroll across the page to find the setting interface for the lane assist system.

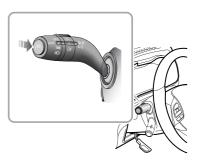

Having turned the lane departure warning system on in the infotainment display, press the button at the end of the indicator stalk switch (as shown above). The lane departure warning system will enter the standby or active state. The system defaults to the last selected state from when the START/STOP Switch light is green.

When the lane departure warning system is in the standby or active state, you can temporarily disable the function by pressing the button at the end of the indicator stalk switch (as shown above). Pressing the button again will resume the function.

When the lane departure warning function is enabled, the indicator lamp illuminates yellow. When the function is enabled and the vehicle speed is above 60km/h, the indicator lamp turns green. When the function is disabled, the system indicator lamp extinguishes. If the lane departure warning system detects a fault or failure, the indicator lamp will flash yellow for 90s, and then remain on.

## The lane departure warning system will be impaired in the following conditions:

- The front view camera is obstructed or it is impossible for the camera to detect the lane line ahead due to weather and environmental factors.
- The lane line is too thin, damaged, or fuzzy.
- The vehicle is driven on the bend with a small curvature radius.

- · The width of the road is too narrow or too wide.
- The vehicle is driven on a road section without lane lines.
- The vehicle has just entered a road section with lane lines.
- The vehicle changes lanes.
- The vehicle is not in D.
- The vehicle sways laterally too fast.
- · The vehicle speed is below 55km/h, or above 180km/h.
- The anti-lock brake system (ABS) and the dynamic stability control system (SCS) are activated.
- Faults exist in the anti-lock brake system (ABS), dynamic stability control system (SCS), electric power steering system (EPS), etc.

#### **IMPORTANT**

The lane departure warning system will not provide an alert in the following situations:

- The driver indicates in the direction of the lane line about to be crossed.
- · The hazard lamps are activated.
- The driver applies the accelerator rapidly, carries out an emergency manoeuvre or makes a hard brake pedal application.

It is recommended to turn off the lane departure warning system in the following situations:

- · Driving in a sports style or manner.
- · Driving in bad weather conditions.
- · Driving on rough or poor road surfaces.
- · Driving through roadworks or construction sites.

### Lane Departure Prevention System (LDP)



The lane departure prevention system is an auxiliary system that provides assistance to the driver. It does NOT remove the responsibility of safe driving from the driver. When choosing to use the lane departure prevention system, the driver MUST always pay attention to the surroundings, hold the steering wheel and be prepared to make manoeuvres at any time. Failure to maintain overall control of the vehicle may result in an accident or personal injury.



The lane departure prevention system does not always recognise the lane lines. Sometimes poor road surfaces, certain road structures or objects may be mistaken for lane lines. When such situations occur, the lane departure prevention system must be immediately turned off.

The lane departure prevention system uses the front view camera to detect the lane lines ahead of the vehicle.

The system will operate when the following detection conditions are met:

- · The function is switched ON.
- · Vehicle speed is above 60km/h.
- · Lane line markings are clear.


As long as the system recognises at least one lane line the indicator lamp in the instrument pack will illuminate green. When a wheel is about to cross the lane line, or has already crossed the line, the system will provide assistance to the driver by keeping the vehicle in between the lane lines by applying corrective steering intervention and simultaneously displaying a prompt. The function will automatically exit when the vehicle speed drops below 55km/h

In cases of two or more consecutive interventions within an accumulated interval of 180 seconds and in the absence of detecting any steering input by the driver during the intervention, an acoustic warning is sounded during the second intervention, and any further interventions within the 180 seconds. If there is need for, and starting with the third intervention, the acoustic alarm warning will continue longer than the previous warning signal. The lane departure prevention function will exit after five

interventions in the absence of a steering input by the driver being detected during the interventions.

### Lane departure prevention system setting

The operating interface for the lane departure prevention system is located in the infotainment display. Enter the vehicle setting interface to locate the driving assist option, scroll across the page to find the setting interface for the lane assist system:

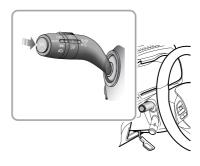

Having turned the lane departure prevention system on in the infotainment display, press the button at the end of the indicator stalk switch (as shown above). The lane departure prevention system will enter the standby or active state. The system defaults to the last selected state from when the START/STOP Switch light is green.

When the lane departure prevention system is in the standby or active state, you can temporarily disable the function by pressing the button at the end of the indicator stalk switch (as shown above). Pressing the button again will resume the function.

When the lane departure prevention function is enabled, the indicator lamp illuminates yellow. When the function is enabled and the vehicle speed is above 60km/h, the indicator lamp turns green. When the function is disabled, the system indicator lamp extinguishes. If the lane departure prevention system detects a fault or failure, the indicator lamp will flash yellow for 90s, and then remain on.

## The lane departure prevention system will be impaired in the following conditions:

- The system detects that the driver has not moved the steering wheel for a preset time period.
- During system intervention the steering wheel is turned in the opposite direction.
- The front view camera is obstructed or it is impossible for the camera to detect the lane line ahead due to weather and environmental factors.
- · The lane line is too thin, damaged, or fuzzy.
- The vehicle is driven on the bend with a small curvature radius.
- The width of the road is too narrow or too wide.
- The vehicle is driven on a road section without lane lines.
- The vehicle has just entered a road section with lane lines
- The vehicle changes lanes.
- · The vehicle is not in D.
- The vehicle sways laterally too fast.
- The vehicle speed is below 55km/h, or above 180km/h.

- The anti-lock brake system (ABS) and the dynamic stability control system (SCS) are activated.
- Faults exist in the anti-lock brake system (ABS), dynamic stability control system (SCS), electric power steering system (EPS), etc.

#### **IMPORTANT**

The lane departure prevention system will not operate in the following situations:

- The driver indicates in the direction of the lane line about to be crossed.
- · The hazard lamps are activated.
- The driver applies the accelerator rapidly, carries out an emergency manoeuvre or makes a hard brake pedal application.

### **IMPORTANT**

- In cases where the number of lanes increase or lanes merge the driver MUST take full control of the vehicle.
- In areas where there are complex traffic conditions such as intersections or road junctions with congestion, the driver MUST take full control.

It is recommended to turn off the lane departure prevention system in the following situations:

- Driving in a sports style or manner.
- Driving in bad weather conditions.
- Driving on rough or poor road surfaces.
- Driving through roadworks or construction sites.

### Lane Keeping Assist System (LKA)



The lane keeping assist system is an auxiliary system that provides assistance to the driver. It does NOT remove the responsibility of safe driving from the driver. When choosing to use the lane keeping assist system, the driver MUST always pay attention to the surroundings, hold the steering wheel and be prepared to make manoeuvres at any time. Failure to maintain overall control of the vehicle may result in an accident or personal injury.



The lane keeping assist system does not always recognise the lane line. Sometimes poor road surfaces, certain road structures or objects may be mistaken for lane lines. When such situations occur, the lane keeping assist system must be immediately turned off.

The lane keeping assist system uses the front view camera to detect the lane lines ahead of the vehicle. The system

will operate when the following detection conditions are met:

- · The function is switched ON.
- Vehicle speed is above 60km/h.
- Lane line markings are clear.


As long as the system recognises two lane lines on both sides the indicator lamp in the instrument pack will illuminate green. The system will always attempt to maintain the vehicle position in the centre of the lane by using corrective steering interventions. If the vehicle deviates from the lane lines the system will activate the lane departure warning function to alert the driver that the vehicle has deviated from the lane. The driver can take corrective action at any time. The function will automatically exit when the vehicle speed drops below 55km/h.

In the absence of a steering input from the driver for some seconds, an acoustic warning is provided, the instrument pack provides a yellow prompt. If the system still fails to see an input from the driver, the acoustic warning becomes continuous and the prompt illuminates red. If the system still fails to detect an input from the driver, it will assume the driver is not able to keep their hands on the steering

wheel and automatically exit the function. Accompanied by the exit, a more urgent acoustic warning is provided for at least 5s or until the driver holds the steering control again.

### Lane keeping assist system setting

The operating interface for the lane keeping assist system is located in the infotainment display. Enter the vehicle setting interface to locate the driving assist option, scroll across the page to find the setting interface for the lane assist system.

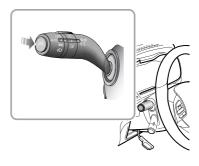

Having turned the lane keeping assist system on in the infotainment display, press the button at the end of the indicator stalk switch (as shown above). The lane keeping assist system will enter the standby or active state. The system defaults to the last selected state from when the START/STOP Switch light is green.

When the lane keeping assist system is in the standby or active state, you can temporarily disable the function by pressing the button at the end of the indicator stalk switch

(as shown above). Pressing the button again will resume the function.

When the lane keeping assist function is enabled, the indicator lamp illuminates yellow. When the function is enabled and the vehicle speed is above 60km/h, the indicator lamp turns green. When the function is disabled, the system indicator lamp extinguishes. If the lane keeping assist system detects a fault or failure, the indicator lamp will flash yellow for 90s, and then remain on.

## The lane keeping assist system will be impaired in the following conditions:

- The system detects that the driver has not moved the steering wheel for a preset time period.
- During system intervention the steering wheel is being manipulated by the driver.
- The front view camera is obstructed or it is impossible for the camera to detect the lane line ahead due to weather and environmental factors.
- · The lane line is too thin, damaged, or fuzzy.

- The vehicle is driven on the bend with a small curvature radius.
- The width of the road is too narrow or too wide.
- The vehicle is driven on a road section without lane lines
- The vehicle has just entered a road section with lane lines.
- · The vehicle changes lanes.
- · The vehicle is not in D.
- The vehicle sways laterally too fast.
- The vehicle speed is below 55km/h, or above 180km/h.
- The anti-lock brake system (ABS) and the dynamic stability control system (SCS) are activated.
- Faults exist in the anti-lock brake system (ABS), dynamic stability control system (SCS), electric power steering system (EPS), etc.

### **IMPORTANT**

The lane keeping assist system will not operate in the following situations:

- The driver indicates in the direction of the lane line about to be crossed.
- · The hazard lamps are activated.
- The driver applies the accelerator rapidly, carries out an emergency manoeuvre or makes a hard brake pedal application.

### **IMPORTANT**

- In cases where the number of lanes increase or lanes merge the driver MUST take full control of the vehicle.
- In areas where there are complex traffic conditions such as intersections or road junctions with congestion, the driver MUST take full control.

It is recommended to turn off the lane keeping assist system in the following situations:

- · Driving in a sports style or manner.
- Driving in bad weather conditions.

- Driving on rough or poor road surfaces.
- Driving through roadworks or construction sites.

### **MG Pilot System**



The assistant technology used in the MG Pilot system cannot replace the driver's judgment on the road and traffic conditions. The system can provide assistance for the driver but cannot replace the driver in driving. When choosing to use the MG Pilot system, due to the limitations of system detection and control, the driver must always be careful. Failure to maintain overall control of the vehicle may result in an accident or personal injury.



The MG Pilot system is a driver assistance function, it is NOT auto pilot. There are many situations where the function is restricted or exits. The driver needs to hold the steering wheel at all times and correct or take over the steering wheel control if necessary.

The MG Pilot system needs to be used in conjunction with the adaptive cruise control system. The MG Pilot system works on the basis of the adaptive cruise control system. If the lane lines ahead on both sides are clear, the system can assist the vehicle in driving within the lane lines. When driving at a speed lower than 60km/h, if there is a vehicle ahead and the lane lines ahead on both sides aren't clear, the system also can assist the vehicle in following the track of the vehicle ahead.


Note: The driver should adjust the vehicle speed and the following distance according to the road visibility, weather and road conditions. The MG Pilot system does not respond to pedestrians, animals, stationary vehicles and vehicles that drive across the lane or oncoming vehicles in the same lane. If the MG Pilot system cannot reduce the vehicle speed adequately, the driver MUST apply the brakes. In congested conditions, should another vehicle cut into the lane being used by the vehicle under MG Pilot control, the system may not detect the vehicle in adequate time to make a braking manoeuvre. In this case the brakes should be applied by the driver.

In the absence of a steering input from the driver for some seconds, an acoustic warning is provided, the instrument pack provides a yellow prompt. If the system still fails to

see an input from the driver, the acoustic warning becomes continuous and the prompt illuminates red. If the system still fails to detect an input from the driver, it will assume the driver is not able to keep their hands on the steering wheel and automatically exit the function. Accompanied by the exit, a more urgent acoustic warning is provided for at least 5s or until the driver holds the steering control again.

Note: When the driver uses this function to follow the track of the vehicle in front, the driver MUST pay attention to the surrounding environment. Overall responsibility for direction and braking of the car remains with the driver.

### MG Pilot system setting

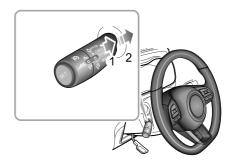

The operating interface for the MG Pilot system is located in the infotainment display. Enter the vehicle setting interface to locate the driving assist option, scroll across the page to find the setting interface for the MG Pilot system. The driver may select to turn it on/off. To use the MG Pilot system, the adaptive cruise control system must be turned on at the same time. When the function

is turned off, the message centre in the instrument pack will display the corresponding prompt.

Turn the adaptive cruise control level to "RESUME" twice will switch the MG Pilot system to standby or active state.

When the MG Pilot function is enabled, the indicator lamp illuminates yellow. When the function is active, the indicator lamp illuminates green. When the function is disabled, the system indicator lamp extinguishes. If the MG Pilot system detects a fault or failure, the indicator lamp will flash yellow for 90s, and then remain on.

# Technical requirements for using MG Pilot system:

- · The adaptive cruise control system must be activated.
- The MG Pilot system must be switched on via the corresponding button in the infotainment system.
- If the vehicle speed is below 60km/h, the system must be able to detect lane lines on both sides of the vehicle or a target vehicle directly ahead.

- If the vehicle speed is greater than 60km/h, the system must be able to detect lane lines on both sides of the vehicle.
- · The vehicle is in D.

# The MG Pilot system will be impaired in the following conditions:

- The system detects that the driver has not moved the steering wheel for a preset time period.
- During system intervention the steering wheel is being manipulated by the driver.
- The technical requirements for MG Pilot system are not met.
- The front view camera is obstructed or it is impossible for the camera to detect the lane line ahead due to weather and environmental factors.
- The lane line is too thin, damaged, or fuzzy.
- The vehicle is driven on the bend with a small curvature radius.
- · The width of the road is too narrow or too wide.
- The vehicle is driven on a road section without lane lines.

- The vehicle has just entered a road section with lane lines.
- · The vehicle changes lanes.
- · The vehicle is not in D.
- · The vehicle sways laterally too fast.
- The vehicle speed is below 55km/h, or above 180km/h.
- The anti-lock brake system (ABS) and the dynamic stability control system (SCS) are activated.
- Faults exist in the anti-lock brake system (ABS), dynamic stability control system (SCS), electric power steering system (EPS), etc.

It is recommended to turn off the MG Pilot system in the following situations:

- · Driving in a sports style or manner.
- · Driving in bad weather conditions.
- Driving on rough or poor road surfaces.
- · Driving through roadworks or construction sites.
- Driving through complicated road sections (such as urban sites and intersections).
- Driving on steep of excessively winding roads in low visibility.
- · Driving on grass tracks or unpaved roads.

#### **IMPORTANT**

The MG Pilot system will not operate in the following situations:

- The driver indicates.
- The hazard lamps are activated.
- The driver applies the accelerator rapidly, carries out an emergency manoeuvre or makes a hard brake pedal application.

#### **IMPORTANT**

- In cases where the number of lanes increase or lanes merge the driver MUST take full control of the vehicle.
- In areas where there are complex traffic conditions such as intersections or road junctions with congestion, the driver MUST take full control.
- The driver MUST be aware of the surroundings and be able to assume full control of the vehicle when using the MG Pilot function to track the car in front should the need arise.

#### Forward Collision Warning System (FCW)



The driver should pay full attention and drive carefully even if the vehicle is equipped with the forward collision warning system.

The forward collision warning system detects other vehicles and pedestrians ahead using the forward detection radar and front view camera. When the speed is above 30km/h and the vehicle is approaching the vehicle or pedestrian ahead rapidly, the system will prompt the driver to slow down in time and keep a relatively safe distance from the vehicle or pedestrian ahead by emitting an audible alert and displaying a prompt in the information message centre in the instrument pack.

Note: When the vehicle speed is between 30 and 85km/h, stationary targets can be detected. When the vehicle speed is between 30 and 150km/h, moving targets can be detected. When the vehicle speed is between 30 and 64km/h, pedestrians can be detected.

#### System setting

The operating interface for the forward collision warning system is located in the infotainment display. Enter the vehicle setting interface to locate the driving assist option, scroll across the page to find the setting interface for the forward collision system.

- I Touch the corresponding button in the infotainment display to switch the forward collision system on/off. Select alert in the assist mode to activate the forward collision warning system. When the START/STOP Switch light is green, the switch defaults to ON. When the driver actively selects to turn off the function, the prompt message will be displayed in the information message centre in the instrument pack, and the confirmation message pop up in the infotainment display.
- 2 Touch the corresponding button in the infotainment system to adjust the alert sensitivity. The system defaults to the last selected state from when the START/STOP Switch light is green.

The lamp illuminates yellow when the forward collision warning system is turned off or detects a fault or failure

# The forward collision warning system will be impaired in the following conditions:

- The front view camera is obstructed or its performance is affected.
- The vehicle is driving on a bend with a small curve radius
- The vehicle ahead is of a non standard type, or only the side can be detected.
- The vehicle ahead is too large or close making it impossible to make out the complete outline.
- · The vehicle is on an excessive gradient or slope.
- · The vehicle is in R.
- · The vehicle is accelerating or braking excessively hard.
- There are animals, signposts, guardrails, buildings or similar non motorised objects ahead.

#### **Automatic Emergency Braking System**



The driver remains responsible for the safety of the entire driving process, even if the vehicle is equipped with automatic emergency braking system and automatic emergency braking system for pedestrians. The driver MUST pay full attention and drive carefully. As driver assist systems, the automatic emergency braking system and automatic emergency braking system for pedestrians cannot prevent accidents or avoid collisions in all situations. The driver MUST always remain in control to avoid accidents or emergency situations.



Emergency braking whilst under the control of the automatic emergency braking system and automatic emergency braking system for pedestrians may cause injuries to the passengers. Therefore, drive carefully and all passengers MUST wear seat belts at all times.



Ensure the automatic emergency braking system, automatic emergency braking system for pedestrians or vehicle power system is switched off when being towed. If the automatic emergency braking system and automatic emergency braking system for pedestrians is enabled when the vehicle is being towed, adverse effects may affect the safety of your vehicle, the towing vehicle and the people around.



To avoid the occurrence of accidents, never specially test the functions of the automatic emergency braking system and automatic emergency braking system for pedestrians.

When the switch for the automatic emergency braking system in the infotainment display is ON, the system will detect and monitor the vehicle ahead in the same lane using the forward detection radar and front view camera. When the system detects that there is a risk of collision between the vehicle and the vehicle ahead, the brake system will automatically intervene to decelerate the vehicle, so as to

avoid collision accidents or mitigate damage from collision accidents.

When the switch for the automatic emergency braking system for pedestrians in the infotainment display is ON, the system will detect and monitor the pedestrians ahead in the same lane using the forward detection radar and front view camera. When the system detects that there is a risk of collision between the vehicle and the pedestrian ahead, the brake system will automatically intervene to decelerate the vehicle, so as to avoid collision accidents or mitigate damage from collision accidents.

If the vehicle is braked and stopped under AEB or AEBP control, it will keep stationary for about 2s, then the control of the vehicle will be handed over to the driver.

Note: When the vehicle speed is between 4 and 85km/h, stationary targets can be detected. When the vehicle speed is between 4 and 150km/h, moving targets can be detected. When the vehicle speed is between 4 and 64km/h, pedestrians can be detected.

#### **IMPORTANT**

- For stationary targets, collisions cannot be completely avoided when the vehicle speed is greater than 45km/h.
- For moving targets, collisions cannot be completely avoided when the relative speed is greater than 45km/h

The automatic emergency braking system and automatic emergency braking system for pedestrians will only be activated if the following conditions are met:

- The dynamic stability control system (SCS) and traction control system (TCS) are fault-free and ON.
- · The vehicle is in D or N.
- · The airbags are not deployed.

Note: In some cases, the driver may not have anticipated any braking intervention and does not want to apply the brakes whilst the automatic emergency braking system and automatic emergency braking system for pedestrians are braking heavily, the driver can temporarily cancel this operation by

heavily pressing the accelerator pedal after ensuring that it is safe to do so.

#### System setting

The operating interface for the AEB/AEBP system is located in the infotainment display. Enter the vehicle setting interface to locate the driving assist option, scroll across the page to find the setting interface for the forward collision system:

- I Touch the corresponding button in the infotainment system to switch the forward collision system on/off. Select emergency braking in the assist mode to activate the automatic emergency braking system. When the START/STOP Switch light is green, the switch of the system defaults to ON. When the driver actively selects to turn off the function, a prompt message will be displayed in the information message centre in the instrument pack and a pop up message will appear in the infotainment display.
- 2 Touch the corresponding button in the infotainment system to switch the automatic emergency braking system for pedestrians on/off. When the START/STOP Switch light is green, the switch defaults to ON. When

the driver actively selects to turn off the function, a prompt message will be displayed in the information message centre in the instrument pack and a pop up message will appear in the infotainment display.

Note: DO NOT operate any infotainment switches whilst driving. If you wish to make any settings changes please pull over when it is safe and legal to do so.

The indicator lamp illuminates yellow when the automatic emergency braking system is turned off or detects a fault or failure.

The indicator lamp illuminates yellow when the automatic emergency braking system for pedestrians is turned off or detects a fault or failure.

The operation of the automatic emergency braking system and automatic emergency

# braking system for pedestrians may be impaired in the following situations:

- The detection performance of forward detection radar or front view camera is impaired.
- The contour of the vehicle ahead is unclear, for example: water sprayed by the wheels of the front and surrounding vehicles in heavy rain/spray or snow conditions.
- When driving on special road conditions, for example, on a curve or a slope, on the section coming on/off a bridge, a vehicle ahead, an oncoming vehicle, a vehicle crossing the intersection, a vehicle making a turn, the side of a vehicle or a vehicle jumping the queue rapidly in a short distance is detected.
- There are vehicles running in the opposite direction in the same lane, or the vehicle itself runs in opposite direction.
- The vehicle ahead does not have or has obscured tail lamps when driving at night or in a tunnel; the tail lamps of the vehicle ahead are all LED strip lights or other homemade coloured lamps; inconsistent or flickering street lights when driving at night.

- The vehicle ahead is an ultra-large vehicle or a trailer, which is too big to be recognised by the system (such as a tractor, a trailer, a towing vehicle)
- The vehicle ahead does not follow the rules of driving and parking; the vehicle ahead is driving on the lane lines; the vehicle ahead is not in the same lane as your vehicle or the view of vehicle ahead is partially obscured.
- The pedestrian is not directly in front of the vehicle; the pedestrian is not fully visible; the pedestrian is not standing upright; there are a crowd of pedestrians; the pedestrian is over-shadowed; the pedestrian is in the dark or it is a child under a certain height, etc.

Note: The two systems function only when a vehicle or pedestrian is detected in the same lane ahead. The system cannot recognise any special-shaped ground obstacles (such as roadblocks, isolation piles, isolation strips, large stones and other scattered objects) and animals. The system may not recognise bicycles, motorbikes, small wheeled objects (such as suitcases, shopping carts or wheelchairs), some means of unusual transportation (such as the horse and cart, carriages etc.) and vehicles with higher chassis.

Note: The time threshold value and vehicle speed provided in the system function description are just for your reference.

#### **Load Carrying**



DO NOT exceed the gross vehicle weight or the permitted front and rear axle loads. Failure may result in vehicle damage or serious injury.

## Load Space



Ensure that the rear seat backrests are securely latched in the upright position when loads are carried in the load space behind the seats.



If the boot lid (or tailgate) can not be closed due to the type of cargo loaded, be sure to close all windows during driving, select the face distribution mode of the air condition, and set the blower to maximum speed, so as to decrease exhaust fumes entering the vehicle.

When luggage is carried in the boot, always ensure heavy items are placed as low and as far forward as possible, so as to avoid cargo shift in the event of an accident or sudden stop.

Drive carefully and avoid emergency braking or maneuvers when large or heavy items are carried.

Driving with the boot lid (or tailgate) open is very dangerous. If the load being carried requires the boot lid (or tailgate) to be open, please ensure the cargo and the boot lid (or tailgate) are suitably secured and every measure is taken to prevent exhaust fumes entering the vehicle.

#### **IMPORTANT**

Traffic regulations must be observed when loading cargo, if the cargo extrudes the loadspace, appropriate warning measures must be taken to warn other road users.

#### **Internal Loading**



DO NOT carry unsecured equipment, tools or luggage that could move, causing personal injury in the event of an accident, emergency braking or hard acceleration.



DO NOT create an obstruction that prevents the driver or passenger maintaining the correct sitting posture or obscures their vision.

Folding the rear seats can increase luggage space, refer to "Rear Seat" in "Seats and Restraints" chapter.

When cargo is loaded in the vehicle, place it at a position as low as possible and ensure that it is tightly secured, so as to avoid personal injury caused by cargo movement when traffic accidents or emergency braking occurs. If the cargo has to be put on a seat, no one is allowed to sit on that seat.

## **General Towing Safety**

Your vehicle can tow a trailer if you carefully observe load limits, use approved equipment, and follow the towing guidelines. Always check load limits before towing.

Towing loads in excess of the maximum towing weight can seriously affect vehicle handling and performance, and could damage your vehicles engine and drive-train.

Note: Exceeding any load limits advised by MG Motor is dangerous. Consult the recommended load limits and loading prior to any journey.

Check the loading of your vehicle and trailer carefully before starting to drive.

Trailer hitch load should never exceed the limit advised by MG Motor.

Note: Excessive towing loads reduce front tyre traction and steering control, too little trailer nose load can make the trailer unstable and cause it to sway.

**Tow bars:** Only genuine MG approved tow bars should be fitted to your vehicle. Only use the attachment method specified by the vehicle manufacturer for securing the

towing hitch. Contact your authorised MG dealer for more information.

**Safety chains:** Safety chains must be used as a precautionary measure should the trailer become unintentionally unhitched. Make sure the safety chain is securely attached to both the trailer and the vehicle prior to departure.

**Altitude:** Your engine delivers less power at higher altitude. If you tow a trailer in a mountainous area you should reduce the combined vehicle and trailer weight by 10% for every 1000 m of elevation.

**Gradients:** Where possible, when towing, you should plan your journey to avoid steep gradients. The advised brake towing mass stated assumes a maximum gradient capability of 12%. Where possible it is recommended you drive on gradients less than 12%. Follow the trailer associations recommendations for suitable roads.

Running in period: Avoid towing a trailer during your vehicles first 1000 km.

**Stop/Start function:** Manually switch the Automated Stop/Start function OFF when towing. The trailer weight

can affect your vehicles braking efficiency if Automated Stop/Start is activated on a hill while towing a trailer.


#### 5

# **Emergency Information**

- 250 Hazard Warning Devices
- 251 eCall SOS Emergency Assistance
- 254 Emergency Starting
- 257 Vehicle Recovery
- 260 Wheel Replacement
- 265 Fuse Replacement
- 278 Bulb Replacement

## **Hazard Warning Devices**

### **Warning Triangle**

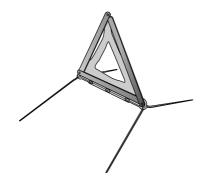

The warning triangle supplied with your vehicle is stowed in the loadspace.

If you have to stop your vehicle on the road in an emergency, you must place a warning triangle approximately 50 — 150 metres behind the vehicle, if

possible, and press the hazard warning switch to warn other road users of your position.

## eCall - SOS Emergency Assistance \*

In an accident, your vehicle's eCall – SOS Emergency Assistance can either be triggered manually or in severe cases automatically upon detection by vehicle's sensors. The eCall service is a public service of general interest and is accessible free of charge. The emergency call centre will establish verbal communication with the vehicle occupants in order to understand the extent of the emergency and the level of assistance required. An attempt will be made to send the following vehicle information message to the emergency call centre. The appropriate emergency services will be deployed to the vehicle's current location if known.

- · Current time, location and direction of travel
- · Vehicle type
- · Vehicle identification number (VIN)
- · Whether the call was automatically or manually initiated
- Vehicle category


This system will ensure that your personal data is securely protected. It is designed to ensure that it is not traceable and other external systems are not available. When the eCall triggers, the system will only transmit the data

information to the relevant public safety answering points designated by the respective public authorities of the country on which territory they are located, which will receive and process your emergency call request. The system will retain data locally within 13 hours of triggering.

You have the right to access the data information stored in this system, and to request the rectification, erasure or blocking of data information that does not meet the requirements of the regulations. When you think your personal data is infringed, you have the right to complain to the competent data protection authority.

For manual activation, press and release the SOS button in the overhead console for I second to activate an emergency services call. A single beep will be heard when the eCall is triggered and a message will be displayed on the vehicle's message centre and entertainment player. The entertainment player will be muted whilst the emergency services call is active. Manually triggered emergency services calls may be cancelled by pressing and releasing the SOS button again within 5 seconds of the initial press, two beeps will be heard confirming that the emergency services call has been cancelled and the messages will be removed.



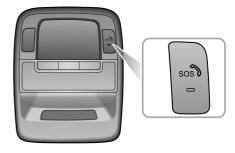

The emergency services call (eCall) system will perform a self-test when the ignition is turned ON. During a Self-Test the emergency services call (eCall) LED status indicator on the SOS button will flash quickly until completion. The LED status indicator will be illuminated solid if no system faults are present. The LED status indicator will be extinctd or flash slowly if a fault is detected. Faults detected during the self-test will be displayed on the vehicles message centre.

Note: The operation of eCall - SOS Emergency Assistance relies on cellular coverage and may be affected by signal outages or low signal strength.

Note: The automatic emergency services call (eCall) function may be disabled by a local MG Authorised Repairer upon request.

Note: It is strongly recommended the eCall function is not disabled, any action requested by the owner must be accompanied by a signed request.

## **Emergency Starting**



NEVER attempt to start or power the vehicle by pushing or towing.



Make sure that both batteries are of the same rated voltage (12 volts), and that the booster cables are approved for use with 12 volt car batteries.




Ensure sparks and naked flames are kept well away from the front compartment.




Ensure that each booster cable connection is securely made. There must be no risk of touching each other or other moving parts, this could cause sparking, which could lead to fire or explosion.

When the battery loses power, the booster cables can be used to connect the battery of a donor vehicle or external battery to start the vehicle.

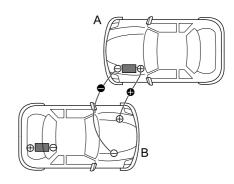



Where it is possible to open the tailgate of the disabled vehicle (B), please always give priority to the positive terminal as the positive connecting point. If the tailgate cannot be opened, please open the front compartment fuse-box. The terminal shown in figure below can be used as the positive connecting point.

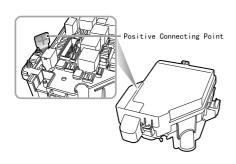

Ensure the START/STOP Switch is turned off and switch off ALL electrical equipment of BOTH vehicles, then follow the instructions below:

I Connect the RED booster cable between the positive (+) terminals of both batteries. Connect the BLACK booster cable from the negative (-) terminal of the donor battery (A) to a good earth point (an engine mounting or other unpainted surface, for example), as far away from the battery as possible and well away from fuel and brake lines on the disabled vehicle (B).

- 2 Power up or start the donor vehicle and allow it to run for a few minutes.
- 3 Power up or start the disabled vehicle. If the disabled vehicle does not power up or start after several attempts, it may need to be repaired. Please contact an MG Authorised Repairer.
- 4 After both the vehicles have normally started/powered, turn off the START/STOP Switch of the donor vehicle.
- 5 Disconnecting the booster cables must be an exact reversal of the procedure used to connect them, i.e. disconnect the BLACK cable from the earth point on the disabled vehicle FIRST.

#### **IMPORTANT**

DO NOT switch on any electrical appliance in the disabled vehicle until the booster cables have been disconnected.

Note: It is recommended to turn off lighting, air conditioning and other comfort appliances, and ensure that the disabled vehicle remains powered or

runs for more than I~2 hours after it is started, in order to recover the battery power. If the vehicle still fails to start/power normally after full charging, please contact an MG Authorised Repairer.


## **Vehicle Recovery**


**Towing for Recovery** 

**Towing Eye** 



DO NOT use a tow rope that is twisted - or the towing hook may be unscrewed.

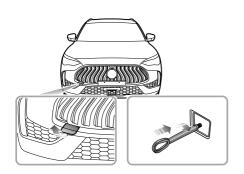

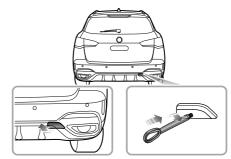

Your car is equipped with 2 towing eyes (located at the front and the rear of the vehicle), which are used for fitting the towing hook in the tool kit. The tool kit is placed beneath the loadspace floor. To fit the towing hook, remove the small cover set into the bumper, then screw the towing hook via the small hole into the threaded hole in the bumper beam (see illustration). Ensure the towing hook is fully tightened!

Note: The small cover removed may be secured to the bumper by a plastic cord.

Both towing points are intended for using by qualified recovery specialists to assist in the recovery of your vehicle when a breakdown or accident occurs. They are not designed for towing other vehicles, and must NEVER be used to tow a trailer or caravan. The vehicle can be towed using a tow rope but a towing bar is recommended.

#### **Towing**



When towing, DO NOT suddenly accelerate or brake suddenly, this can cause accidents.



DO NOT tow the vehicle with the driven front wheels in contact with the road surface.




When pushing or towing the vehicle onto the transporter, the driver's side seat belt should be inserted into the lock and maintained in the inserted state and then place the electric drive transmission in Neutral in order to release the EPB. The speed must remain below 5 km/h and be completed within 3 minutes.


#### Suspended Towing




DO NOT let the high voltage battery pack touch the ground.

If your vehicle needs to be towed, most qualified recovery specialists will use wheel lift equipment to suspend the vehicle. Please keep the driving wheels off the ground. Ensure the parking brake is released, the hazard warning lamps are activated and no passengers are left in the vehicle.

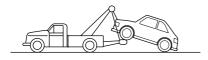


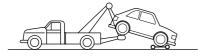

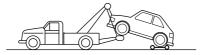

### **Transporter**


If your vehicle needs to be shipped, a special transporter is recommended. Secure the vehicle on the transporter as follows:

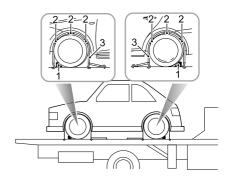

- I Apply the parking brake, place the shift lever in Park (P).
- 2 Place the wheel chock (I) as shown in the figure, then place the anti slip rubber pad (2) around the circumference of the tyre.
- 3 Fit the lashing straps (3) around the wheels and secure to the trailer. Tighten the straps until your vehicle is securely held.


### Wheel Replacement

#### Spare Wheel and Tool Kit

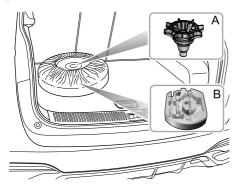

- I Open the trunk.
- 2 Unscrew the spare wheel retaining nut (A) and lift the wheel from the spare wheel cover.
- 3 Remove the tool kit (B).

#### Spare wheel replacement tool

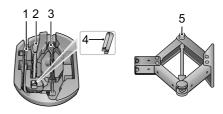

- I Wheel bolt spanner
- 2 Towing hook
- 3 Jack handle
- 4 Wheel bolt cap removal tool
- 5 Jack

#### Wheel Replacement

If you need to change the wheel during the journey, choose a safe place to stop away from the main road if possible. Always ask your passengers to get out of the car and wait in a safe area away from other traffic.

Switch on hazard warning lamps. If available, position a warning triangle about 50 to 150 metres behind your vehicle to warn approaching traffic.

Before changing a wheel, ensure the front wheels are in the straight ahead position. Apply the parking brake and place the gear shift lever in N position (MT) or P position (AT).

Observe the following precautions:

- · Ensure the jack is positioned on firm, level ground.
- If the vehicle must be parked on the hill, place chocks in front of and behind other 3 wheels to prevent the vehicle moving.

#### Positioning the Jack



NEVER work beneath the car with the jack as the only means of support. The jack is designed for wheel changing only!




NEVER jack the car using any positions other than the jacking points. Serious damage to the car could result.



Avoid accidental contact with any underbody parts, especially hot exhaust system components.

Position the jack on firm level ground under the jacking point nearest the wheel to be removed. Make sure that the rectangle groove of the jack must fit into the corresponding flanging of the body (with 1 triangle mark stated).

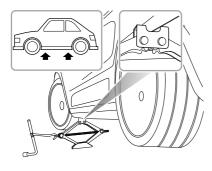

Turning the jack screw handle by hand, adjust the jack until the jack head fits snugly onto the flanging of the body. Ensure that the base of the jack is in full contact with the level ground.

#### Fitting the Spare Wheel



Regularly check the spare wheel tyre pressure, it may be underpressure due to unused for long periods of time. After replacement, at the first opportunity check and adjust the tyre pressure.



The wheel bolts must be tightened to the specified torque after changing a wheel (120 ~130 Nm).

- I Before raising the car, use the wheel bolt spanner to slacken each of the wheel bolts half a turn anti-clockwise.
- 2 Turn the handle in a clockwise direction until the tyre is clear of the ground.
- 3 Remove the wheel bolts and place them in the tool kit to prevent them from being lost. Make sure the vehicle is steady and there is no risk of slip or movement before removing wheel bolts.
- 4 Remove the road wheel.

Note: Avoid placing wheels face down on the ground - the surface may be scratched.

- 5 Fit the spare wheel and tighten the wheel bolts with wheel bolt spanner until the wheel is seated firmly against the hub.
- 6 Lower the car and remove the jack, then FULLY tighten the wheel bolts in a diagonal sequence.
- 7 Finally, return the tools to the tool kit, put the tool kit into the boot, tighten the retaining bolts, put down the luggage carpet and put the replaced wheel above the carpet (wheel rim face up).

Note: DO NOT stand on the handle of the wheel bolt spanner or use extension tube on the handle of the spanner.

Note: When replacing the wheel, please fully tighten the bolts in the diagonal sequence twice.

Note: Contact an MG Authorised Repairer to replace with a new tyre urgently.

#### Spacesaver Spare Wheel



Only one spacesaver spare wheel can be used at any one time, otherwise the operational performance and brake performance may be reduced, thereby leading to accident or injury to yourself and others.



When driving on icy or slippery surfaces it is advised to fit the spacesaver wheel to the rear of the vehicle to maintain adaquate stability. This may mean swapping a front wheel with a rear wheel.



Snow chains can not be used on the spacesaver spare wheel, this can cause damage to the car and snow chain.

When the spacesaver spare wheel is fitted, the vehicle speed should not exceed 80 km/h. Please have the full-scale tyre repaired and replace the spare wheel as soon as possible. This will extend the life span of the spare wheel for other emergencies.

Note: DO NOT use an automatic car wash when the spacesaver wheel is fitted, the guide rails of the

car wash may conflict with the wheel/tyre and cause damage.

## **Fuse Replacement**

#### **Fuse**

Fuses are simple circuit breakers which protect the car's electrical equipment by preventing the electrical circuits from being overloaded. A blown fuse may be indicated when the item of electrical equipment it protect stops working.

If you suspect a fuse has failed it can be checked by removing it from the fuse box and looking for a break in the wire inside the fuse.

It is recommended to have spare fuses in the vehicle, which can be obtained from a local MG Authorised Repairer.


#### **IMPORTANT**

- NEVER attempt to repair a blown fuse. ALWAYS replace a fuse with one of the same rating, otherwise the fire may be caused due to electrical system damage or circuit overload.
- If a replaced fuse fails immediately, please contact an MG Authorised Repairer as soon as possible.

#### **Fuse Box**

The vehicle is equipped with 3 fuse boxes:


- Luggage compartment fuse box (under the cover plate of luggage compartment Fuse Box)
- Passenger compartment fuse box (behind the left dashboard panel cover)
- Front compartment fuse box (front left of the front compartment)

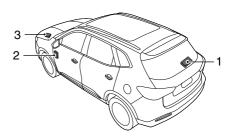

I Luggage Compartment Fuse Box

- 2 Passenger Compartment Fuse Box
- 3 Front Compartment Fuse Box

## Luggage Compartment Fuse Box

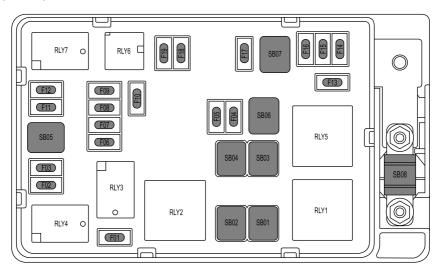

#### Check or Replace a Fuse

- I Turn off the START/STOP Switch and all electrical appliances, and disconnect the battery cable.
- 2 Move the luggage compartment carpet assembly, and open the cover plate of the luggage compartment fuse box marked with Fuse Box.
- 3 Loosen the two clips at the front and the rear of the fuse box, and open the cover plate of the luggage compartment fuse box to access the fuse.
- 4 Hold the fuse head with the fuse extraction tool, pull and remove the fuse, and check if the fuse is blown.
- 5 If a fuse is blown, replace it with another fuse of the same ampere value.


#### **Fuse Specification**

Code	Specs	Function
F01-F02	ı	-
F03	20A	ESS Coolant Pump
F04-F08		-

Code	Specs	Function
F09	5A	Electrical Battery Sensor
FIO	I5A	Rear Wiper System
FII-FI2	-	-
FI3	5A	Pedestrian Alert Control Module
FI4	-	-
FI5	10A	Chassis Management Module
FI6	-	-
FI7	20A	Energy Storage System , On-Board Charger
FI8	-	-
FI9	I5A	Fuel Pump
SB01	30A	Positive Temperature Coefficient

		ı
Code	Specs	Function
SB02	30A	Positive Temperature Coefficient
SB03-SB04	•	-
SB05	30A	Power Liftgate Control Module
SB06	30A	Positive Temperature Coefficient
SB07	-	-
SB08	200A	Battery Power

## **Passenger Compartment Fuse Box**

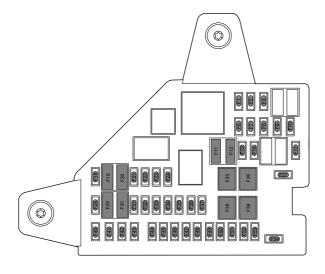

270 \_

#### Check or Replace a Fuse

- I Turn off the START/STOP Switch and all electrical appliances, and disconnect the battery cable.
- 2 Remove the driver side dashboard panel cover to access the fuse box.
- 3 Hold the fuse head with the fuse extraction tool, pull and remove the fuse, and check if the fuse is blown.
- 4 If a fuse is blown, replace it with another fuse of the same ampere value.

### **Fuse Specification**

Code	Specs	Function
FI	5A	Sensing Diagnostic Module (Airbag) , Electronic Shifter Control Unit , Instrument Pack , Body Control Module , Airbag Display Module , Rear PDC Sensor, E-Call TBOX
F2	7.5A	Engine Control Module , Hybrid Control Unit , Front PDC Sensor
F3	5A	Front View Control Module , Front Detection Radar
F6-F7	-	-
F8	I5A	Front Power Socket
F9	5A	Rear USB Ports
FIO	-	-


Code	Specs	Function
FII	7.5A	Mirror Heaters
FI2	25A	Rear Windscreen Heating
FI3–FI4	-	-
FI7	-	-
FI8	30A	Rear Left Window Lift
FI9	5A	EPB Switch , PRND Display
F20	30A	Rear Right Window Lift
F21	I0A	Front Right Seat Heating
F22	5A	Diagnostic Line Connector
F23	I0A	Front Left Seat Heating
F24	I0A	Gateway

Code	Specs	Function
F25	40A	KLR Relay, Passenger Compartment Fuses F7, F8, F9
F26	30A	Passenger Window lift
F27	-	-
F28	5A	Passive Entry Passive Start Module , Backup Immobilizer Coil
F29	10A	Gateway
F30	5A	Driver Door Switch Pack , Rain Light Sensor
F31–F32	-	-
F33	5A	Sensing Diagnostic Module (Airbag)
F34	5A	E-Call TBOX
F35	5A	Around View Module

Code	Specs	Function
F36	10A	Electronic Steering Column Lock
F37	20A	Driver Electric Adjust Seat Switch
F38	30A	Driver Window Lift
F39	30A	Blower
F40	I5A	Entertainment System
F41	5A	Upper Console Switch
F42	I0A	AC Control Module
F43	5A	Instrument Pack
F44	5A	Rear Driving Assistance System
F45	30A	Sunroof Motor
F46	-	-
F47	30A	Sunshade Motor

Code	Specs	Function
F48	20A	Passenger Electric Adjust Seat
F49-F50	1	-
F51	30A	Rear Windscreen Heating , Exterior Mirrors Heating
F52	10A	Headlamp , Interior Rear View Mirror , Headlamp Levelling Switch
F53	10A	Electronic Shifter Control Unit
F54	-	-

# **Front Compartment Fuse Box**

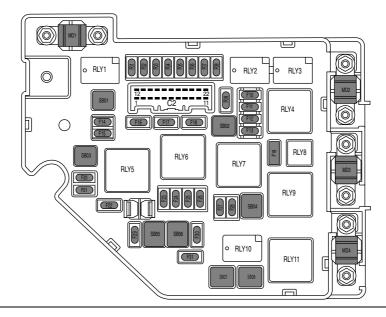

### Check or Replace a Fuse

- I Turn off the START/STOP Switch and all electrical appliances, and disconnect the negative battery cable.
- 2 Press the lock catch to open the upper cover of front compartment fuse box.
- 3 Hold the fuse head with the fuse extraction tool, pull and remove the fuse, and check if the fuse is blown.
- 4 If a fuse is blown, replace it with another fuse of the same ampere value.

#### **Fuse Specification**

Code	Specs	Function
FOI	I0A	Right Daytime Running Lamp
F02	I0A	Left Daytime Running Lamp
F03	I0A	DC/DC Convertor
F04	-	-
F05	5A	Electric Air Conditioning Compressor

Code	Specs	Function
F06-F07	-	-
F08	20A	Power Electronic Box Coolant Pump
F09	10A	Fuel Pump Relay , Lower Console Switch, Fuel Tank Isolation Diagnosis Module (Tank Leakage), Brake Pedal Switch, Diagnose Module of Tank Leakage
FI0	20A	Engine Control Module
FII	15A	Intake Variable Camshaft Timing, Exhaust Variable Camshaft Timing, Upstream Lambda Sensor, Canister Purge Valve, Oil Control Valve
FI2	20A	Ignition Coil

Code	Specs	Function
FI3	I5A	Waste Gate Control Valve, Dump Valve, Electronic Thermostat, Mass Air Flow Sensor , Downstream Lambda Sensor
FI4	25A	Body Control Module
F15	I0A	Rear Washer System
FI6	25A	Body Control Module
FI7	25A	Body Control Module
FI8	25A	Body Control Module
F19	-	-
F20	I0A	Front Washer System
F21	I0A	Engine Control Module
F22	I0A	Power Electronic Box
F23-F24	-	-
F25	30A	Hybrid Control Unit

Code	Specs	Function
F26	25A	Body Control Module
F27	-	-
F28	I0A	Engine Auxiliary Pump
F29	I5A	Horn
F30	I0A	Hybrid Control Unit
F31	25A	Front Wiper System
SB01	25A	Body Control Module
SB02	60A	Cooling Fan Low Speed Relay
SB03	40A	EVP
SB04	40A	Cooling Fan
SB05	40A	Stability Control System-Pump
SB06	40A	Stability Control System-Valve
SB07	-	-

Code	Specs	Function
0000	оросо	
SB08	50A	Cooling Fan
MDI	200A	Emergency Starting Positive Connecting Point
MD2	100A	Passenger Compartment Fusebox
MD3	80A	Electric Power Steering Module
MD4	200A	Luggage Compartment Fusebox

# **Bulb Replacement**

### **Bulb Specification**

Bulb	Туре
Front Interior Lamps (bulb configuration*)	W5W 5W
Reverse Lamps	W16W 16W
License Plate Lamps	W5W 5W

Note: Other light sources not included in the list are LED, which cannot be replaced individually.

### **Bulb Replacement**

Before replacing any bulb, turn off the START/STOP Switch and lighting switch and disconnect the battery negative terminal to avoid any possibility of a short circuit.


Note: Only replace bulbs with the same type and specification.

When replacing the bulb, actions shall be gentle so as not to damage the lamp or bulb. Take care NOT to touch the glass with your fingers; always wear gloves or use a cloth to handle the bulb. If the bulb glass is scratched or contaminated, it may cause the bulb can not concentrate the light. If necessary, clean the glass with methylated spirits to remove fingerprints.

If in doubt, consult an MG Authorised Repairer on specific replacement operation.

#### Front Interior Lamp Bulb Renewal\*

- I Disconnect the battery negative terminal.
- 2 Use a small flat-bladed screwdriver to gently prise the lens from the lamp assembly.

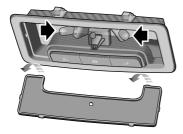


- 3 Remove the bulb from its mounting to remove.
- 4 Install new bulb.
- 5 Install the lens, locate the two prongs at the front of the lens and then carefully flex the lens to locate the two prongs at the rear of the lens into the lamp assembly. Push the lens upwards until it 'clicks' into position


- 6 Connect the negative battery terminal.
- 7 Test lamp operation.

#### **Reverse Lamps**


- I open the tailgate.
- 2 Pry off the left (right) rear wheel eyebrow snap and remove the left (right) rear wheel eyebrow.
- 3 Remove one screw (1) securing the rear bumper to the left (right) side of the body and one screw (2) securing the rear bumper to the left (right) rear wheel housing liner

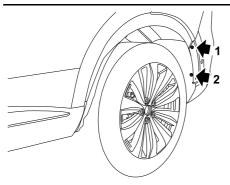


4 Remove the 2 bolts (1) securing the rear bumper to the underbody and the 4 screws (2) securing the rear bumper to the left (right) rear wheel housing liner.

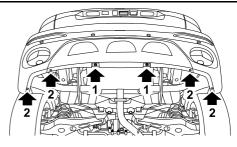

- 5 Disconnect the harness connector and remove the rear bumper.
- 6 If necessary, remove the 3 screws (1) fixing the left (right) rear bracket of the rear bumper to the body, and remove the 5 screws (2) fixing the left (right) mounting bracket of the rear bumper to the body, so as to remove each mounting bracket of the rear bumper.

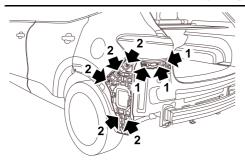


7 Disconnect the harness connector and remove the rear bumper assembly.

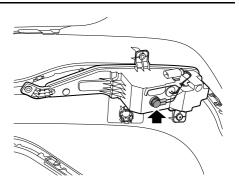

- 8 Rotate the bulb holder anti-clockwise and remove the bulb.
- 9 Fit new bulb to bulb holder.
- 10 Insert bulb holder in lamp assembly, rotate clockwise until fully secure.
- 11 Connect the harness connector and refit the rear bumper to the vehicle body.
- 12 Test lamp operation.

### **License Plate Lamps**


- Open the tailgate and support it reliably.
- 2 Remove the boot of the tailgate lock body.
- 3 Pry open the clip that fixes the upper trim panel to the tailgate, and remove the upper trim panel of the tailgate.

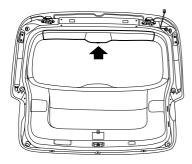


4 Remove the 2 screws that fix the tailgate middle trim panel to the tailgate, pry out the clips, and remove the tailgate middle trim panel.



5 Pry off the screw trim cover, remove the 3 screws that fix the tailgate lower trim panel to the tailgate, pry off the snap, disconnect the harness connector, and remove the tailgate lower trim panel.

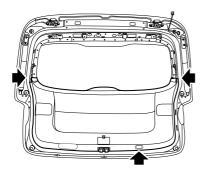

- 6 If there is a power tailgate switch, remove the power tailgate switch.
- 7 Disconnect the harness connector, and pry the clip fixing the rear license plate lamp assembly to the tailgate from the inside of the tailgate.

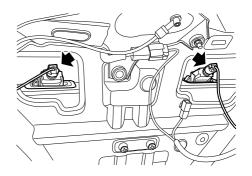

- 8 Rotate the bulb holder anti-clockwise and remove the bulb.
- 9 Fit new bulb to bulb holder.
- 10 Insert bulb holder in lamp assembly, rotate clockwise until fully secure.
- II Refit the tailgate lower trim panel, middle trim panel and upper trim panel.
- 12 Refit the boot of the tailgate lock body.

13 Test lamp operation.

- 286 Maintenance
- 289 Bonnet
- 291 Engine Compartment
- 292 Engine
- 295 Cooling System
- 297 Brake
- 299 Battery
- 301 High Voltage Battery Pack
- 303 Washer
- 305 Wipers
- 308 Tyres
- 314 Cleaning and Vehicle Care

#### **Maintenance**

## **Routine Servicing**

The safety, reliability and performance of your car will depend partly on how well it is maintained. You must ensure that maintenance is carried out when required and according to the information contained in the "Service Schedule" - owners section.

#### Servicing

For next service information, please refer to "Message Centre" in "Instruments and Controls" chapter or information related to entertainment system. After the completion of each service, the next service display will be reset by MG Authorised Repairer.

Note: If a service is not carried out (or the display is not reset by a MG Authorised Repairer after service), the service display cannot provide correct information

### Service History

Ensure MG Authorised Repairer registers the Service History after each service.

#### **Brake Fluid Replacement**

Replace the brake fluid according to the "Service Schedule" requirements.

Note: Brake fluid replacement will be an additional cost.

#### **Coolant Replacement**

The coolant (anti-freeze and water solution) needs to be replaced according to the "Service Schedule" requirements.

Note: Coolant replacement will be an additional cost.

#### **Emission Control**

Your car is fitted with exhaust emission and evaporative control equipment designed to meet specific territorial and legal requirements. Incorrect engine settings may adversely affect exhaust emissions, engine performance and fuel consumption, as well as causing high temperatures, which could result in damage to the catalytic converter, particulate filter and engine.

#### **IMPORTANT**

You should be aware that unauthorised replacement, modification or tampering with engine settings or this equipment by an owner or motor vehicle repairer could result in the manufacturer's warranty being deemed as invalid.

#### **Owner Maintenance**



Any significant or sudden drop in fluid levels, or uneven tyre wear, should be reported without delay. For further information, refer to an MG Authorised Repairer.

In addition to the routine services referred to previously, a number of simple checks must be carried out more frequently. You can perform such checks by yourself. Advice is given as follows.

#### Daily Check

- Operation of lights, horn, direction indicator lamps, wipers, washers and warning lights.
- · Operation of seat belts and brakes.

- Look for fluid deposits underneath the car that might indicate a leak.
- · Check tyre appearance.

#### Weekly Check

- Engine oil level.
- Coolant levels.
- Brake fluid level.
- Windscreen washer fluid level.
- · Operate air conditioning.

Note: The engine oil level should be checked more frequently if the car is driven for prolonged periods at high speeds.

#### **Special Driving Conditions**

If your car is frequently used in dusty conditions, or operated in extreme climates where sub-zero or very high ambient temperatures are normal, more frequent attention may need to be paid to servicing requirements. You need to carry out special maintenance operations (refer to the service schedule in the owners section or contact MG Authorised Repairer).

### Safety in the Garage



Cooling fans may commence operating after the engine or vehicle power system is switched off, and continue operating for a number of minutes. Keep clear of all fans while working in the engine compartment.

If you need to carry out maintenance, observe the following safety precautions at all times:

- Keep your hands and clothing away from drive belts and pulleys.
- If the car has been driven recently, DO NOT TOUCH exhaust and cooling system components until the engine/electric transmission has cooled.
- DO NOT TOUCH electrical leads or components while the engine is running, or with the START/STOP Switch on.
- NEVER leave the engine running in an unventilated area
   exhaust gases are poisonous and extremely dangerous.
- DO NOT work underneath the car with a wheel changing jack as the only means of support.

- Ensure that sparks and naked lights are far away from the engine compartment.
- · Wear protective clothing and work gloves.
- Remove watches and jewelry before working in the engine compartment.
- DO NOT allow tools or metal parts of the car to make contact with the battery leads or terminals.

#### **Toxic Liquid**

Fluids used in motor vehicles are poisonous and should not be consumed or brought into contact with open wounds. These include: battery acid, coolant, brake fluid, fuel, engine oil and windscreen washer fluid.

For your own safety, ALWAYS read and obey all instructions printed on labels and containers.

#### **Used Engine Oil**


Prolonged contact with engine oil may cause serious skin disorders, including dermatitis and cancer of the skin. Wash thoroughly after contact. Used engine oil should be disposed of correctly. Incorrect disposal can cause a threat to the environment.

#### **Bonnet**

#### **Opening the Bonnet**



DO NOT drive when the bonnet is open or retained only by the safety catch.

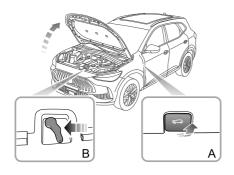

- I Pull the bonnet release handle (A) from the inside of the car.
- 2 Push the lever (B) mounted on the bonnet in the arrow direction to release the bonnet safety catch.
- 3 Raise the bonnet to open it.

# **Closing the Bonnet**

Hold the bonnet using both hands and lower it, allowing it to drop for the last  $20 \sim 30$  cm to fully close the bonnet.

By attempting to lift the front edge of the bonnet, check if the lock is fully engaged after closing the bonnet. If it is not fully engaged, please reopen the bonnet and repeat the closing action.

### **Bonnet Open Warning**

If the bonnet is not fully engaged, when the START/STOP Switch is in the ON/RUNNING position, the corresponding alarm icon will be displayed in the information message centre of the instrument pack. If it is detected that the bonnet is not fully engaged whilst driving, an audible warning will sound.


#### **IMPORTANT**

- For safety reasons, the bonnet should be closed well when driving. Therefore you must check after closing the bonnet that the bonnet is securely latched, e.g. the bonnet edge is flush with the body of the car.
- You should stop the car immediately when safety permits and close the bonnet if it is not closed fully when driving.
- Beware of injury to hands while fully closing the bonnet with a downward force.

# **Engine Compartment**



While working in the engine compartment, always observe the safety precautions listed under "Safety in the Garage". Refer to "Maintenance" in "Maintenance" section.

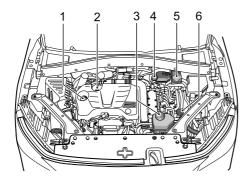


- I Engine oil filler cap (black cap)
- 2 Engine oil dipstick (yellow)
- 3 Engine coolant expansion box (black cap)
- 4 Brake fluid reservoir (yellow cap)
- 5 Electric drive transmission coolant expansion box (black cap)
- 6 Washer fluid reservoir (blue cap)

# **Engine**

#### 1.5L Turbocharged Engine Oil

#### **ACEA/API Classification of Engine Oils**

European Automobile Manufacturers Association (ACEA) and American Petroleum Institute (API) will classify the engine oils based on performance and quality. To ensure the best performance of the vehicle, Please use the engine oil recommended by the manufacturer that meets both ACEA C5 and API SP specifications.

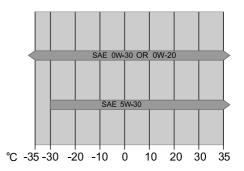

#### Engine Oil Level Check and Top Up



Driving the car with the oil level ABOVE the upper mark, or BELOW the lower mark on the dipstick, will damage the engine. Take care to avoid spilling engine oil onto a hot engine –Spillages may result in a fire!



1.5L Turbocharged Engine

Check the oil level weekly and top up with oil when necessary. Ideally, the oil level should be checked with the engine cold and the car resting on level ground. However, if the engine is running and already getting warm, wait for at least five minutes after switching off the START/STOP Switch before checking the level.

- I Withdraw the dipstick and wipe the blade clean.
- 2 Slowly insert the oil dipstick and pull it out again to check the oil level; the oil level shall not be lower than the 'MIN' mark on the oil dipstick.
- 3 Unscrew the oil filler cap and refill the oil to maintain the oil level between the 'MAX' mark and 'MIN' mark on the oil dipstick.
- 4 Wait for 5 minutes and then recheck the oil level, adding more oil if necessary DO NOT OVERFILL!
- 5 Finally, ensure the dipstick and filler cap are replaced.

#### **Engine Oil Specification**

Use the engine oil recommended and approved by the manufacturer. Refer to "Recommended Fluids and Capacities" in "Technical Data" chapter.

Note: DO NOT use any oil additives.

#### **IMPORTANT**

Check the engine oil more frequently if the car is driven at high speeds for prolonged periods.

# **Cooling System**

#### Coolant Check and Top Up




DO NOT remove coolant expansion tank cap when the cooling system is hot - escaping steam or hot coolant could cause serious injury.

It is recommended that the cooling system should be checked weekly when the cooling system is cold and with the car resting on level ground. If the coolant level is below the "MIN" mark, open the coolant expansion tank cap and top up coolant. The coolant level should not be higher than the "MAX" mark.

Note: Prevent coolant from coming into contact with the vehicle body when topping up. Coolant will damage paint.


If the coolant level falls appreciably during a short period, and you suspect that there may be a leak, please seek an Authorised Repairer for service.

# Engine Coolant Expansion Tank and EDU Coolant Expansion Tank

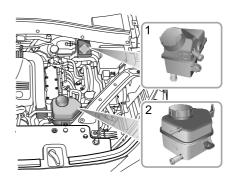

- I EDU Coolant Expansion Tank
- 2 Engine Coolant Expansion Tank

#### **Battery Coolant Expansion Tank**

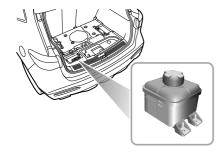



Prevent coolant coming into contact with the skin or eyes. If this occurs, rinse immediately with plenty of water. If eyes are still red, painful or uncomfortable, seek medical attention immediately.

Please use the coolant which is recommended and certified. Please refer to 'Recommended Fluids and Capacities' in the "Technical Data" section.

Note: The addition of corrosion inhibitors or other additives to the cooling system of this car may severely disrupt the efficiency of the system and cause parts damage. For cooling system issues please consult an Authorised Repairer.

#### **Coolant Specification**



Coolant is poisonous and can be fatal if swallowed - keep coolant containers sealed and out of the reach of children. If accidental contact of coolant by children is suspected, seek medical assistance immediately.

#### **Brake**

#### **Brake Pads**



DO NOT rest your foot on the brake pedal while driving; this may overheat the brakes, reduce their efficiency and cause excessive wear.

The free stroke of brake pedal is in the range of 0 ~ 30mm.

Reasonable usage scope of brake friction pair: not less than 2mm for minimum thickness of brake pads, 23~25mm for front brake disc, and 10~12mm for rear brake disc.

For the first 1500km, you should avoid situations where heavy braking is required.

Remember that regular servicing is vital to ensure that all the brake components are examined for wear at the correct intervals, and replaced when required to ensure long term safety and optimum performance during the interval prescribed in Service Portfolio.

The car needs to run in for 800km after the brake pad or disc is replaced.

### Brake Fluid Check and Top Up



Brake fluid is highly toxic, keep containers sealed and out of the reach of children. If accidental contact of brake fluid is suspected, seek medical attention immediately.



Prevent brake fluid coming into contact with the skin or eyes. If this occurs, rinse immediately with plenty of water. If eyes are still red, painful or uncomfortable, seek medical attention immediately.

The brake fluid level should be checked weekly when the system is cold and with the car on level ground. If you need to open the brake reservoir, please clean filler cap before removing.

The fluid level can be seen through the reservoir and should be maintained between the 'MAX' mark and 'MIN' mark. If you need to open the brake reservoir, please clean filler cap before removing.

Note: Do not allow the brake fluid level to drop below the 'MIN' mark or above the 'MAX' mark.



Note: Brake fluid will damage painted surfaces. If you accidentally spill the brake fluid on the painted surface, soak up any spillage with an absorbent cloth immediately and wash the area with water or car shampoo.

# **Brake Fluid Specification**

Use the brake fluid recommended and certified by the manufacturer. Refer to "Recommended Fluids and Capacities" in "Technical Data" chapter.

#### **IMPORTANT**

Replace the brake fluid regularly according to the information contained in the Service Portfolio.

# **Battery**

### **Battery Maintenance**



DO NOT leave electric components switched on when the vehicle is not in READY mode, otherwise the battery may become flat, resulting in the failure to start the vehicle and the reduction of battery life.



Always store batteries upright, tilting may allow the corrosive substances contained within the battery to leak out.




Never attempt to dismantle a battery, they are sealed units.

The battery, located in the boot, is maintenance-free, therefore there is no need to refill fluid.

According to current load conditions and battery status, the system may limit the power of part of electric appliance, therefore, please start the vehicle for charging the batteries immediately.

Note: It is recommended to start the vehicle for half an hour every week to help extend the service life of the battery. If the vehicle is stored for more than I month, remove the negative terminal from the battery. Make sure that the START/STOP Switch has been turned off before connecting or disconnecting the negative terminal.

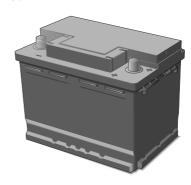

### **Battery Label**

Icon	Explanation
	Keep away from inflammables.
	Wear goggles during maintenance.
	Keep away from children.
A	It contains acid liquid.
	Read the user manual for details.
	It is explosive.
	•

### **Battery Replacement**



The battery contains sulphuric acid, which is corrosive.

Please go to an MG Authorised Repairer to remove and install the battery. Only fit a replacement battery of the same type and specification as the original to maintain the correct vehicle functionality.

The battery must be disposed of using an approved method, used batteries can be harmful to the environment. It should be recycled by a professional company. Please consult an MG Authorised Repairer for more details.

# **High Voltage Battery Pack**

Precautions and restricted conditions for use of battery



If the vehicle is not going to be used, parked, or stored for a long time it is necessary to charge the vehicle at least once every 3 months. During this time, the High Voltage battery state of charge should not be allowed to drop below 50%.



Failure to follow these guidelines will result in High Voltage battery damage and invalidate the warranty.



DO NOT attempt to dismantle the battery pack or any High Voltage components - THESE ARE DANGEROUS. Any signs of dismantling or damage caused by attempts to dismantle will invalidate the warranty.

I DO NOT park the vehicle in conditions where the ambient temperature exceeds 45 °C for more than 15

- days. This will effect the performance and service life of the high voltage battery.
- 2 It is recommended using the vehicle at least once a month.

Where possible it is recommended that you carry out a 5-hour slow charge every month to extend the service life of high-voltage battery pack. If the vehicle is not in use for a long time, make sure that the electricity charge level of high-voltage battery pack is displayed as  $3\sim 5$  segments on the instrument pack gauge; if it is not in use for more than 3 months, you must conduct an equalisation charge for high-voltage battery pack.

The battery management system will monitor the status of the high- voltage battery pack; after monitoring for a period of time, if an equalisation charge has not been carried out for some time the message centre in the instrument pack will display 'Please Slow-Charge the Vehicle'. At this time you must carry out an equalisation charge. For operation mode, please refer to 'Equalisation Charging' in 'Starting & Driving' section.

- 3 In the event of an accident, damage to the high voltage battery or any of its related components, or any repairs made to the high voltage system the car must be inspected by qualified personel at an MG Authorised Repairer.
- 4 In the event of any accident or body repairs being required please consult the qualified personnel at an MG Authorised Repairer. The repair may require high voltage battery isolation or specialist HV component removal.

#### **IMPORTANT**

Only fully trained and qualified personel are allowed to work on the high voltage systems and components of this vehicle. Any disassembly of such systems or components is strictly prohibited.

#### Washer

### Washer Fluid Check and Top Up



Windscreen washer fluid is flammable. DO NOT allow windscreen washer fluid to come into contact with naked flames or sources of ignition.



When filling the washer fluid, DO NOT let the washer fluid spill on parts around the engine or electric transmission or on the paint surface of vehicle body. In case the washer fluid is spilled on hands or other parts of the body, please immediately wash with clean water.



Check the washer fluid level regularly. When the level of washer fluid is low, please top up the washer fluid as instructed. Please use the washer fluid recommended and certified by the manufacturer. Refer to 'Recommended Fluids and Capacities' in "Technical Data" chapter.


Note: DO NOT use an anti-freeze or vinegar/water solution in the washer reservoir - anti-freeze will

damage paintwork while vinegar will damage the washer pump.

#### **IMPORTANT**

- Use the washer fluid recommended and certified by the manufacturer. Misuse of washer fluid in winter may cause damage to the washer motor due to freezing.
- Using the washer switch when there is no washer fluid may cause damage to the washer motor.
- Operating the wipers when the windscreen is dry and there is no washer fluid may cause damage to the windscreen and wipers. Please spray the washer fluid and start the wipers when there is adequate washer fluid.

#### **Washer Nozzles**

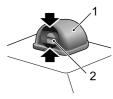

Operate the washers periodically to check that the nozzles are clear and properly directed.

The windscreen washer nozzles are configured during the production. To adjust the windscreen washer nozzle, you can insert a small flat-bladed screwdriver in the upper and bottom gaps (as indicated by the arrow) between the housing (1) and the nozzle (2) and turn downward or upward slightly to adjust to the appropriate spray angle.

If the nozzle is obstructed, insert a needle or thin metal wire into the hole to remove the obstruction.

# Wipers

#### Wiper Blades

#### **IMPORTANT**

- Grease, silicon and petroleum products impair the blade's wiping capability. Clean the wiper blades in warm soap
  water, and check their status periodically.
- Clean the windscreen frequently. DO NOT use wipers to remove stubborn or ingrained dirt, it will reduce their effect and their life span.
- If signs of hardness or cracking in the rubber are found, or if the wipers leave streaks or unwiped areas on the screen, then the wiper blades should be replaced.
- Clean the windscreen regularly with an approved glass cleaner and ensure the windscreen is thoroughly cleaned before fitting replacement wiper blades.
- · Only fit replacement wiper blades that are identical to the original specification.
- Clean ice and snow from the wipers and ensure they are not frozen or otherwise sticking to the windscreen before
  attempting to operate them.


# Replacing Front Windscreen Wiper Blades



- 1 With the bonnet in closed state, and within 20 seconds of setting the START/STOP Switch to the OFF position, operate the wiper stalk switch by pressing down and release, the wipers will enter the 'service position' and stop on the windscreen.
- 2 Lift the wiper arm away from the windscreen.

- 3 Press the button on the wiper arm (as illustrated), and pull the upper end of the wiper blade outward to disengage from the wiper arm.
- 4 Unhook the blade from the wiper arm and discard.
- 5 Locate the new wiper into the slot of the wiper arm.
- 6 Push the wiper blade towards the arm until the wiper blade is engaged.
- 7 Check whether the wiper blade is fitted correctly to the arm before positioning on the windscreen.
- 8 Operate the wiper stalk switch by pressing down again and release, or turn on the START/STOP Switch, the wiper will exit the service mode and automatically return to its original position

### Replacing Rear Window Wiper Blades

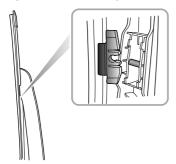

- I Lift the wiper arm away from the windscreen.
- 2 Pull the wiper blade connector outward with moderate force to separate it from the wiper arm and discard the wiper blade.
- 3 Position the fitting of the new wiper blade into the slot of the wiper arm. Ensure the wiper blade is properly secured on the wiper arm.
- 4 Place the wiper assembly back on the windscreen.

# **Tyres**

#### Overview

- New tyres may not have the same adhesion properties of the old tyres, please take extra care for 500km.
- · Avoid excessive cornering at speed.
- Regularly check tyres for damage and foreign objects

   remove any foreign objects from the tread.
- · Avoid tyre contact with oils, grease and fuel.
- Ensure valve caps are always fitted.
- If the tyre is to be removed always mark the tyre/wheel orientation to ensure correct refitment

Tyre or rim damage can happen unnoticed. If abnormal vibrations or handling is experienced, or you think tyre or rim damage has occurred please contact an MG Autorised Repairer.

# **Directional Tyres**

Directional tyres are marked with 'direction of rotation' (DOR). To maintain handling characteristics, tyre performance, low road noise and extend tyre life, tyres must always be fitted with indication arrow showing the correct 'DOR'

#### Tyre Life

Correct tyre pressures and moderate driving style can extend tyre life. It is recommended to note the followings in service:

- If the vehicle is to be stored for a lengthy time, please move your vehicle at least once in two weeks to 'rotate the tyres'.
- Tyre pressures should be checked monthly when the tyres are cold.
- · Avoid cornering at excessive speeds.
- · Regularly check tyres for abnormal wear patterns.

The following factors affect the tyre life:

#### Tyre Pressures

Incorrect tyre pressures can result in poor driving characteristics and a shortened tyre life. Tyre pressures should be checked at least once a month, and once prior to each long-distance journey.

#### **Driving Style**

Excessively harsh acceleration and braking whilst cornering will reduce tyre life.

#### Wheel Balance

The balance of wheels and tyres are well tested before a new vehicle comes out of the factory. But the wheels may be out of balance due to many factors. If wheels are out of balance, shaking or vibration of the steering mechanism may occur and the tyres may start to wear excessively. It is important to rectify this quickly. Each wheel should be rebalanced after installing a new tyre or having a tyre repair.

#### Wheel Alignment

Incorrect wheel alignment can cause excessive tyre wear and affect vehicle safety. If the tyres show signs of abnormal wear, check the wheel alignment and seek advice from an MG Authorised repairer.

#### Tyre Check



DEFECTIVE TYRES ARE DANGEROUS! DO NOT drive if any tyre is damaged, is excessively worn, or is inflated to an incorrect pressure.



It is recommended to install the tyres consistent with the original specifications. DO NOT replace the tyres with tyres of any other type. Alternative tyres, of a different specification, may adversely affect the vehicle's driving characteristics and safety. In order to make your driving and safety better guarantee, it is suggested that you consult an MG Authorised Repairer.

Always drive with consideration for the condition of the tyres, and regularly inspect the tread and side walls for any sign of distortion (bulges), cuts or wear.

Note: If possible, protect tyres from contamination by oil, grease and fuel.

#### Tyre Pressures



Before a long distance journey, the tyre pressure must be checked.

Check the pressures (including the spare wheel) at least every month, when the tyres are cold.

If it is necessary to check the tyres when they are warm, you should expect the pressures to have increased by  $30 \sim 40 \text{kPa}/0.3 \sim 0.4 \text{bar}/4.3 \sim 5.8 \text{psi}$ . In this circumstance, NEVER let air out of the tyres in order to match the recommended pressures (cold).

#### **Valves**

Keep the valve caps screwed down firmly - they prevent dirt from entering the valve. Check the valve for leaks (listen for a tell-tale hissing) when you check the tyre pressure.


#### **Punctured Tyres**

Your vehicle is fitted with tyres which may not leak if penetrated by a sharp object, provided the object remains in the tyre. If you are aware of this occurring, reduce speed immediately and drive with caution until the spare wheel can be fitted, or repairs undertaken.

Note: If the wall of the tyre is damaged or distorted, replace the tyre immediately, do not attempt a repair.

## Tyre Wear Indicators

Tyres fitted as original equipment have wear indicators moulded into the tread pattern at several points around the circumference. When the tread has worn down to 1.6mm, the indicators will come to the surface of the tread pattern, producing the effect of a continuous band of rubber across the width of the tyre.

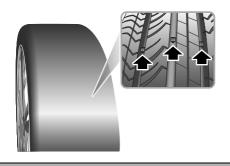


#### **IMPORTANT**

The tyre must be replaced when it is worn to reveal the wear indicator, or there might be the risk of accident.

#### Wheel Fitment Rotation

It is not recommended that you swap wheels from side to side or front to rear in order to equalise tyre wear. Your vehicle is fitted with Tyre Pressure Monitoring System which means that each wheel is programmed to the relative position.

If you do wish to swap wheels and tyres around on the vehicle please consult an MG Authorised Repairer as extra coding will be required.

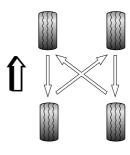

Note: Directional tyres (identified from the arrow on the tyre side) CANNOT be swapped from side to side.

Note: TPMS coding is required after changing wheel positions, please consult a local MG Authorised Repairer for details.

#### Tyre/Snow Chains

Unsuitable tyre/snow chains may damage the tyres, wheels, suspension, brakes or bodywork of your car.

Please pay attention to the following requirements in the usage:

- The tyre/snow chains can only be fitted on the drive wheels:
- The thickness of tyre/snow chains shall not exceed 15 mm:
- Please always observe the installation and tension instructions for the tyre/snow chains, as well as the speed limitations of different roads;
- Do not drive faster than 50 km/h:
- To avoid the tyre damage and excessive wear of the tyre/snow chains, the tyre/snow chains must be removed while driving on the road without snow.

#### **Snow Chain Applications**

Snow chains cannot be fitted to all wheel/tyre sizes.

Please note: On this vehicle, snow chains can only be fitted to:

Wheel rim size: 6.5J×17

Tyre size: 215/60 R17

Note: If you drive on snowy and icy roads, it is recommended to use winter tyres. Consult an MG

Authorised Repairer for details.

## Cleaning and Vehicle Care



Observe all safety precautions on cleaning products, they can be harmful; do not drink fluids, keep them out of reach of children and avoid contact with the eyes.

#### **External Care**

#### Washing Your Car



Some high pressure cleaning systems will penetrate door, window and sunroof seals, and damage lock mechanisms. DO NOT aim water jets directly at components that might be easily damaged.



Water or moisture on parts of the braking system will reduce braking performance, this may increase the risk of accidents. Ensure the vehicle power system is OFF when washing your car, there may be risk of injury or accident.



DO NOT use a high pressure hose to clean the engine compartment – damage to the car's electronic systems may occur.

In order to preserve the paint finish on your car, please observe the following care points:

- DO NOT use hot water to wash the car.
- · DO NOT use detergents or washing up liquid.
- · In hot weather, DO NOT wash the car in direct sunlight.
- When using a hose, DO NOT aim the water directly at a window, door or sunroof seals, or through wheel apertures onto the brake components.

If the car is particularly dirty, use a hose to flush grime and grit from the bodywork, prior to washing. Then, wash the car using cold or lukewarm water containing a good quality wash and wax shampoo. Always use plenty of water to ensure that grit is flushed from the surface and not ground into the paintwork. After washing, rinse the bodywork with clean water and dry off with a chamois leather.

Cleaning the underside

Note: DO NOT use a high pressure hose to clean the front compartment – damage to the car's electronic systems may occur.

From time to time, but particularly during winter months when salt has been used on the roads, use a hose to wash the underside of the car. Flush away accumulations of mud and thoroughly clean those areas where debris can easily collect (wheel arches and panel seams, for example).

#### **IMPORTANT**

- · Avoid cleaning the vehicle in direct sunlight.
- When cleaning the vehicle in winter avoid spraying water directly onto door locks and panel gaps due to risk of icing.
- Do not use rough sponges or cloth to clean the car, this will damage the paintwork finish.
- When cleaning the headlamps do not use a dry cloth or sponge, use only warm soapy water.

#### Cleaning with High Pressure Cleaner

Always read the manufacturers operating instructions.

When using high pressure washers, always ensure there is adequate distance between the spray nozzle and any soft materials, decals or rubber seals.

Note: DO NOT direct the pressure washer nozzle directly toward the high voltage charging points or high voltage battery connections on the underside of the vehicle.

#### **IMPORTANT**

- Please pay attention to the operating instructions of high pressure cleaner.
- Soft parts on the vehicle should be kept in a large enough distance from the high pressure cleaner.

## **Body Protection**

After washing, examine the paintwork for damage. If the damage has revealed bare metal, use a colored primer first, then apply the correct colour base coat and finish off with a lacquer pencil, if appropriate. Carry out this treatment after washing but before polishing or waxing. More extensive damage to paint or bodywork must be repaired in accordance with the manufacturer's recommendations.

Failure to do this will invalidate the Anti-Corrosion Warranty. If in doubt, ask your MG Authorised Repairer.

#### Removing tar spots

Use white spirit to remove tar spots and stubborn grease stains from the paintwork. Then wash the area immediately with soapy water to remove all traces of the spirit.

#### Polishing the Paintwork



DO NOT use car polish containing coarse abrasives – these will remove the paint film and damage the gloss finish.

Occasionally treat the paint surface with an approved polish containing the following properties:

- Very mild abrasives to remove surface contamination without removing or damaging the paint.
- Filling compounds that will fill scratches and reduce their visibility.
- Wax to provide a protective coating between the paint and the elements.

Note: If possible, avoid applying polish or wax products to window glass and rubber seals.

#### Wiper Blades

Wash in warm soapy water. DO NOT use spirit or petrol based cleaners.

#### Windows and Mirrors

Regularly clean all windows, inside and out, using an approved glass cleaner.

**Windscreen:** In particular, clean the outside of the screen with glass cleaner after washing the car with wash and wax products, and before fitting new wiper blades.

**Rear screen:** Clean the inside with a soft cloth, using a side to side motion to avoid damaging the heating elements. DO NOT scrape or use abrasive cleaners – this will damage the heating elements.

**Rearview mirrors:** Wash with soapy water. DO NOT use abrasive cleaning compounds or metal scraper.

#### **Plastic Parts**

Any plastic components should be cleaned using conventional cleaning methods and not be treated with

abrasive materials. Stubborn stains or marks can be removed using proprietary plastic cleaning materials.

#### **Paint Damage**

Any paint damage or stonechips should be treated with suitable paint/lacquer materials immediately to avoid invalidating the Anti Corrosion Warranty.

#### Weather Strips

Any weather strips or rubber aperture seals should be treated with suitable materials (silica gel) if they are cleaned using strong detergents, this should avoid any sticking and maintain the service life of the seal.

#### Wheels



When cleaning the wheels any materials or water that contact the brake disc directly may effect braking efficiency.

In order to ensure the wheels are kept in optimum condition they should be cleaned regularly.

Only use a recommended non-acidic propriety wheel cleaner. Always read the instructions on the product.

#### Cleaning the Interior

#### Plastic materials

Clean plastic-faced materials with diluted upholstery cleaner, then wipe with a damp cloth.

Note: DO NOT polish dashboard components – these should remain non-reflective.

#### Carpet and fabrics

Clean with diluted upholstery cleaner - test a concealed area first.

#### Leather

Clean leather trim with warm water and a non-detergent soap. Dry and polish the leather with a dry, clean, lint-free cloth.

Note: DO NOT use petrol, detergents, furniture creams or polishes as cleaning agents.

#### Instrument Pack, Audio and Navigation Display

Clean with a dry cloth only. DO NOT use cleaning fluids or sprays.

## Airbag Module Covers



DO NOT allow these areas to be flooded with liquid and DO NOT use petrol, detergent, furniture cream or polishes.

To protect damage to the airbag SRS, the following areas should be cleaned sparingly with a damp cloth and upholstery cleaner ONLY:

- · Steering wheel centre pad.
- · Area of dashboard containing the passenger airbag.
- Area of roof lining which encloses the side head impact protection airbags.

#### **Seat Belts**





DO NOT use bleaches, dyes or cleaning solvents on seat belts.

Extend the belts, then use warm water and a non-detergent soap to clean. Allow the belts to dry naturally; DO NOT retract them or use the car until they are completely dry.

- 320 Technical Data Dimensions
- 322 Weights
- 323 Major Parameters of Engine
- 324 Parameters of Drive Motor
- 325 Recommended Fluids and Capacities
- 326 Four-Wheel Alignment Parameter Table (Unladen)
- 326 Wheels and Tyres
- 326 Tyre Pressure (Cold)

## **Technical Data Dimensions**

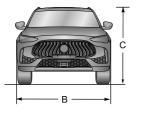

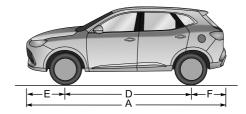

Item, Units	Parameter
Overall length A, mm	4610
Overall width B, mm	1876
Overall height C (unladen), mm	1664 ( with body ) 1685 ( with shark fin )
Wheelbase D, mm	2720
Front Overhang E, mm	988

320 \_

Item, Units	Parameter
Rear Overhang F, mm	902
Front wheel track, mm	1574
Rear wheel track, mm	1593
Minimum ground clearance (laden), mm	145
Minimum turning circle diameter, m	11.9
Fuel tank capacity, I	37

Note: Vehicle length not including the license plate.

Note: Rearview mirrors and the deformed portion of tyre wall directly above the touchdown point are not included in the total width.

# Weights

Item, Units	Parameter
Person in cab, person	5
Unladen vehicle weight (kerb), kg	1775
Gross vehicle weight, kg	2196
Unladen front axle weight, kg	985
Unladen rear axle weight, kg	790
Laden front axle weight, kg	1095
Laden rear axle weight, kg	1101

# **Major Parameters of Engine**

Vehicle	Parameter
Venicie	1.5T
Bore × Stroke, mm × mm	74×86.6
Capacity, Litres	1.490
Compression ratio	11.5:1
Fuel type, RON	Unleaded 95 RON to EN228 SPEC

## **Parameters of Drive Motor**

ltem	Parameter
Rated Power/Peak Power, kW	35/90
Rated Speed/Maximum Speed, rpm	4500/12000
Rated Torque/Peak Torque, Nm	75/230

# **Recommended Fluids and Capacities**

Name	Grade	Capacity
Engine oil (after-sales replacement), L	C5&SP 0W-20	4
Engine coolant, L		5
Electric drive transmission coolant, L	Glycol (OAT)	2.4
High-voltage battery pack coolant, L		4.4
Electric drive transmission oil, L	Castrol BOT 351 LV	4.4
Brake fluid, L	DOT 4	0.8
Windshield detergent, L	ZY-VIII	2.5
Air conditioning refrigerant, g	R-134a	750±20

# Four-Wheel Alignment Parameter Table (Unladen)

	ltem	Parameter
	Camber angle	-14 <b>¢</b> -45¢
Front	Castor angle	4°57¢±45¢
	Toe-in angle (total toe-in) 8姓12¢	
	King pin inclination	12°45¢±45¢
	Camber angle	-60 <b>⊈</b> 45¢
Rear	Rear Toe-in angle (total toe-in) 12¢±12¢	

# Wheels and Tyres

Wheel size	7.5J×18	6.5J×17
Tyre size	235/50 R18	215/60 R17

## **Spare Tyre**

Wheel rim size	4B×17
Spare tyre size	T125/80 R17

# Tyre Pressure (Cold)

Wheels	Unladen
Front	230kPa/2.3bar/34psi
Rear	230kPa/2.3bar/34psi
Spare Tyre	420kPa/4.2bar/60psi